


Trainings ▾

General Information

⚠ WARNING ⚠

Fuel can be returned at highly elevated temperatures. Wear safety glasses and protective clothing and gloves when performing this test. Avoid contact with returned fuel.

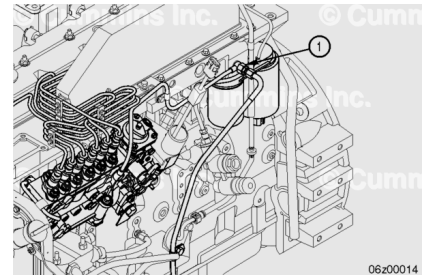

Use this procedure if equipped with a fuel pressure relief valve.


The fuel pressure relief valve is specially used in the generator application. The fuel pressure relief valve is a cartridge located at the fuel filter head.

When the fuel pressure is more than 550 kPa [79.8 psi], fuel flows out from the fuel pressure relief valve. When the fuel pressure is less than 550 kPa [79.8 psi], the fuel pressure relief valve closes.

Initial Check

⚠ CAUTION ⚠

Do not overtighten the component in an attempt to stop a leak. Overtightening can result in increased leakage. Always tighten the fuel pressure relief valve again to specification.

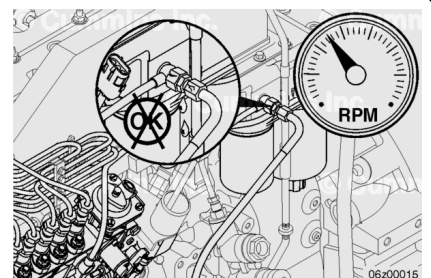

Check the pressure relief valve for leaks or other damage.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

⚠ WARNING ⚠

Do not bleed the fuel system of a hot engine; this can result in fuel spilling onto a hot exhaust manifold, which can cause a fire.


⚠ CAUTION ⚠

Clean all fittings before disassembly. Dirt or contaminants can damage the fuel system.

- Disconnect the batteries. See equipment manufacturer service information.
- Steam clean the area around the fuel pressure relief valve.
- Dry with compressed air.
- Remove the fuel drain line, if installed. Refer to Procedure 006-013 in Section 6. (</qs3/pubsys2/xml/en/procedures/41/41-006-013.html>)

Remove

Remove the fuel pressure relief valve.

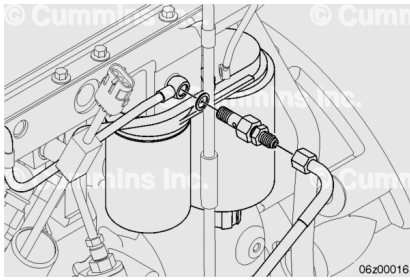


Install

Inspect and clean the sealing surface between the fuel rail and the fuel pressure relief valve.

Install the fuel pressure relief valve and tighten.

Note : Overtightening the fuel pressure relief valve can result in a leak.

Torque Value: 24 n·m [18 ft·lb]

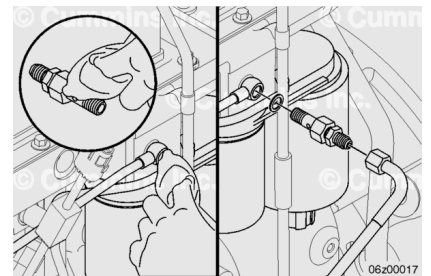

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the fuel pressure relief drain line. Refer to Procedure 006-013 in Section 6. (</qs3/pubsys2/xml/en/procedures/41/41-006-013.html>)
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for leaks.

