


Trainings ▾

Drain

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

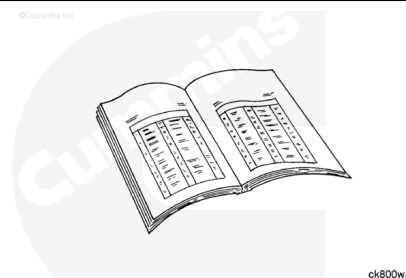


PROTECT THE ENVIRONMENT: Handling and disposal of used lubricating engine oil is subject to federal, state, and local laws and regulations. Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for receipt of used lubricating oil. If in doubt, contact your state and local environmental authorities or the Environmental Protection Agency for guidance as to proper handling and disposal of used lubricating engine oil.

Note : If the engine is in service, under no circumstances can the lubricating oil drain interval extend beyond the intervals given in the charts.

Change the lubricating oil and filters to remove the contaminants suspended in the lubricating oil.


Note : Drain the lubricating oil **only** when it is hot and the contaminants are in suspension.

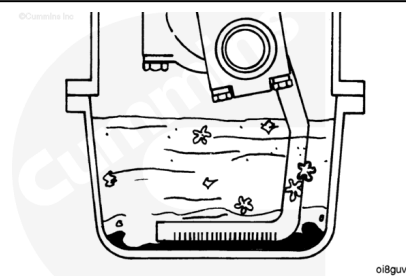

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

Use a container that can hold at least 25 liters [26 qt] of lubricating oil.

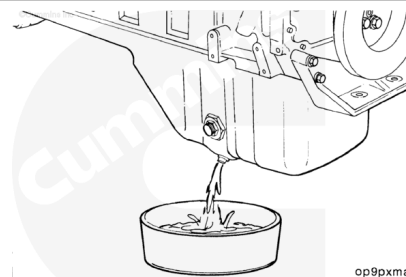


Operate the engine until the water temperature reaches 60°C [140°F]. Shut off the engine . Remove the lubricating oil drain plug.

Note : Some applications such as marine, industrial, or generator drives have limited accessibility to oil drains. Alternate methods are available for removing oil such as pump out systems. Check with local dealer or distributor for information.

Remove

Clean the area around the lubricating oil filter head. Remove the filter. Clean the gasket surface of the filter head.

The o-ring can stick on the filter head. Make sure it is removed.

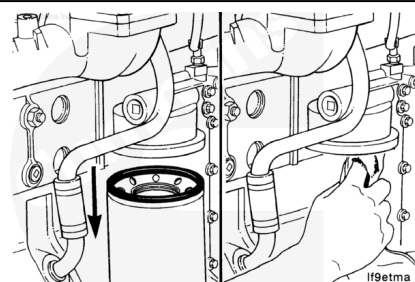


Install

Fill the filters with clean lubricating oil before installation.

Note : The LF3000 lubricating oil filter has two gaskets. Lubricate both gaskets.


Apply a light film of oil to the gasket sealing surface before installing the filters.

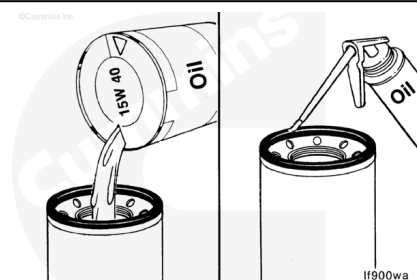

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the lubricating oil filter element seal.

⚠ CAUTION ⚠

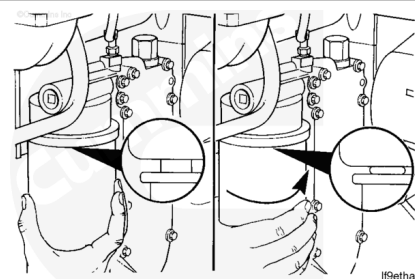


**If the filter canister is damaged in any way, do not use it.
Dents or scrapes can lead to a rupture or premature failure of
the filter.**

Install the lubricating oil filter as specified by the filter manufacturer.

Check and clean the lubricating oil drain plug threads and sealing surface.

Install the lubricating oil pan drain plug.

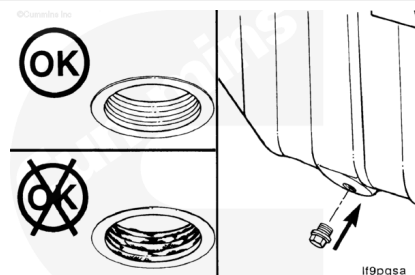

For steel stamp oil pans	80 n.m	[59 ft-lb]
For aluminum oil pans	60 n.m	[44 ft-lb]

Fill

Use a high-quality 15W-40 multiviscosity lubricating oil, such as Cummins Premium Blue®, or equivalent, in Cummins engines. Choose the correct oil for your operating climate as outlined in Procedure 018-003

(</qs3/pubsys2/xml/en/procedures/41/41-018-003.html>)

(Lubricating Oil Recommendations and Specifications) in Section V.




Fill the engine with clean lubricating oil to the proper level.


Refer to Procedure 007-043

(</qs3/pubsys2/xml/en/procedures/99/99-007-043-om.html>)

(Lubricating Oil Level) in Section 3.

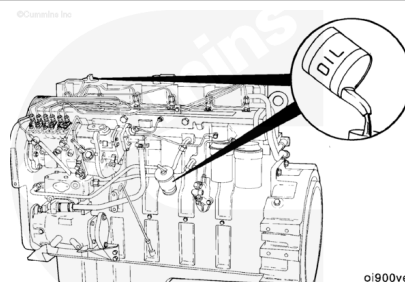

Operate the engine at low idle to inspect for leaks at the lubricating oil filter and the drain plug.

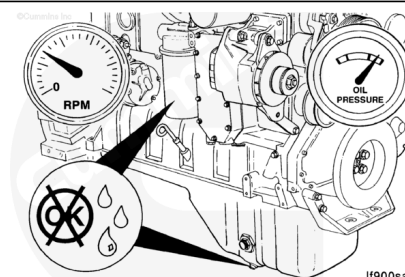

Stop the engine. Wait approximately 15 minutes to let the lubricating oil drain from the upper parts of the engine. Check the level again.

Add oil as necessary to bring the oil level to the H (high) mark on the dipstick.

