

Trainings ▾


Preparatory Steps

Clean debris from oil thermostat.

©Cummins Inc.


Remove

Remove the lubricating oil thermostat.

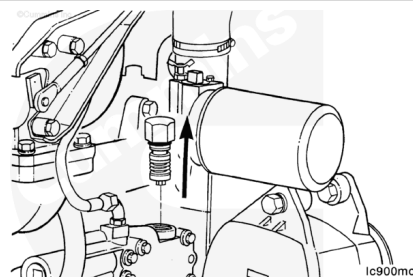

Clean


Clean and inspect the lubricating oil thermostat bore before assembly.

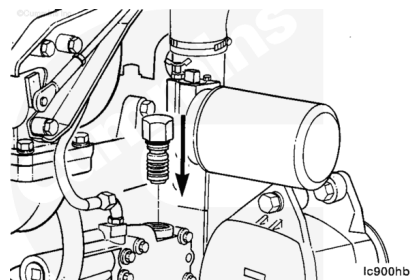

Install

Install and tighten the oil cooler bypass valve.

Torque Value: 50 n•m [37 ft-lb]

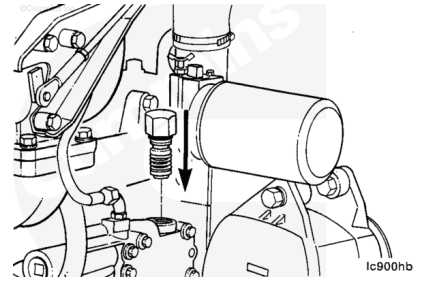

Last Modified: 08-Nov-2004
