


Trainings ▾

Remove

WARNING


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

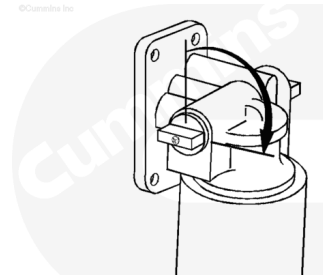

Note : Some engine models do not require coolant filters.


Turn the shutoff valve to the OFF position by rotating the knob from vertical to horizontal in the direction shown.

Remove and discard the coolant filter.

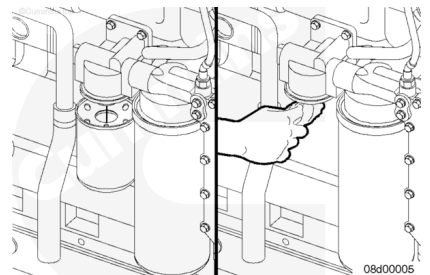

Clean


Clean the gasket surface.

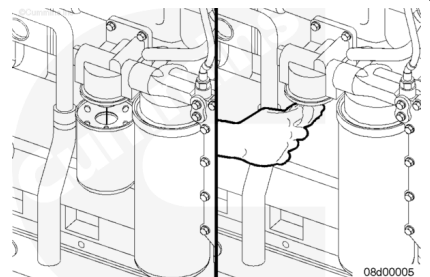

Install

⚠ CAUTION ⚠

Do not allow oil to get into the filter. Oil will damage the DCA.

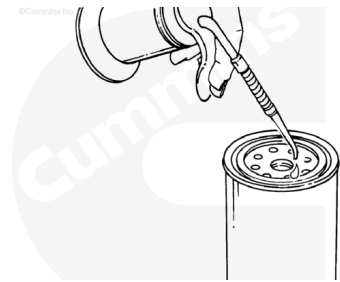

wf850wa

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the filter head.


Apply a thin film of lubricating oil to the gasket sealing surface before installing the new coolant filter.

Install the coolant filter on the filter head. Tighten the filter until the gasket contacts the filter head surface.

Tighten the coolant filter an additional 1/2 to 3/4 of a turn, or as specified by the filter manufacturer.

⚠ CAUTION ⚠


The valve must be in the ON position to prevent engine damage.

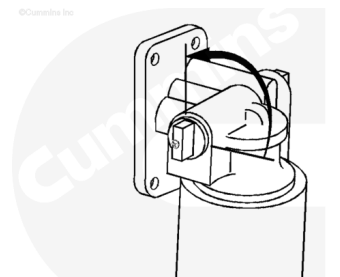

08d00066

Turn the shutoff to the ON position by rotating the knob from horizontal to vertical in the direction shown.


Install the coolant system pressure cap.

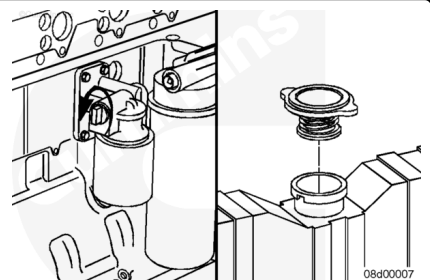

08d00007

Operate the engine. Check for coolant leaks.

After the air has been purged from the system, check the coolant level again.

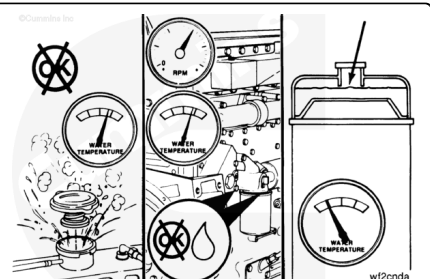

wf20nda

Last Modified: 29-Jul-2015