


Trainings ▾

Remove

Remove the retaining capscrew (1) from the thermostat housing (2) and remove the shutoff valve (3).


Remove and discard the o-ring (4).

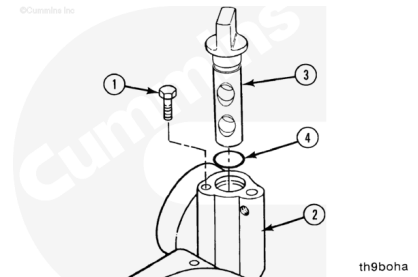

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.

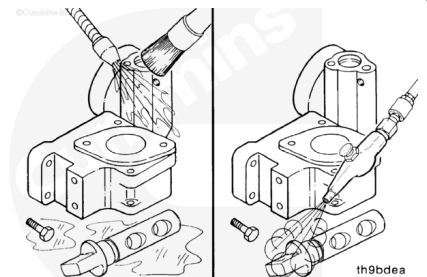

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Use solvent to clean the parts.


Dry with compressed air.

Inspect for Reuse

Inspect the water passages in the shutoff valve.


Inspect the shaft for corrosion or pitting. Use 240-grit aluminum oxide paper to remove the corrosion.

If the parts are cracked or damaged, the filter head assembly **must** be replaced.

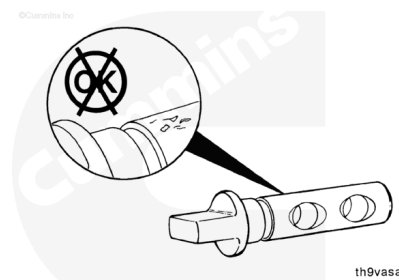


Install

Install a new o-ring in the groove of the shaft.

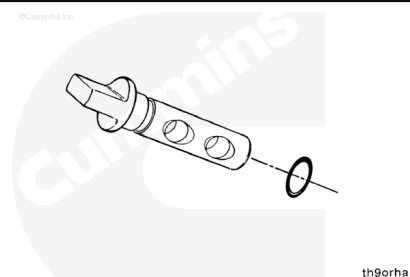

Use clean engine oil to lubricate the shaft and o-ring.

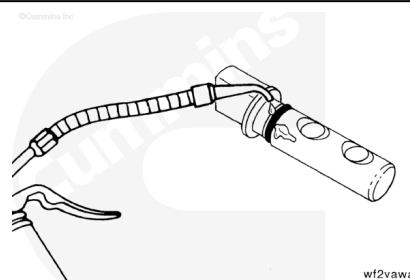

Install the shutoff valve shaft (3) in the thermostat housing (2).

Install the retaining ring capscrew (1) in the thermostat housing.

Tighten the retaining ring capscrews.

Torque Value: 7 n•m [60 in-lb]

