


Trainings ▾


Remove

Remove the thermostat housing and and belt tensioner assembly.

Refer to Procedure 008-013
(</qs3/pubsys2/xml/en/procedures/100/100-008-013.html>).

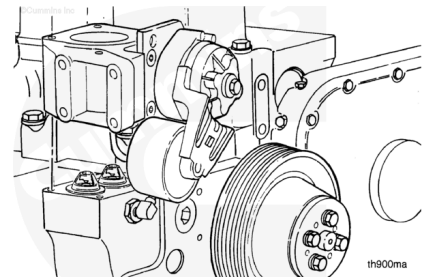


Remove the thermostats.

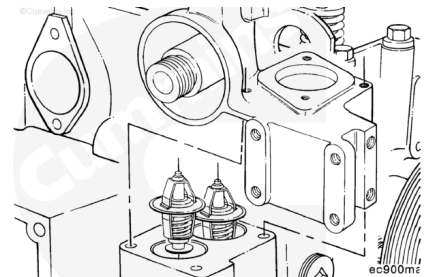


Clean

Use a gasket scraper to remove the gasket material from the mating surfaces of the housing.

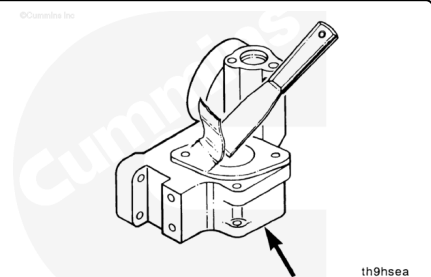

⚠ WARNING ⚠

When using a steam cleaner, wear protective clothing and safety glasses or a face shield. Hot steam will cause serious personal injury.

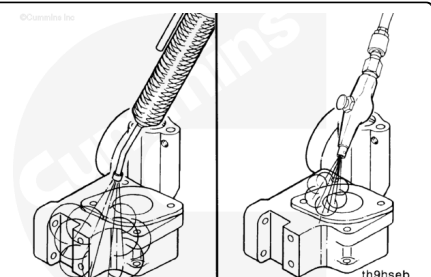

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Use solvent or steam to clean the parts.

Dry with compressed air.


Inspect for Reuse

Inspect the thermostat housing for cracks, corrosion, or damage. Replace the thermostat housing if damaged.

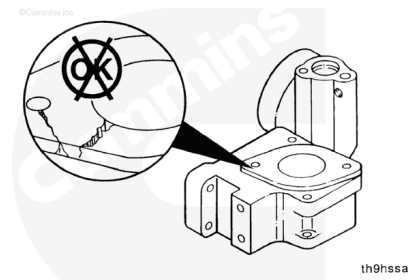

Install

Install the thermostats; refer to Procedure 008-013 (</qs3/pubsys2/xml/en/procedures/100/100-008-013.html>).

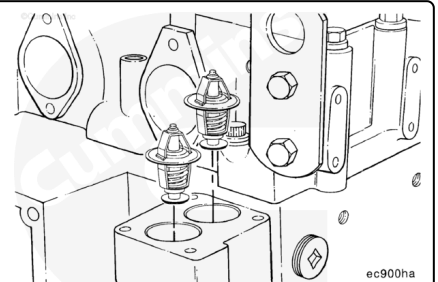

Install a new thermostat gasket and the thermostat housing. Install two capscrews. Do **not** tighten the capscrews until after the coolant outlet connection is installed.

