


Trainings ▾

Preparatory Steps


Remove the drive belt; refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>).

Service Tip: Loosen the capscrews before removing the belt, and tighten the capscrews to the proper torque specification after the belt is installed.

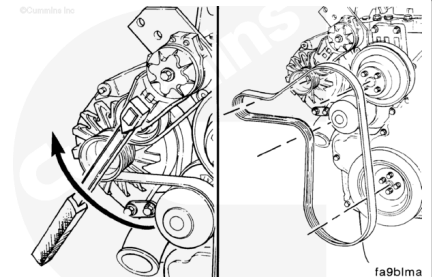

Remove

Remove the four capscrews, fan, and spacer.

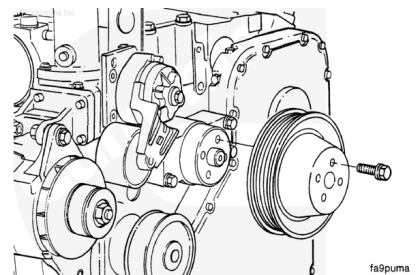


Install


Install the spacer, fan, and four mounting capscrews.

Tighten the mounting capscrews.

Torque Value: 43 n•m [32 ft•lb]

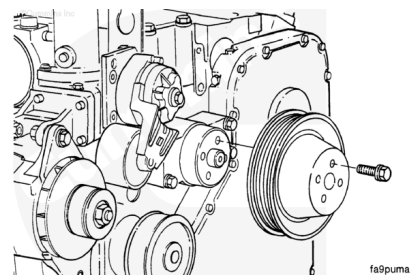

Install the drive belt; refer to Procedure 008-002
(/qs3/pubsys2/xml/en/procedures/100/100-008-002.html).

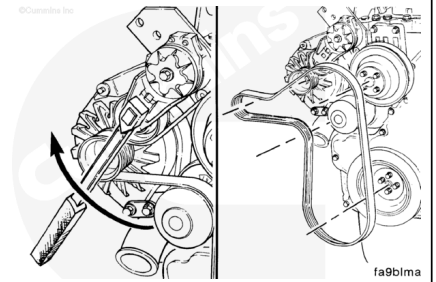

Last Modified: 07-Dec-2004
