

Trainings ▾

Preparatory Steps


- Remove the drive belt. Refer to Procedure 008-002 (Drive Belt, Cooling Fan) in Section 8.
(/qs3/pubsys2/xml/en/procedures/100/100-008-002.html)
- Remove the fan pulley. Refer to Procedure 008-030 (Fan Drive Idler Pulley Assembly) in Section 8.
(/qs3/pubsys2/xml/en/procedures/41/41-008-030.html)



Remove

Remove the four fan hub mounting capscrews.

Remove the fan hub.

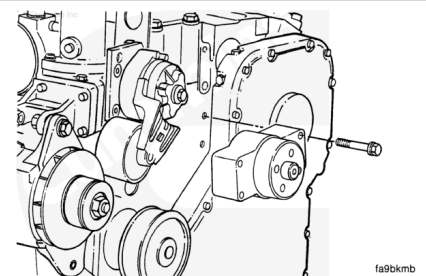


Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.


⚠ WARNING ⚠

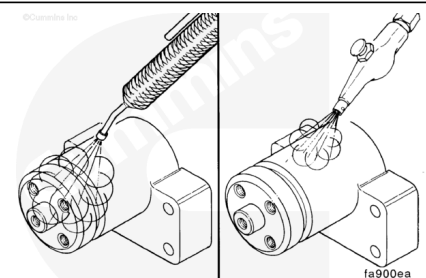


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Steam clean the exterior of the fan hub.
Dry with compressed air.


Inspect the fan hub for indications of oil seal leakage.
Inspect the fan hub for cracks or other damage.
Inspect the fan hub chamfer and fan pulley mating surface for damage.
Replace the fan hub if damage is found.

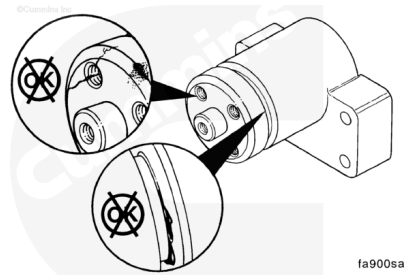

Turn the fan hub by hand to check for freedom of rotation.
The fan hub **must** spin freely without any wobble or excessive end clearance.

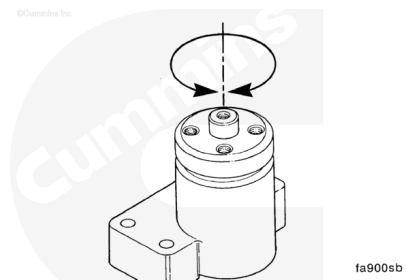

Inspect the fan hub bearing for wear.
The bearing **must** have a minimal amount of side-to-side or end-play movement.
Replace the fan hub if there is more than 0.15 mm [0.006 in] of end play in the fan hub.

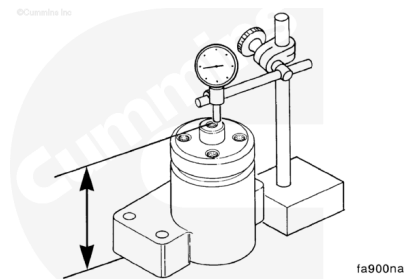

mm		in
0.15	MAX	0.006


Note : Some fan hub assemblies can be rebuilt with new bearings and related components. Check for part availability before disassembling the fan hub.

Install

Install the fan hub and four capscrews.

Tighten the capscrews.

Torque Value: 24 n•m [212 in-lb]

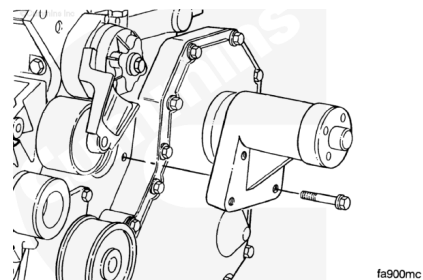

Finishing Steps

- Install the fan pulley. Refer to Procedure 008-030 (Fan Drive Idler Pulley Assembly) in Section 8.
(</qs3/pubsys2/xml/en/procedures/41/41-008-030.html>)
- Install the drive belt. Refer to Procedure 008-002 (Drive Belt, Cooling Fan) in Section 8.
(</qs3/pubsys2/xml/en/procedures/100/100-008-002.html>)
- Operate the engine and check for proper operation.

