


Trainings ▾

Preparatory Steps


Loosen the fan capscrews before removing the drive belt.

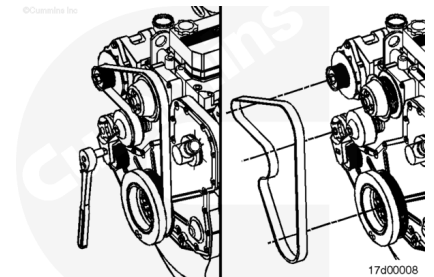

Remove

⚠ CAUTION ⚠


The belt tensioner is spring-loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can result in damage to the belt tensioner.

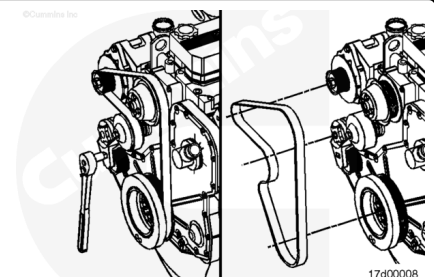

Lift the tensioner to relieve tension in the drive belt. Remove the belt.

Remove the fan capscrews, fan, and spacer.


Remove the fan pulley.

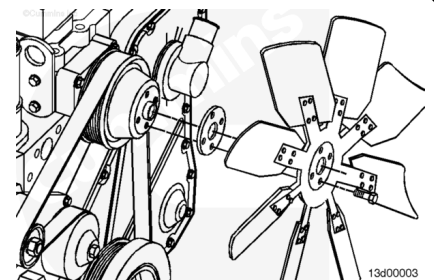

Inspect for Reuse

Inspect the fan pulley for cracks near bolt holes.


Check for cracks, loose rivets, and bent or loose fan blades.

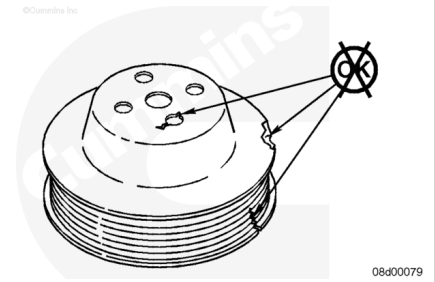

Install

Install the fan pulley.


Install the spacer, fan, and fan capscrews.

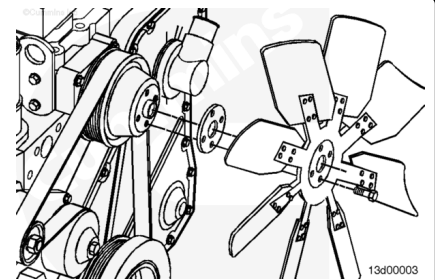

Finishing Steps

⚠ CAUTION ⚠

The belt tensioner is spring-loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can result in damage to the belt tensioner.

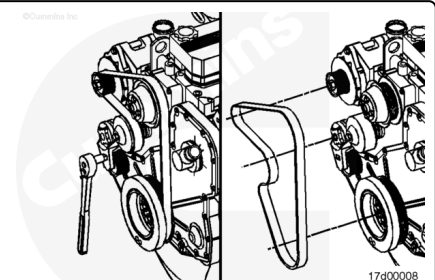

Install the drive belt.

Lift the tensioner to relieve tension in the drive belt. Tighten the fan capscrews.

Torque Value: 24 n•m [212 in-lb]

Service Tip:

If difficulty is experienced installing the drive belt or if the belt seems too short, position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.

