


Trainings ▾


Flush

Shut off the sea water inlet valve on the vessel hull, if so equipped.

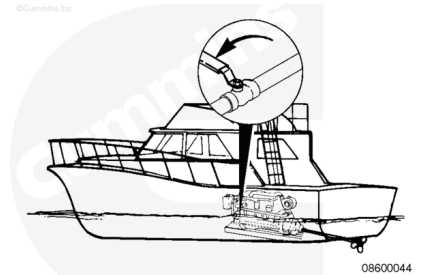


Remove the marine gear oil cooler drain plug and drain the sea water from the gear oil cooler.

Disconnect the sea water inlet and outlet connections.

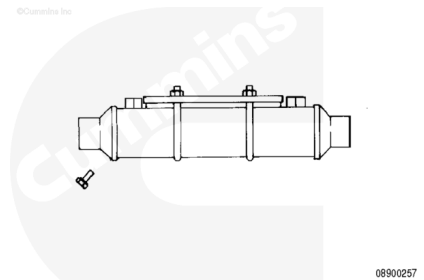


Use clean water to flush all the debris from the cooler.


Make sure the debris flushed from the cooler does **not** enter the water supply hoses.

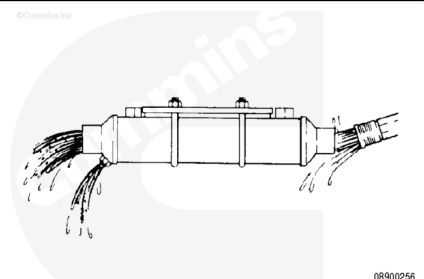

Install the drain plug and sea water hose connections.

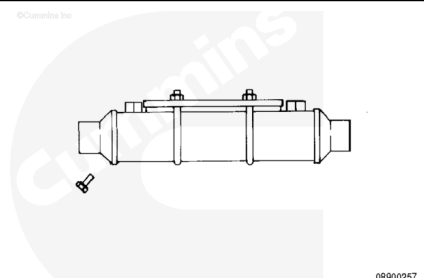

Open the sea water valve on the vessel hull, if closed.

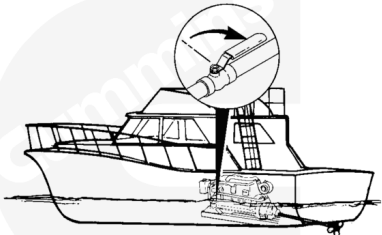

17600022

Last Modified: 08-Nov-2004
