

Trainings ▾


Preparatory Steps

- Disconnect the cold starting aid, if used. Refer to the OEM service manual.
- Remove the air crossover tube, if used. Refer to Procedure 010-019 (</qs3/pubsys2/xml/en/procedures/100/100-010-019.html>).
- Disconnect the charge air cooler hose, if used. Refer to Procedure 010-027 (</qs3/pubsys2/xml/en/procedures/100/100-010-027.html>).
- Remove the high-pressure fuel lines. Refer to Procedure 006-051 (</qs3/pubsys2/xml/en/procedures/41/41-006-051.html>).



Remove


Remove the intake manifold cover, gasket, and grid heater, if equipped.

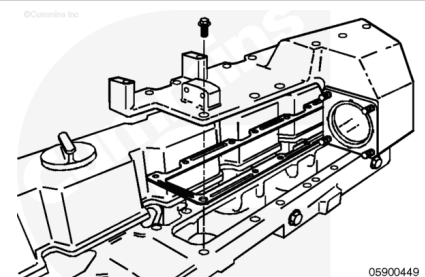

Clean and Inspect for Reuse


Clean the intake manifold sealing surfaces.

Note : Keep the gasket material and all other material out of the intake manifold.

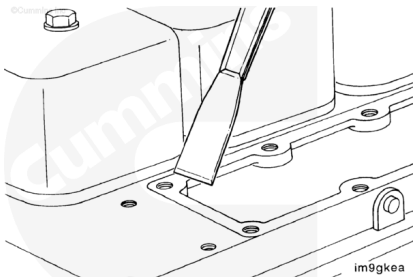

Inspect the air intake manifold for cracks and holes.

Replace the air intake manifold if necessary.

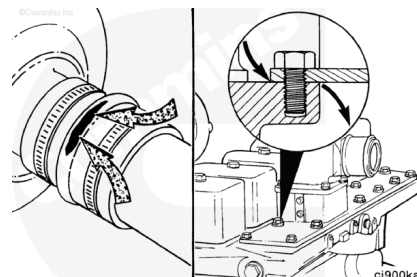


Install

Install a new gasket and intake manifold cover.


Install and tighten the intake manifold cap screws.

Torque Value: 24 n•m [18 ft-lb]

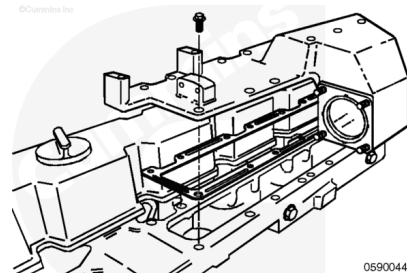

Finishing Steps

- Install the high-pressure fuel lines. Refer to Procedure 006-051 (</qs3/pubsys2/xml/en/procedures/41/41-006-051.html>).
- Connect all of the charge air cooler hoses, if used. Refer to Procedure 010-027 (</qs3/pubsys2/xml/en/procedures/100/100-010-027.html>).
- Install the air crossover tube. Refer to Procedure 010-019 (</qs3/pubsys2/xml/en/procedures/100/100-010-019.html>).

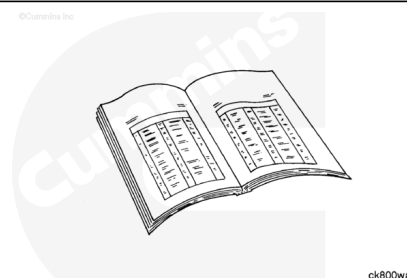

- Connect the cold starting aid, if used. Refer to the OEM service manual.

Last Modified: 07-Dec-2004
