

Trainings ▾


Preparatory Steps

Disconnect the batteries. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>)



Remove


Remove the air crossover tube, if equipped. Refer to Procedure 010-019 in Section 10 (</qs3/pubsys2/xml/en/procedures/100/100-010-019.html>).

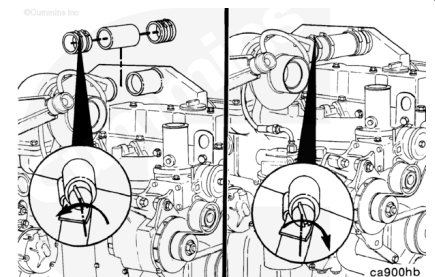


Disconnect the charge-air cooler hoses, if equipped. Refer to Procedure 010-027 in Section 10.

(</qs3/pubsys2/xml/en/procedures/100/100-010-027-tr.html>)

Disconnect the air intake and exhaust piping. Refer to the OEM service manual.

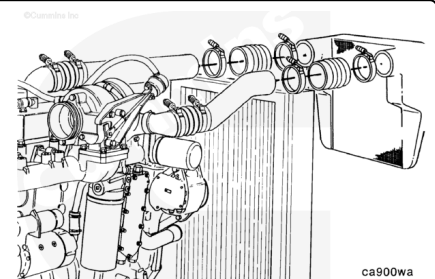


Remove the turbocharger, if equipped. Refer to Procedure 010-033 (</qs3/pubsys2/xml/en/procedures/41/41-010-033-tr.html>) in Section 10.

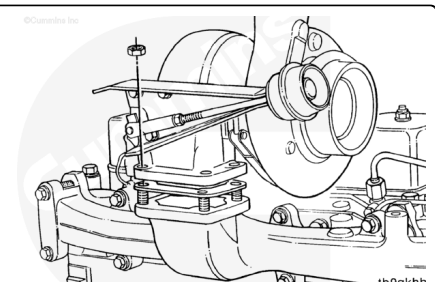

Inspect for Reuse

Inspect the exhaust manifold for cracks, burnout, or damaged threads in the bosses.

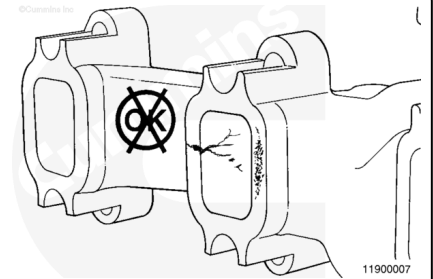


Install

Assemble the exhaust manifold capscrews, lock plates, and new gaskets onto the exhaust manifold.

Apply a thin coat of anti-seize compound, Part Number 3824879, to the capscrew threads.

Note : The exhaust manifold gaskets are nondirectional.

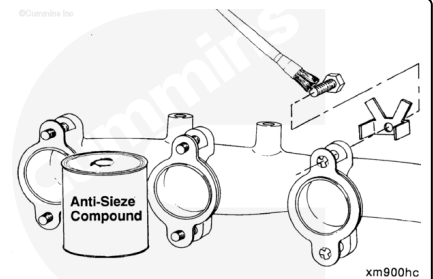


Install the exhaust manifold, new gaskets, and lock plates.

Torque Value: 43 n•m [32 ft-lb]

Follow the tightening sequence shown in the illustration.


Apply anti-seize compound to the exhaust manifold bolts upon assembly.

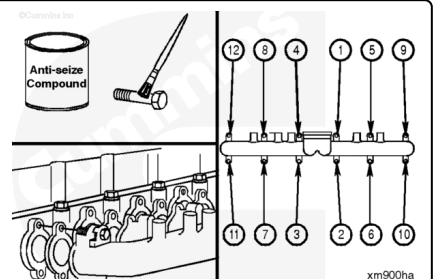


Three-Piece Manifold

If required, the end sections can be oiled, allowing the center section to slide.

Note : The manifolds are oxide-coated and can leak slightly on start-up. It will seal within the first few hours of use.

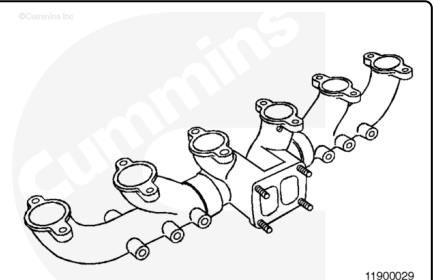


Install the turbocharger, if equipped. Refer to Procedure 010-033 (/qs3/pubsys2/xml/en/procedures/41/41-010-033-tr.html) in Section 10.

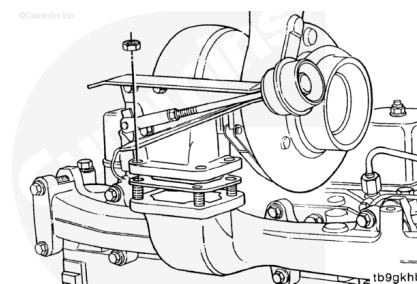

Connect the charge-air cooler hoses, if equipped. Refer to Procedure 010-027 in Section 10.


(/qs3/pubsys2/xml/en/procedures/100/100-010-027-tr.html)

Connect the air intake and exhaust piping. Refer to the OEM service manual.

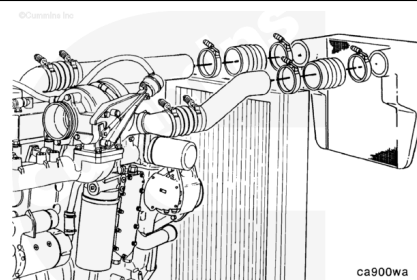

Install the air crossover tube, if equipped. Refer to Procedure 010-019 in Section 10

(/qs3/pubsys2/xml/en/procedures/100/100-010-019.html).

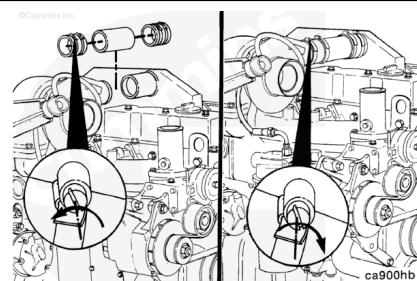

Finishing Steps

Connect the batteries. Refer to Procedure 013-009 in Section 13. (/qs3/pubsys2/xml/en/procedures/99/99-013-009.html)

Operate the engine and inspect for leaks.



