

Trainings ▾

Preparatory Steps

Remove the air crossover tube.


Disconnect the air intake and exhaust piping.

Remove the turbocharger, if used.

©Cummins Inc.

Remove


Remove the exhaust manifold and gaskets.

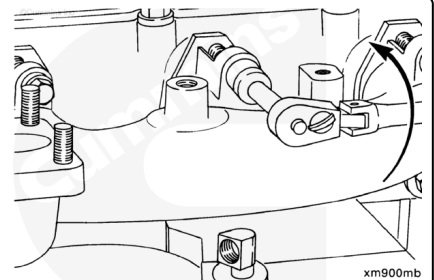

xm900mb

Inspect for Reuse

Inspect the exhaust manifold for cracks, burnout, or damaged threads in the bosses.

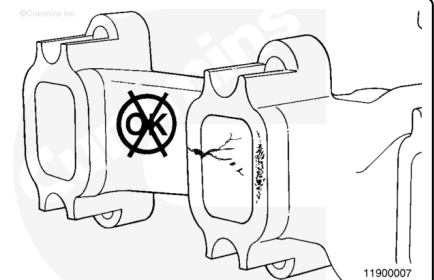

11900007

Install

Last Modified: 07-Dec-2004
