


Trainings ▾

Measure


Shut off the engine.

Open the draincock on the wet tank to release compressed air from the system.

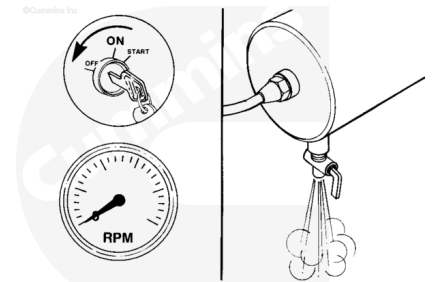

⚠ WARNING ⚠

Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.

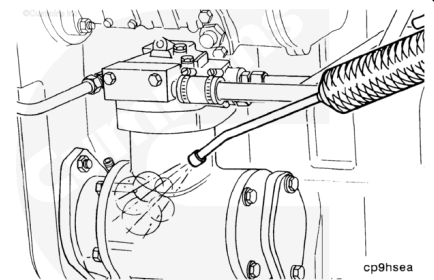


Steam-clean the air compressor.

⚠ WARNING ⚠

Wear appropriate eye and face protective when using compressed air. Flying debris and dirt can cause bodily injury.

Use compressed air to dry the air compressor.


Remove the air inlet and outlet connections from the air compressor.

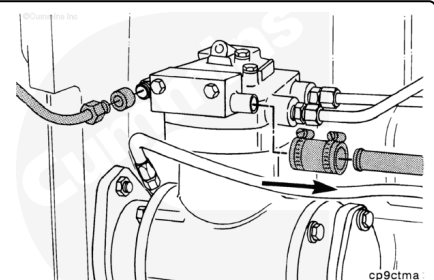

Measure the total carbon deposit thickness inside the air discharge line as shown.


mm		in
1.6	MAX	0.063

Note : If the total carbon deposit (x) exceeds the specifications, clean and inspect the cylinder head, valve assembly, and discharge line. Replace if necessary. Contact your Cummins Authorized Repair Location for procedures.

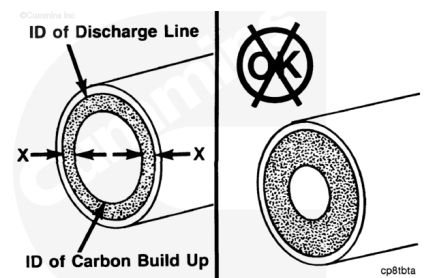

If the total carbon deposit exceeds specification, inspect the air discharge line connections, up to the first tank or until the carbon deposit is less than 1.6 mm [0.063 in].

Clean or replace the lines or connections that exceed this specification.

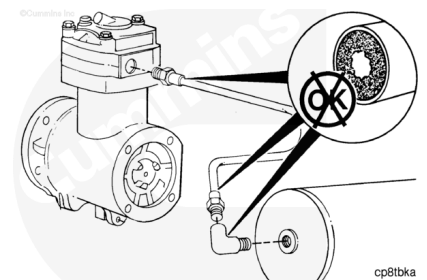


⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the OEM's specifications.

Note : If the total carbon deposit thickness exceeds specification:


- Remove and clean or replace the air discharge line. Refer to manufacturer's material specifications.
- Remove the air compressor from engine; refer to Procedure 012-014 (</qs3/pubsys2/xml/en/procedures/100/100-012-014.html>).

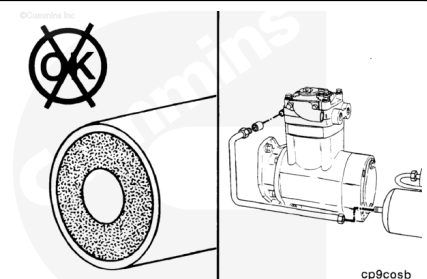

- Inspect the underloader components; refer to the Air Compressor Shop Manual, Bulletin 3810242, for detailed instructions on servicing the unloader components.

⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the OEM's specifications.

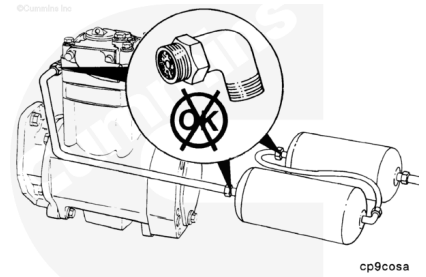

Continue to inspect for carbon buildup in the air discharge line connections up to the first or wet tank.


Clean or replace any lines and fittings with carbon deposits greater than 1.6 mm [0.063 in]. Refer to the OEM's specifications for cleaning or replacement instructions.

Install and tighten the air inlet and outlet connections.

Inlet Connection	5 n.m	[48 in-lb]
Outlet Connection	24 n.m	[18 ft-lb]

$\frac{1}{2}$ -NPT fitting in compressor cylinder head.

Note : The torque value for the discharge line depends on the size and type of line. Refer to the OEM for the correct torque value.

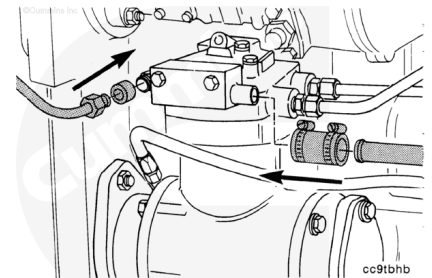

Close the wet tank draincock.

Operate the engine and inspect for any air leaks.

