


Trainings ▾

Test


Remove the air governor hose from the air compressor unloader body.

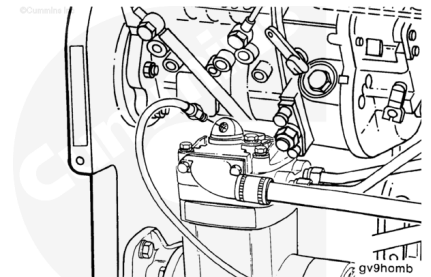


⚠ CAUTION ⚠

During this test, do not exceed maximum vehicle air system pressure or 1035 kPa [150 psi], whichever is lower. Read the manufacturer's specifications.

Operate the engine to activate the air compressor.

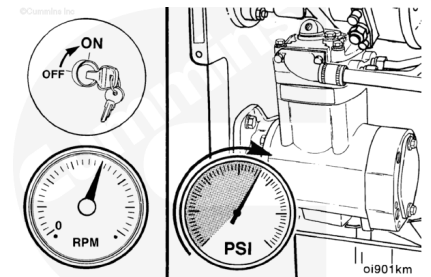

If the air compressor does **not** pump, remove the air compressor, clean, and inspect the air compressor unloader valve assembly. Refer to the Master Repair Manual, Holset Air Compressors, Bulletin 3666121.

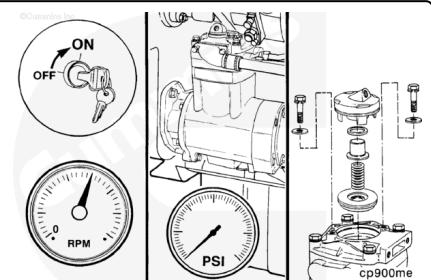


⚠ CAUTION ⚠


During this test, do not exceed maximum vehicle air system pressure or 1035 kPa [150 psi], whichever is lower. Read the manufacturer's specifications.

Install the air compressor; refer to Procedure 012-014 (</qs3/pubsys2/xml/en/procedures/100/100-012-014.html>).

Operate the engine and inspect air compressor operation with the air governor removed.

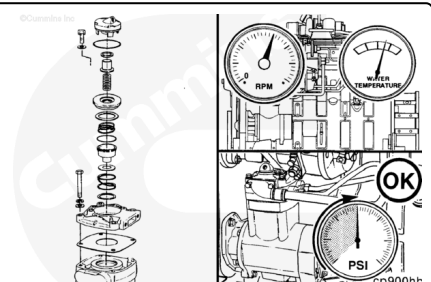

Install the air governor line to the unloader body and tighten.

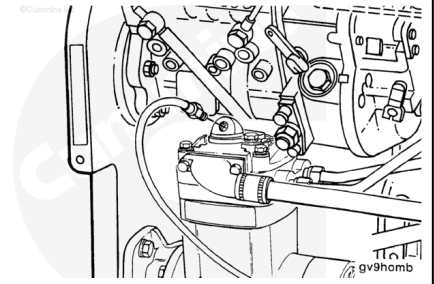

Last Modified: 07-Jan-2005
