


Trainings ▾

Leak Test

Shut off the engine.

Open the draincock on the wet tank to release air from the system.


Close the draincock after the pressure is released.

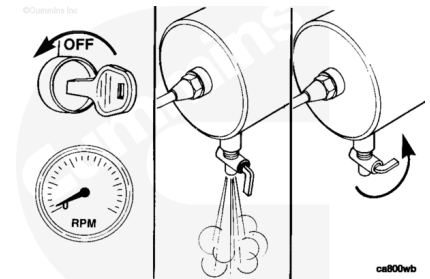

Operate the engine to activate the air compressor.

With the air compressor pumping between 550 to 690 kPa [80 to 100 psi], use a solution of soapy water to inspect for air leaks in the following areas:

- Air compressor cover gasket
- Unloader body o-ring
- Air compressor cylinder head gasket.

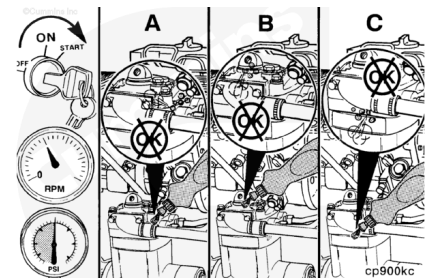

If air leaks are found, refer to Procedure 012-014 (</qs3/pubsys2/xml/en/procedures/100/100-012-014.html>). The compressor will have to be removed for service.

