


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Always connect the ground or negative (-) cable last to avoid arcing that can ignite explosive battery gases.

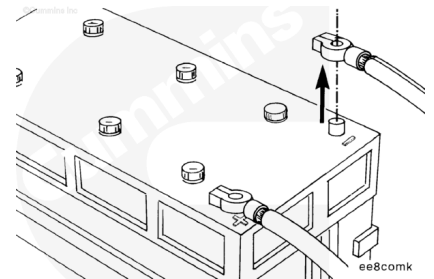

Disconnect the ground cable from the battery terminal.


Remove and tag all wires.

Remove the drive belt from the alternator pulley.

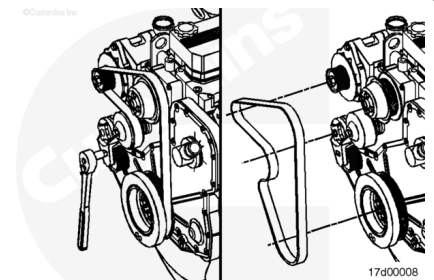


Remove

Remove the alternator link capscrew.

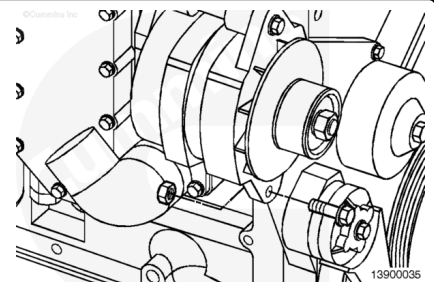

Remove the alternator mounting capscrew.

Remove the alternator.

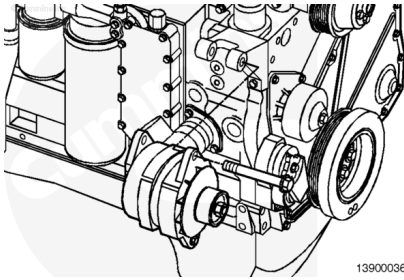


Install

To install the alternator, the alternator mounting components **must** be tightened in the following sequence:

1. Alternator-to-alternator bracket capscrew
2. Lower brace-to-alternator capscrew
3. Lower alternator brace-to-water pump capscrew
4. Water inlet-to-block capscrews.

Note : The wrench size and torque value is determined by the make and model of the alternator.

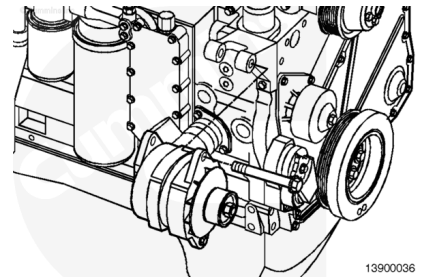

To install the alternator, the alternator mounting components **must** be tightened in the following sequence:

1. Alternator-to-alternator bracket capscrew

Torque Value: 43 n•m [32 ft-lb]

2. Lower brace-to-alternator capscrew

Torque Value: 24 n•m [18 ft-lb]

3. Lower alternator brace-to-water pump capscrew

Torque Value: 24 n•m [18 ft-lb]

4. Water inlet-to-block capscrews.

Torque Value: 24 n•m [18 ft-lb]

