



Trainings ▾

Initial Check

Be sure the correct terminals are being used on the alternator. The R terminal (Delco®) or W terminal (Bosch® K1) provide half of the system voltage and is used to operate accessories such as the tachometer on generator sets.

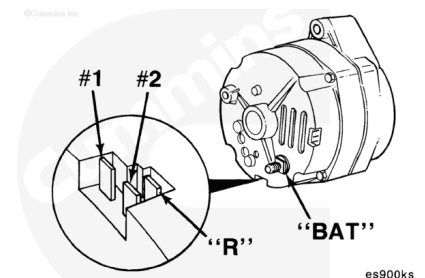


Trouble with the starting system can be indicated by the indicator lamp or ampmeter.

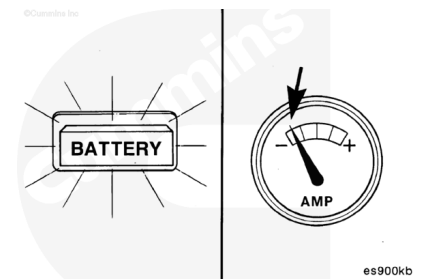


Check the indicator lamp for normal operation as shown below:

Engine	Switch	Lamp	Ampmeter
Stopped	OFF	OFF	0
Stopped	ON	ON	-
Running	ON	OFF	+

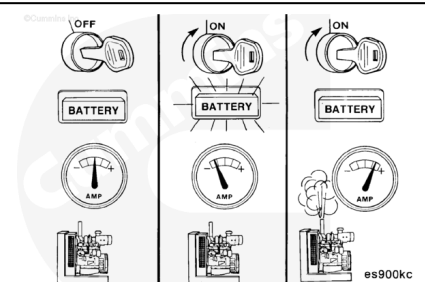


If the lamp is on when the switch is OFF and the engine is **not** running, disconnect the lamp lead at the ignition switch.

- If the lamp stays on, there is a short to a positive wire.
- If the lamp goes out, there is a short in the switch.

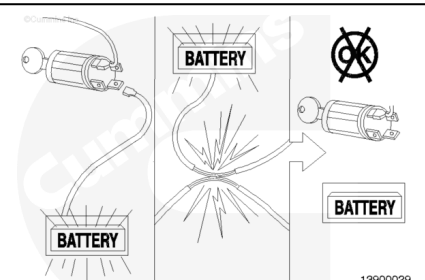

If the lamp goes off when the switch is ON and the engine is **not** running, there can be an open in the circuit.

Check for a blown fuse, a burned out bulb, defective bulb socket, or an open in the No. 1 or D (+) lead circuit between alternator and ignition switch.

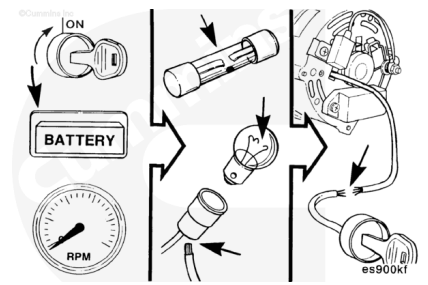

If the lamp is on when the switch is ON and the engine is running, disconnect the lead to the alternator.

- If the lamp stays on, there is a short to the ground in the lamp circuit.
- If the lamp goes out, inspect the alternator.

