


Trainings ▾

General Information

⚠ WARNING ⚠

Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

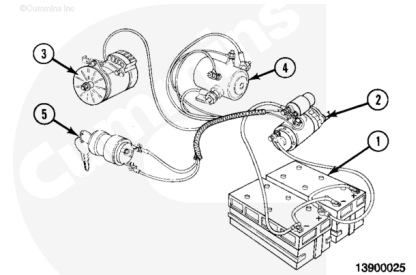

⚠ WARNING ⚠


When the engine is running, do not wear loose-fitting or torn clothing, long hair, or jewelry that could entangle in moving parts and cause severe personal injury or death.

The basic electrical system consists of:

- Batteries (1)
- Starter motor (2)
- Alternator (3)
- Magnetic switch (4)
- Ignition switch (5)
- All necessary wiring.


All components **must** be carefully matched.

The in-line injection pump uses an electronically activated solenoid shutdown system. The function of the valve is discussed in Section 5.

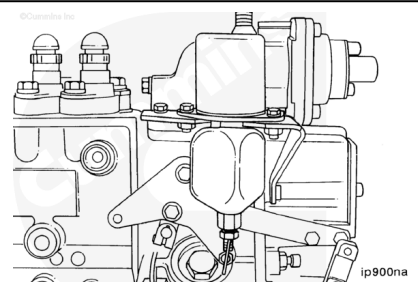


The engine can be fitted with a cylinder block heater, oil pan heater, and/or an intake manifold heater.

©Cummins Inc.

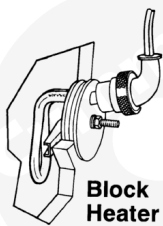

**Block
Heater**




**Pan
Heater**

cs9swgb

The accompanying illustrations show typical parallel and series battery connections:

- Parallel connection

©Cummins Inc.

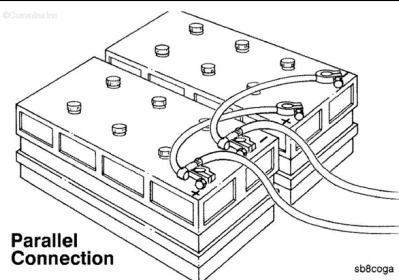


**Parallel
Connection**

sb8coga

- Series connection.

©Cummins Inc.

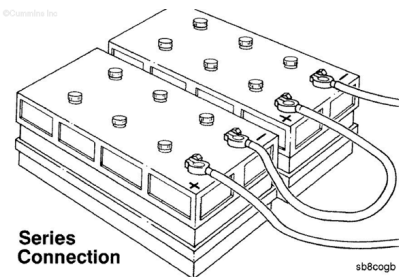

**Series
Connection**

sb8cogb