

Trainings ▾

Cylinder Block


Tool Number

3162253

Camshaft Bushing Installation/Removal Kit

Used to remove and install camshaft bushings.

©Cummins Inc

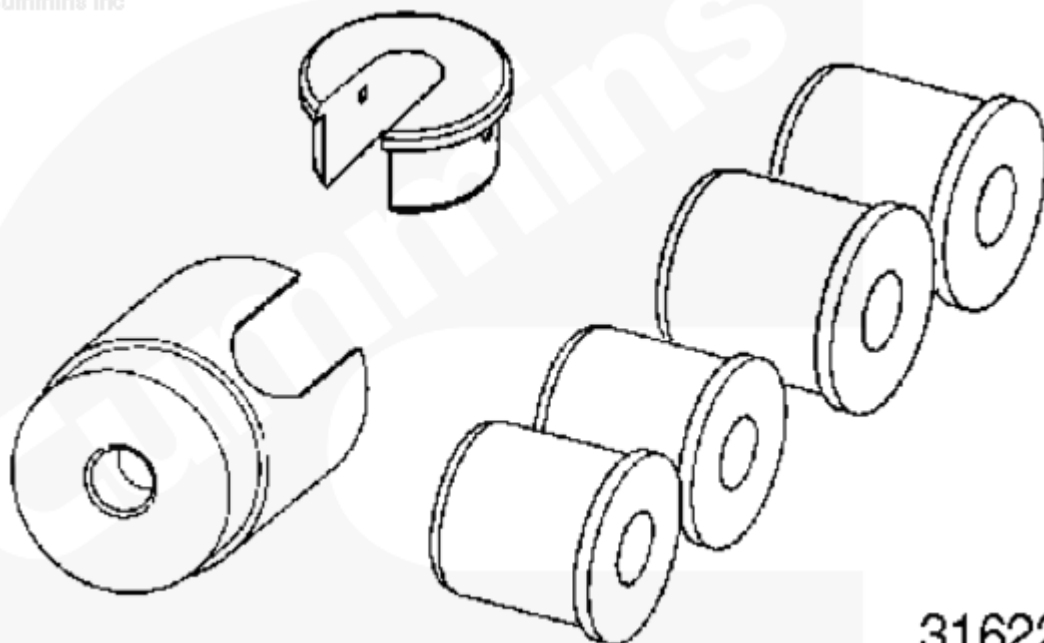

3162253


Tool Number

3163264

Engine Lift Fixture

Used to lift the engine during the removal and installation procedures.

©Cummins Inc

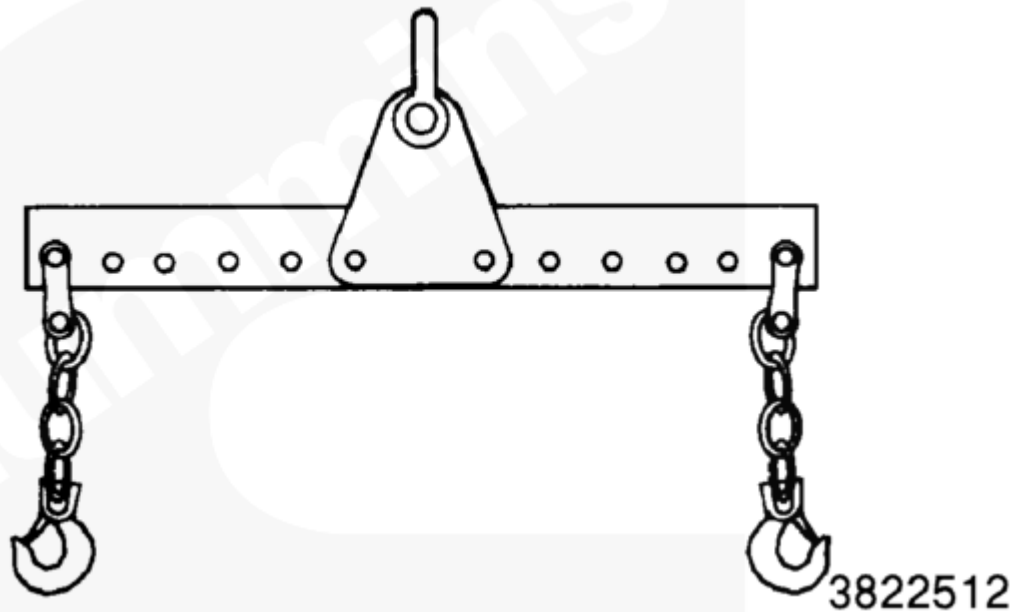
**Tool Number**

3165045

Camshaft Bushing Tool

Used to replace camshaft bushings.

©Cummins Inc

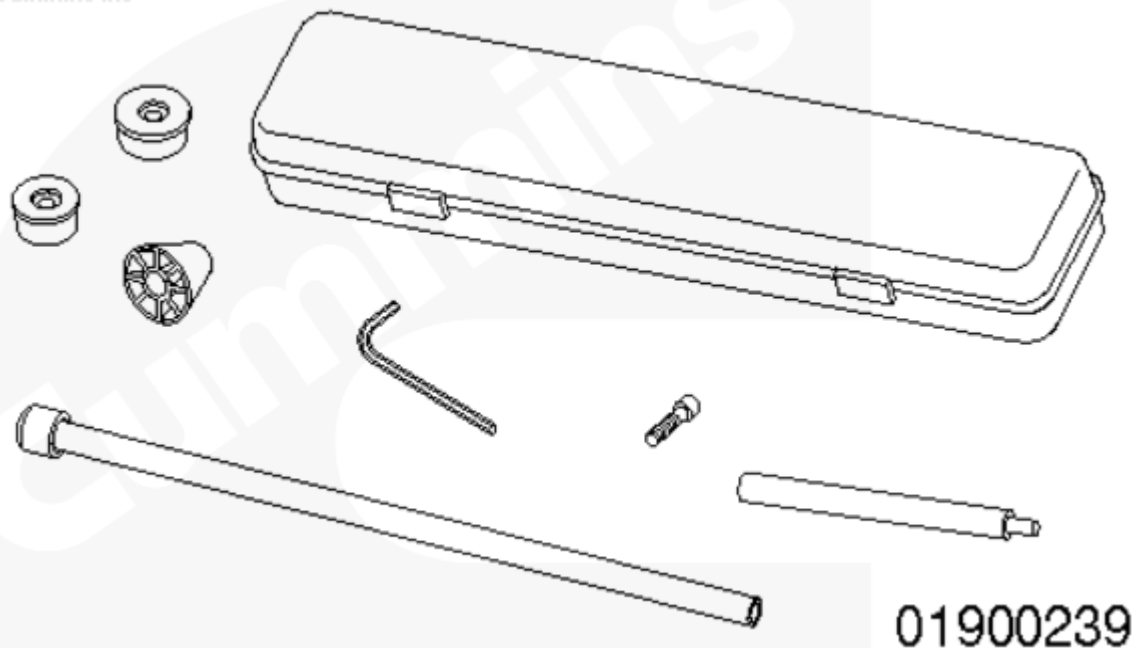


Tool Number

3377371

Engine Barring Tool

Used to engage the flywheel ring gear to rotate the crankshaft.

©Cummins Inc

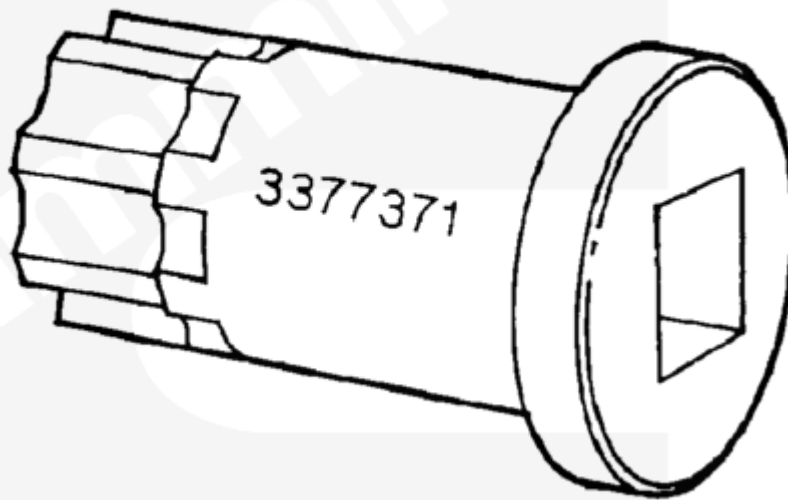


Tool Number

3823258

Scotch-Brite™ 7448 Abrasive Pad

Used to clean carbon from the upper liner bores, remove rust, corrosion, burrs, and scuffing surfaces.

©Cummins Inc

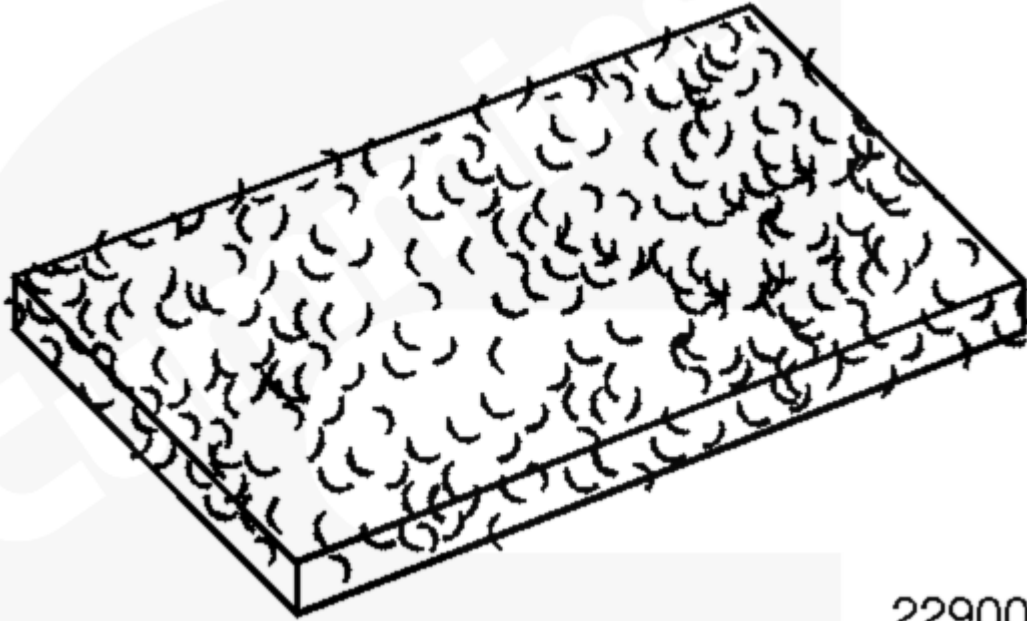

22900039


Tool Number

3824500

Wear Sleeve Installer

Used to install a wear sleeve to repair crankshafts that have grooves caused by the oil seal.

©Cummins Inc

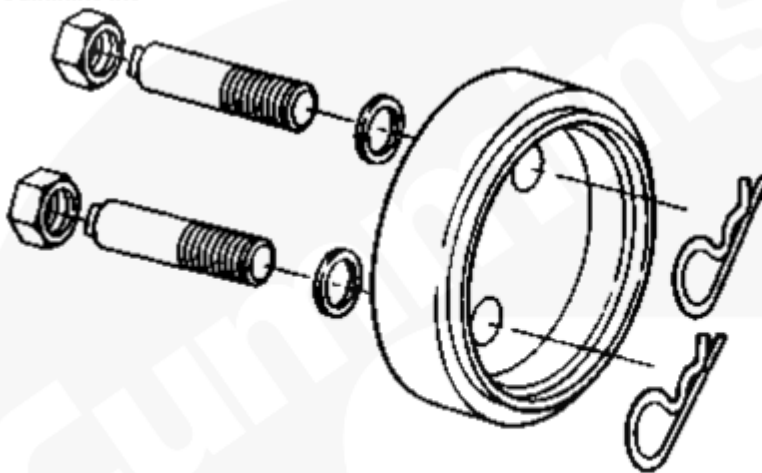

3824500

Tool Number

3375068

Cup Plug Sealant

Used when installing pipe plugs and cup plugs to prevent leaks.

©Cummins Inc



bp8togk


Tool Number

3376015

Cylinder Liner Puller

Used to remove cylinder liners from the cylinder block. Requires two puller arm extension feet, Part Number 3376649.

©Cummins Inc

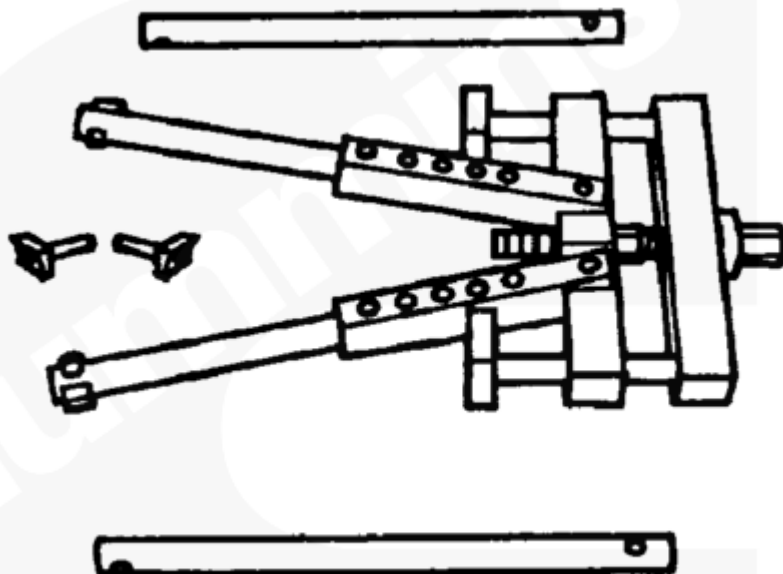

ck8togr


Tool Number

3376050

Dial Indicator and Sleeve Assembly

Used to measure flywheel and flywheel housing runout.

©Cummins Inc

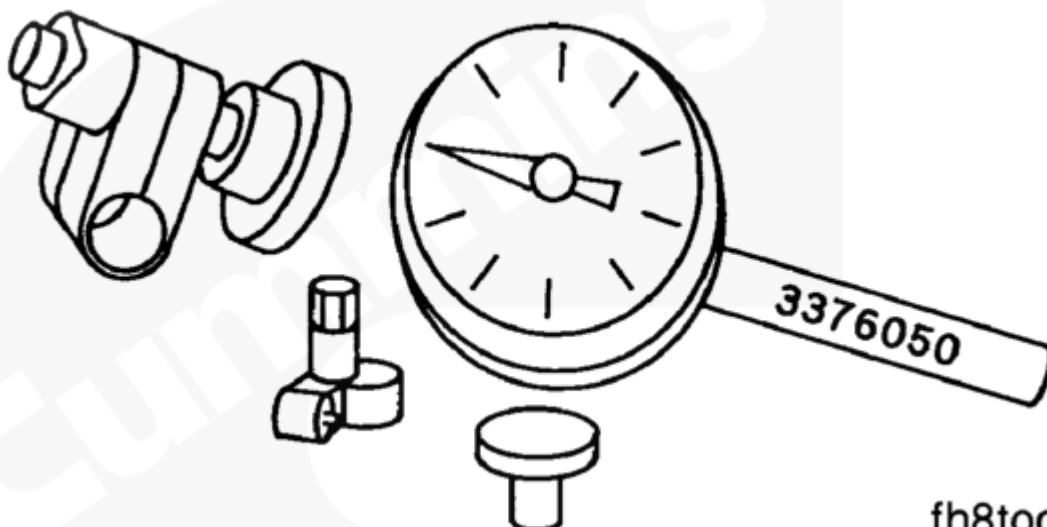

fh8togc


Tool Number

3376795

Expansion Plug Driver Handle

Used with all expansion plug drivers larger than 0.375-inch diameter.

©Cummins Inc

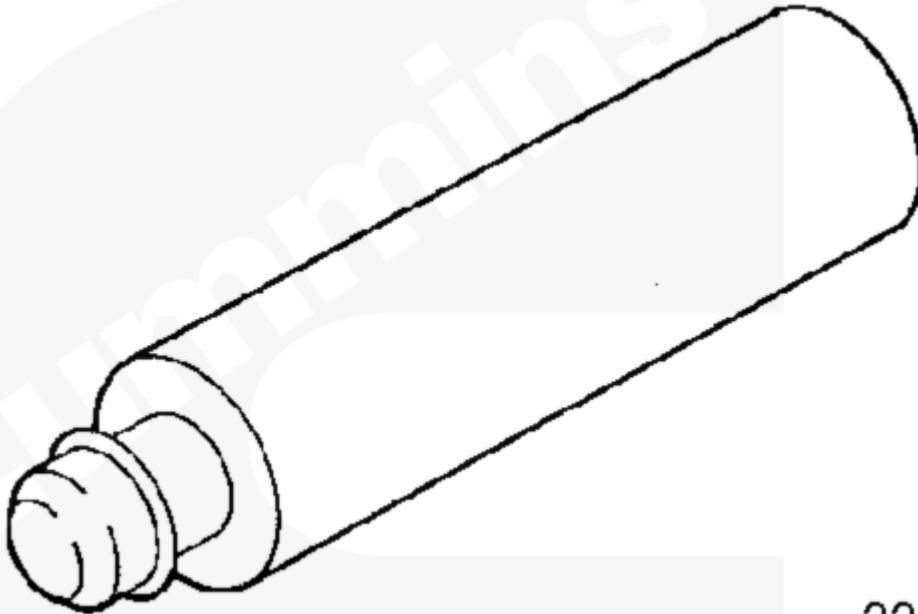

3376795

Tool Number

3376816

Expansion Plug Driver

Used to install 1-inch expansion plug to specified depth. Used with expansion plug driver handle, Part Number 3376795.

©Gummins Inc



ck8togo


Tool Number

3822372

Expansion Plug Driver

Used with expansion plug driver handle, Part Number 3376795, to install 0.375-inch expansion plug to specified depth.

©Gummins Inc

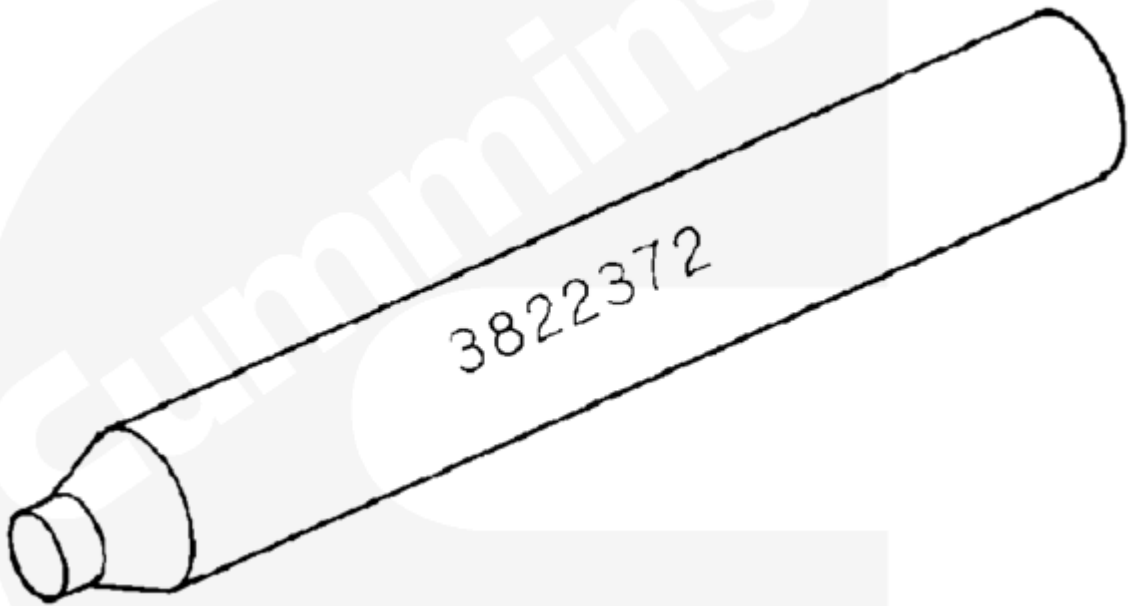

3822372


Tool Number

3822513

Tappet Removal Tool Kit

Used to remove and install valve tappets.

©Cummins Inc

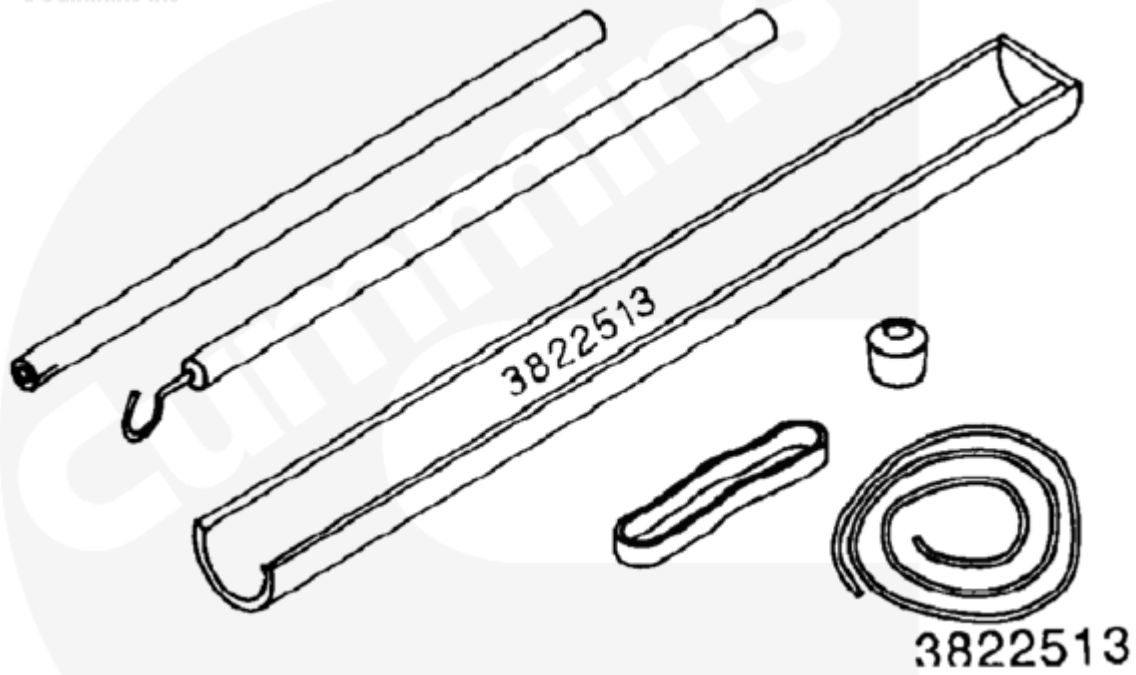


Tool Number

3822566

Blowby Check Tool

Used with manometer, Part Number ST-1111-3, to measure the engine crankcase pressure.

©Cummins Inc

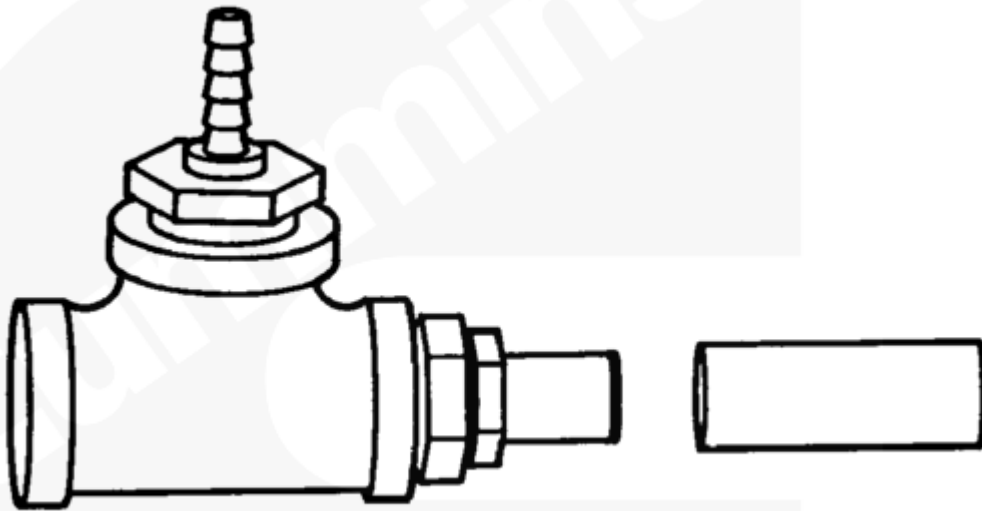

eg8toge


Tool Number

3823137

Piston Ring Expander

Used to install piston rings onto pistons without damaging or distorting the rings.

©Cummins Inc

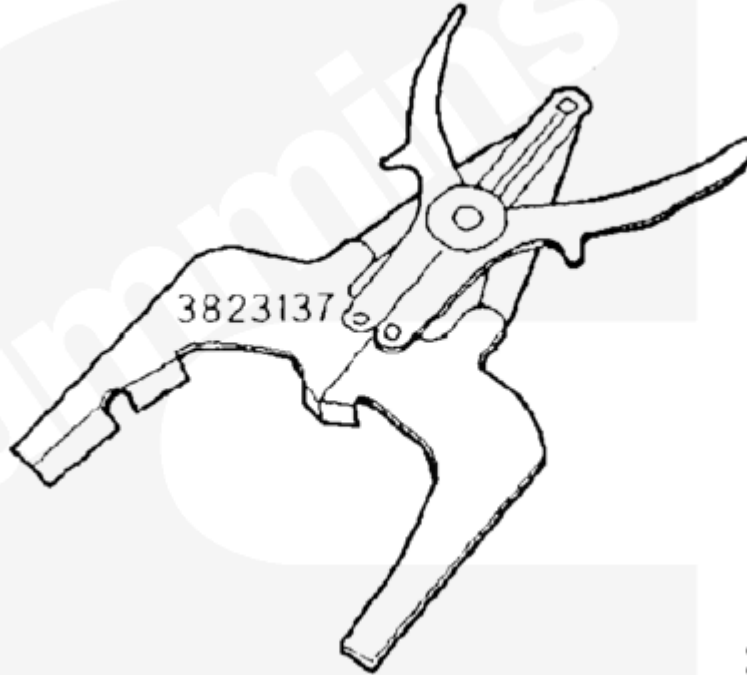**3823137**


Tool Number

3823290

Piston Ring Compressor

Used to compress the piston rings while installing the pistons into the cylinder bores.

©Cummins Inc

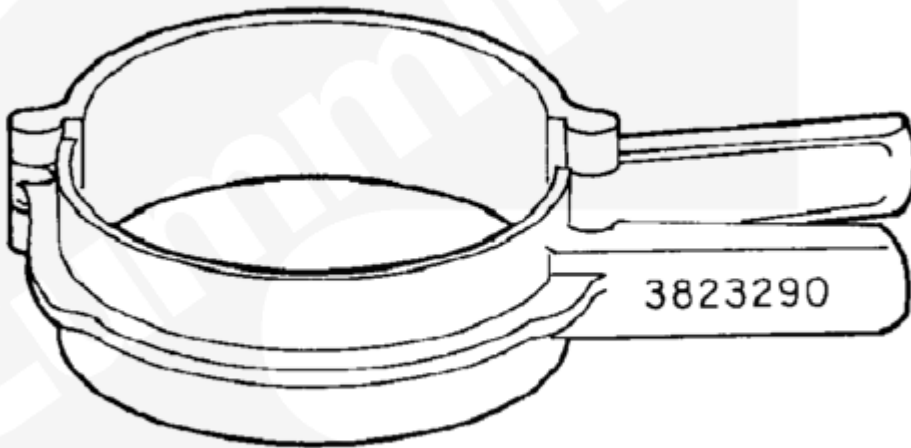

3823290

3823290


Tool Number

3823494

Sealant, Three-Bond™ (150-Gram Tube)

Used for sealing "T" joints and front gear cover.

©Cummins Inc

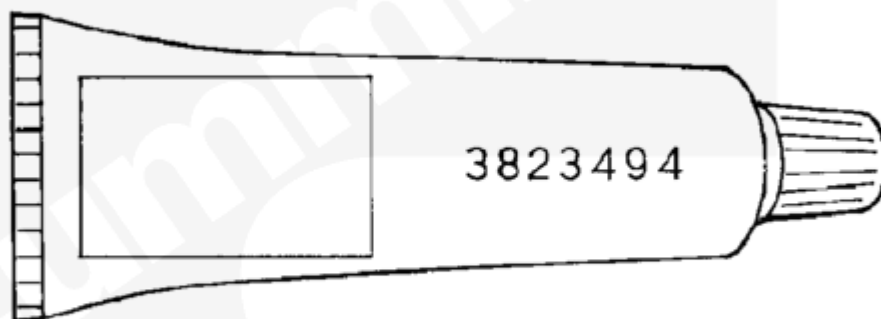

3823494


Tool Number

3823495

Gauge Block

Used to measure cylinder liner protrusion on the cylinder block.

©Cummins Inc

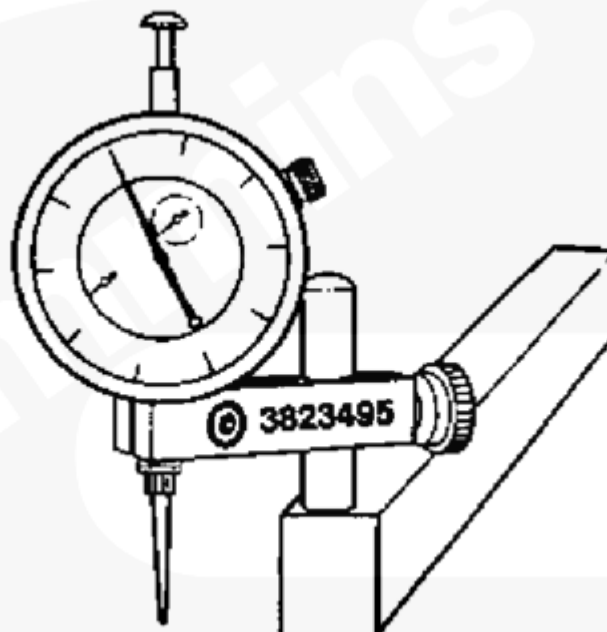

3823495

Tool Number

3823521

Expansion Plug Driver

Used with expansion plug driver handle, Part Number 3376795, to install 0.8125-inch expansion plug to specified depth.

©Cummins Inc

**3823521**

Tool Number

3823522

Expansion Plug Driver

Used with expansion plug driver handle, Part Number 3376795, to install 1.1875-inch expansion plug to specified depth.

©Cummins Inc

**3823522**


Tool Number

3823523

Expansion Plug Driver

Used with expansion plug driver handle, Part Number 3376795, to install 1.375-inch expansion plug to specified depth.

©Cummins Inc

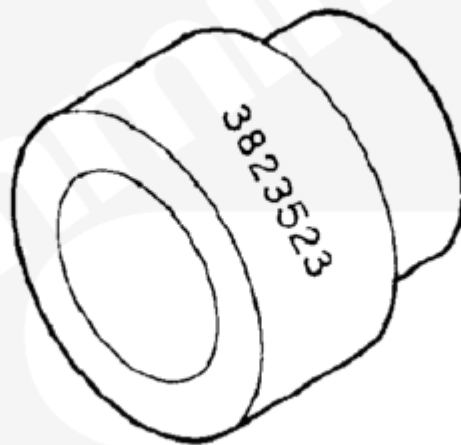**3823523**


Tool Number

3823524

Expansion Plug Driver

Used to install 2.250-inch expansion plug to specified depth. Used with expansion plug driver handle, Part Number 3376795.

©Cummins Inc

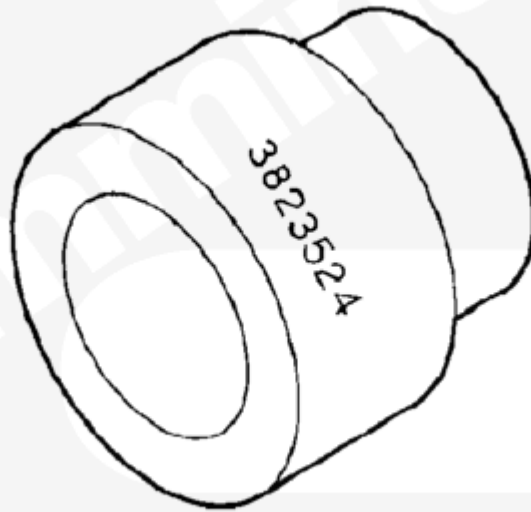**3823524**


Tool Number

3823567

Cutter Plate

Used with Part Number 3823558, cylinder liner counterbore tool.

©Cummins Inc

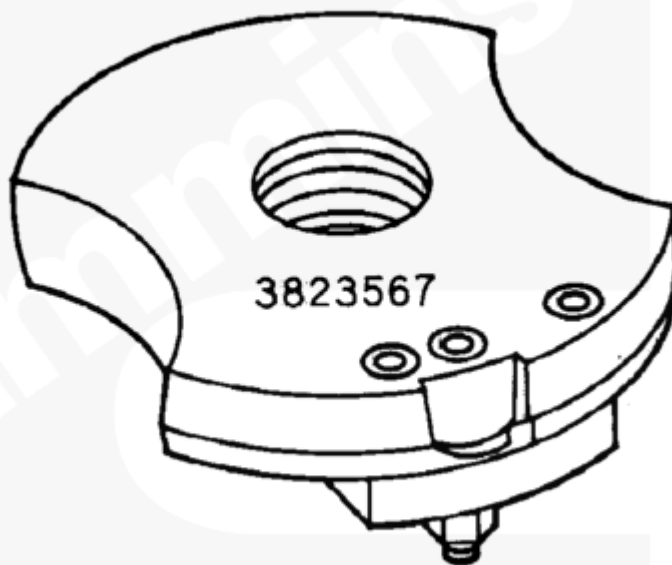

3823567


Tool Number

3823570

Cutter Bit

Used with Part Number 3826567, cutter plate, to machine the cylinder liner counterbore ledge.

©Cummins Inc

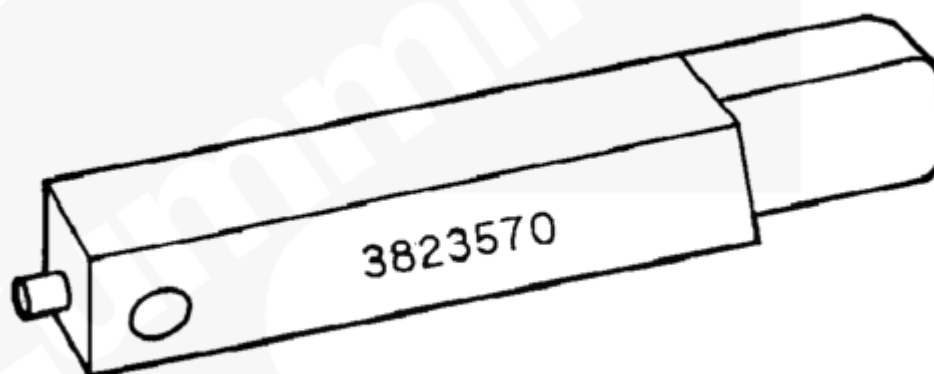

3823570


Tool Number

3823589

Camshaft Gear Installation/Removal Tool

Used to remove and install the camshaft gear from the camshaft with the camshaft installed.

©Cummins Inc

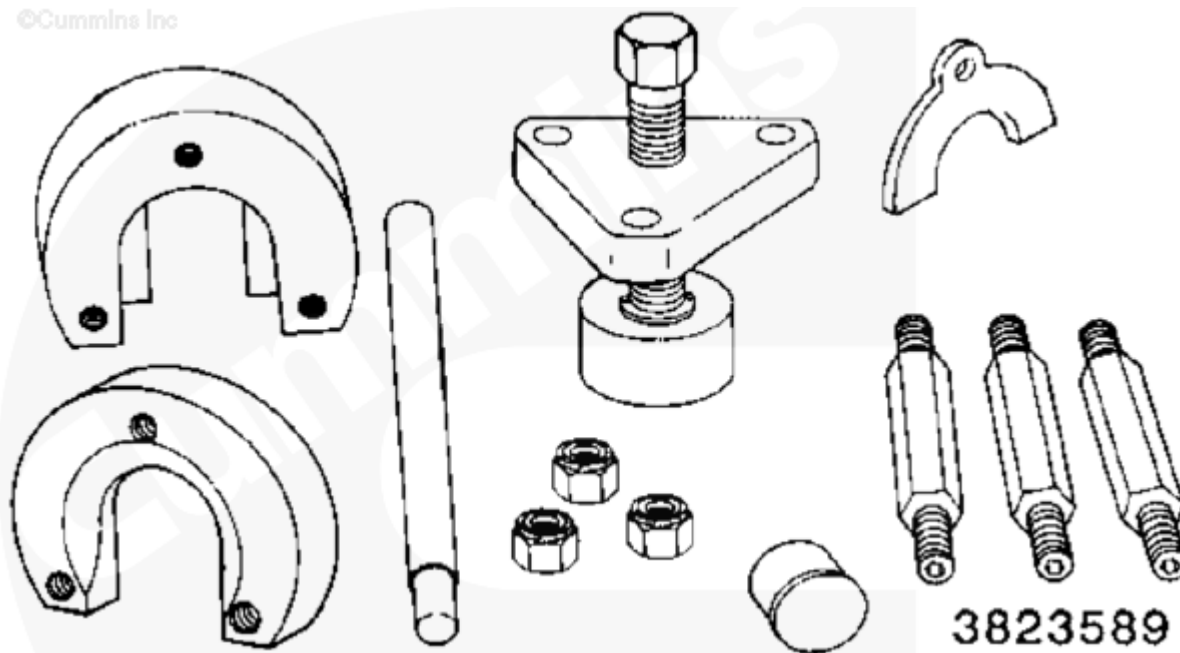


Tool Number

3823818

Main Bearing Rollout Tool

Used to remove and install main bearings with the crankshaft installed.

©Cummins Inc

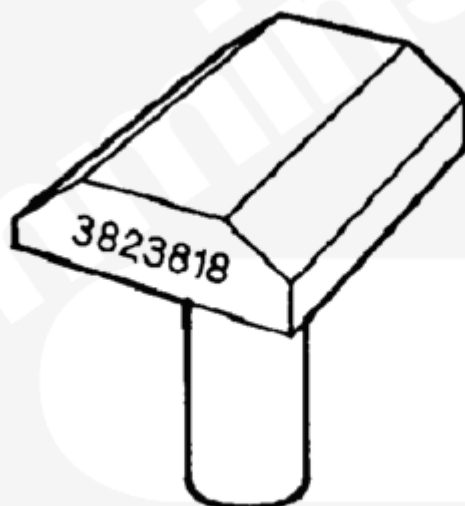

3823818


Tool Number

3823921

Capscrew Length Gauge

Used to measure capscrew free length.

©Cummins Inc

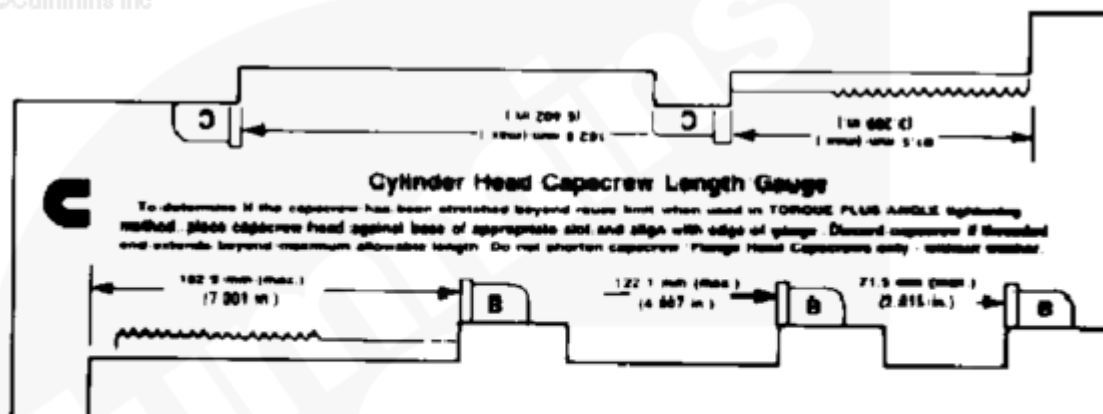

3823921


Tool Number

3824078

Wear Sleeve Installation Tool

Used to install the rear crankshaft lubricating oil seal wear sleeve.

©Cummins Inc

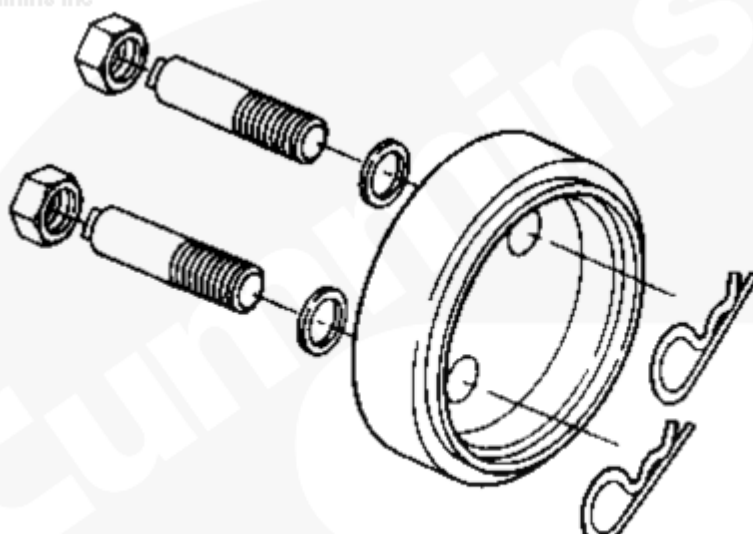


Tool Number

3824499

Lubricating Oil Seal Installation Tool

Used to install the front lubricating oil seal in the front cover to a specified depth.

©Cummins Inc

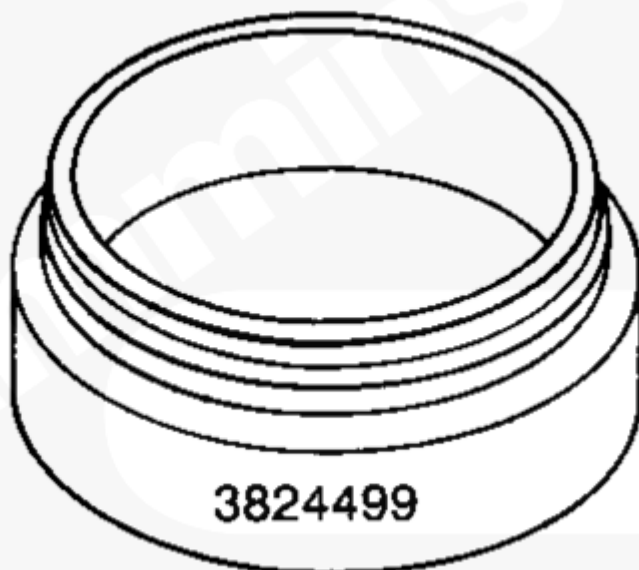

3824499


Tool Number

3823621

Hydraulic Actuator Kit

Used to remove and install camshaft bushings.

©Cummins Inc

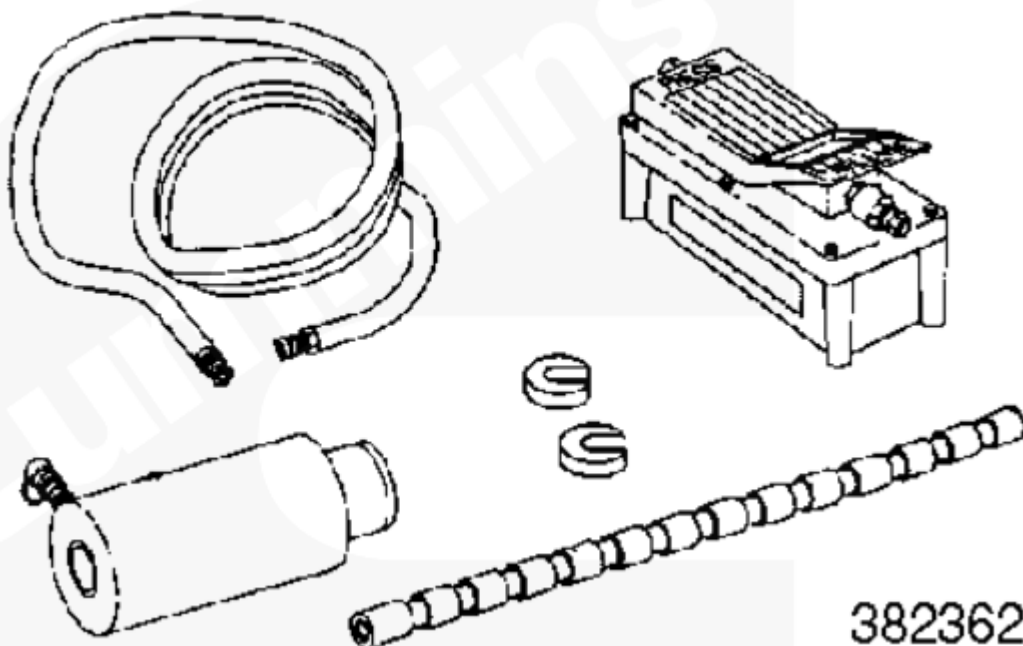

3823621



Tool Number

5395259

Crankshaft Seal Installation Kit, Rear

Used to install laydown lip seal.

©Cummins Inc

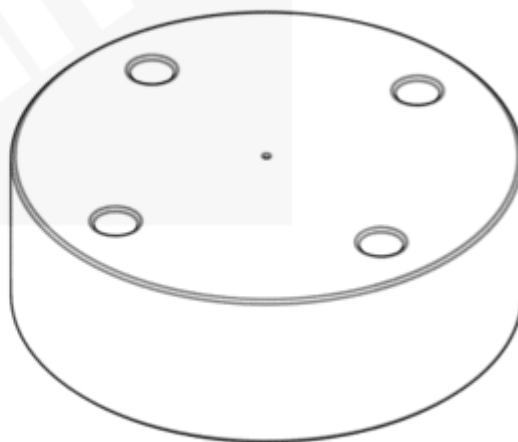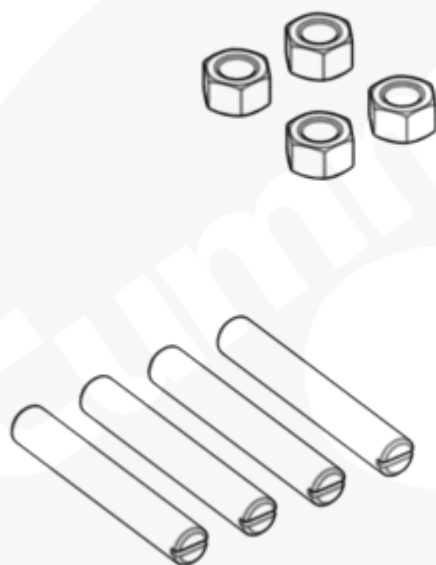

01901081



Tool Number

5395330

Crankshaft Seal Removal Kit, Rear

Used to remove laydown lip seal.

©Cummins Inc

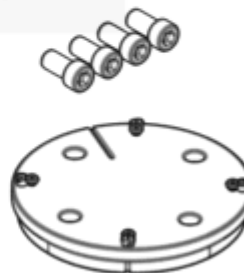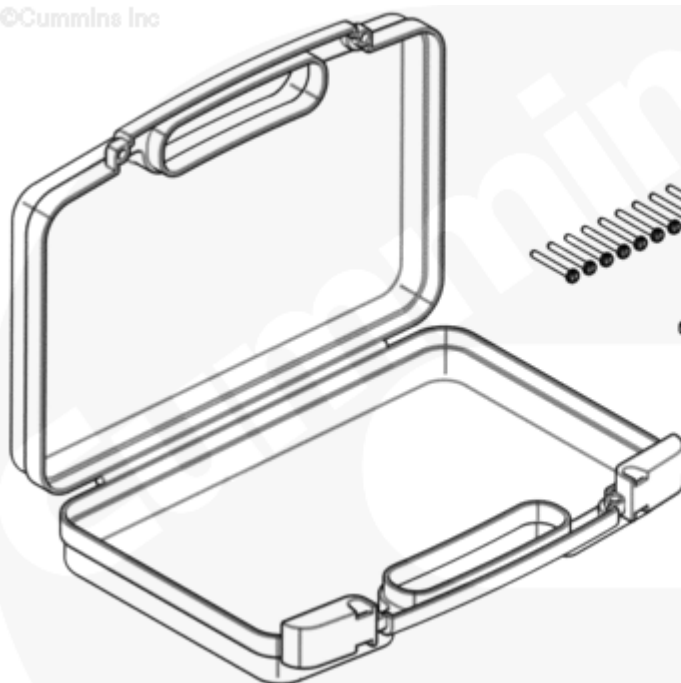

01901083


Tool Number

5395409

Carrier Centering Tool, Rear Crankshaft

Used to align the rear carrier on front gear train engines only.

©Cummins Inc

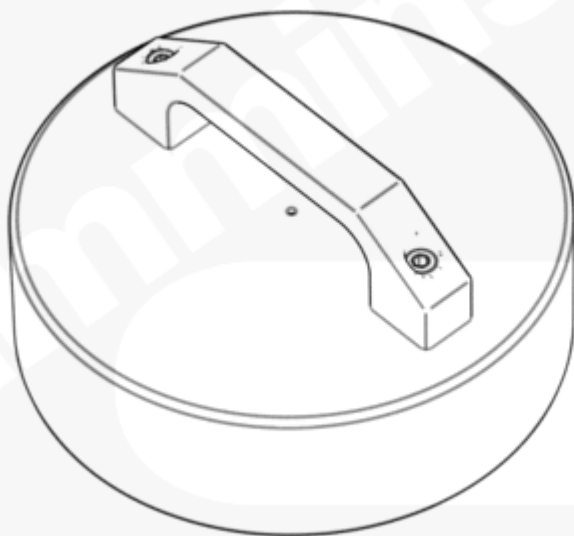

01901082


Tool Number

ST-647

Standard Puller

Used to remove drive pulleys, impellers, air compressor counterweights, etc.

©Cummins Inc

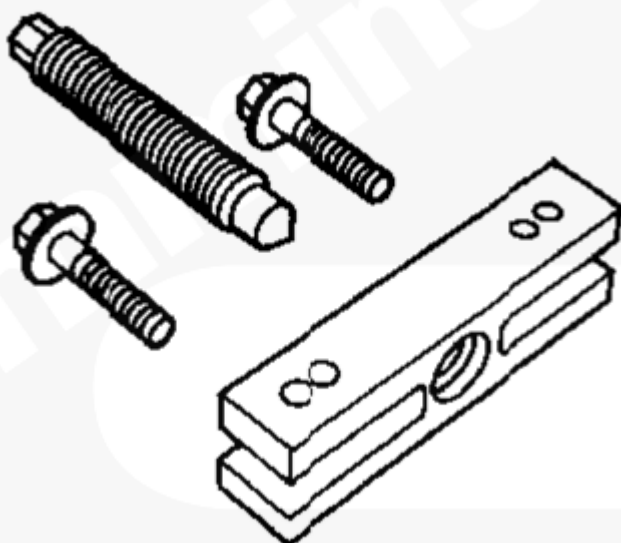

ad8toga


Tool Number

ST-1229

Cylinder Liner Driver

Used to install cylinder liners into the cylinder block.

©Cummins Inc

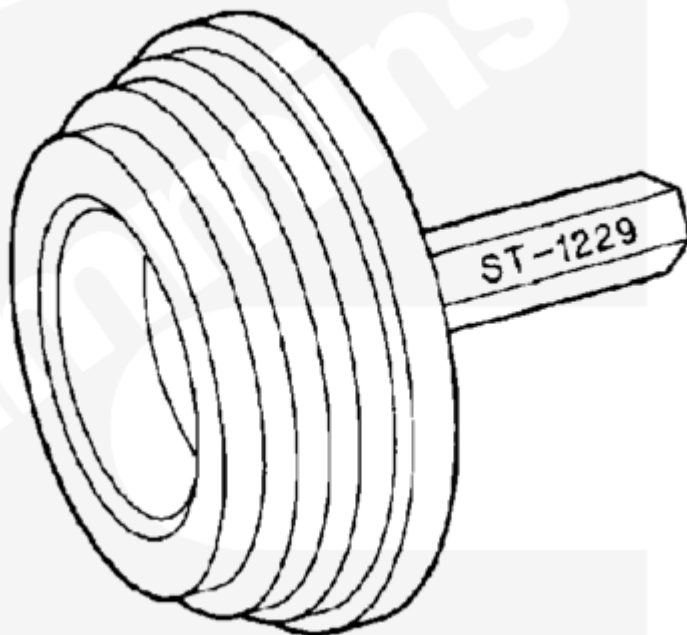

ST-1229


Tool Number

ST-1325

Dial Gauge Attachment

Attaches to crankshaft flange to provide measuring of flywheel and flywheel housing runout with dial bore gauge.

©Cummins Inc

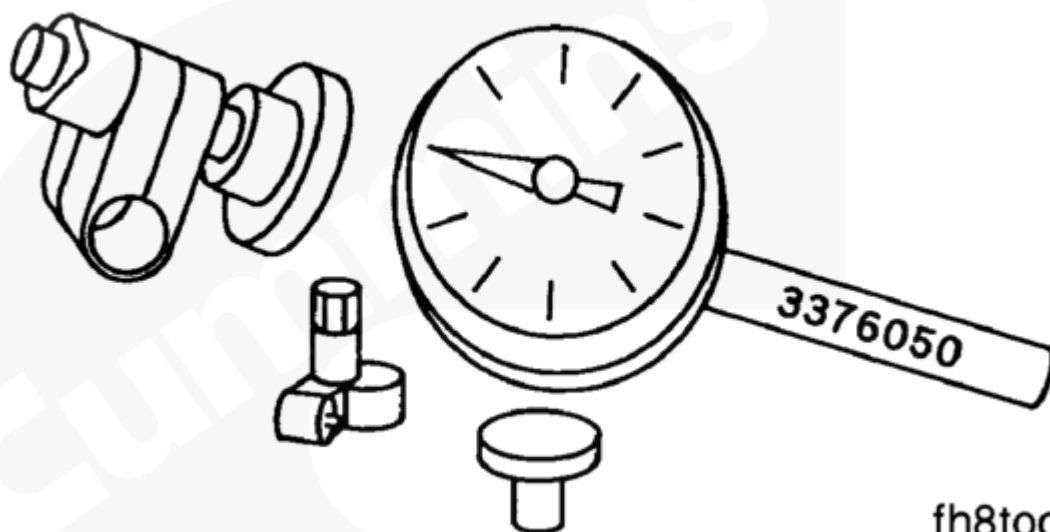

fh8togc

