


Trainings ▾

Tool Number

3375066

Pipe Sealant

Used on capscrew threads and pipe plugs.

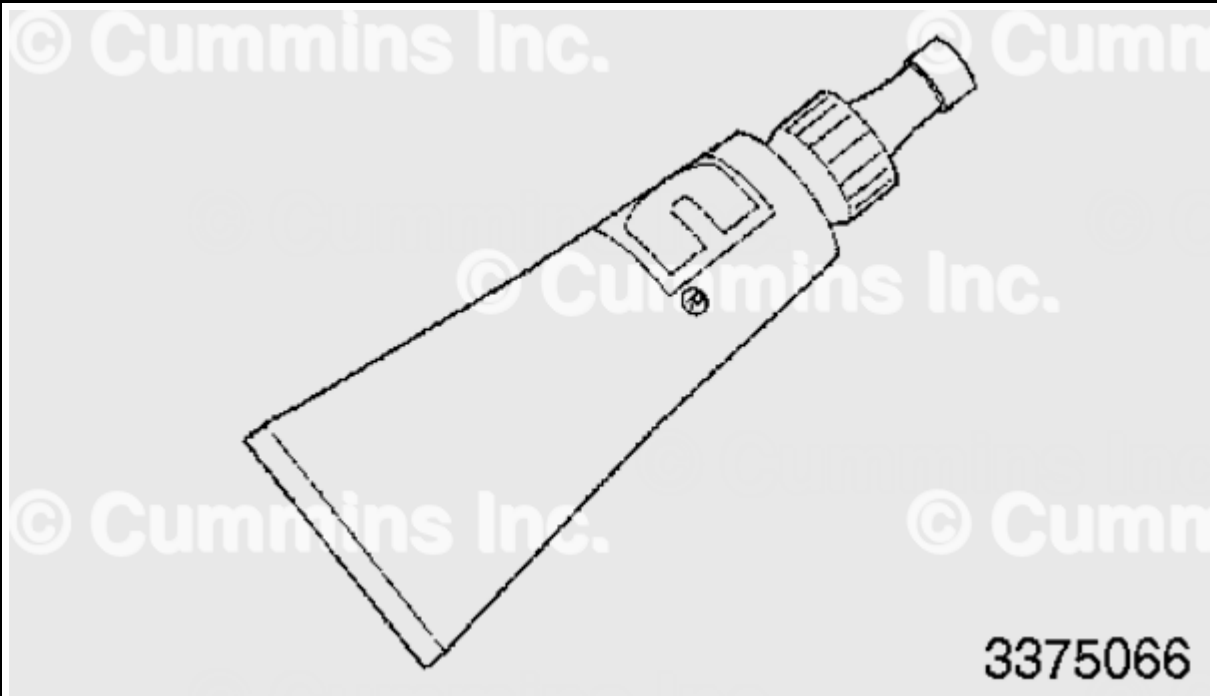


Tool Number

3823709

Idler Shaft Puller and Capscrew

Used to remove idler shaft from idler gear and flywheel housing.

©Cummins Inc

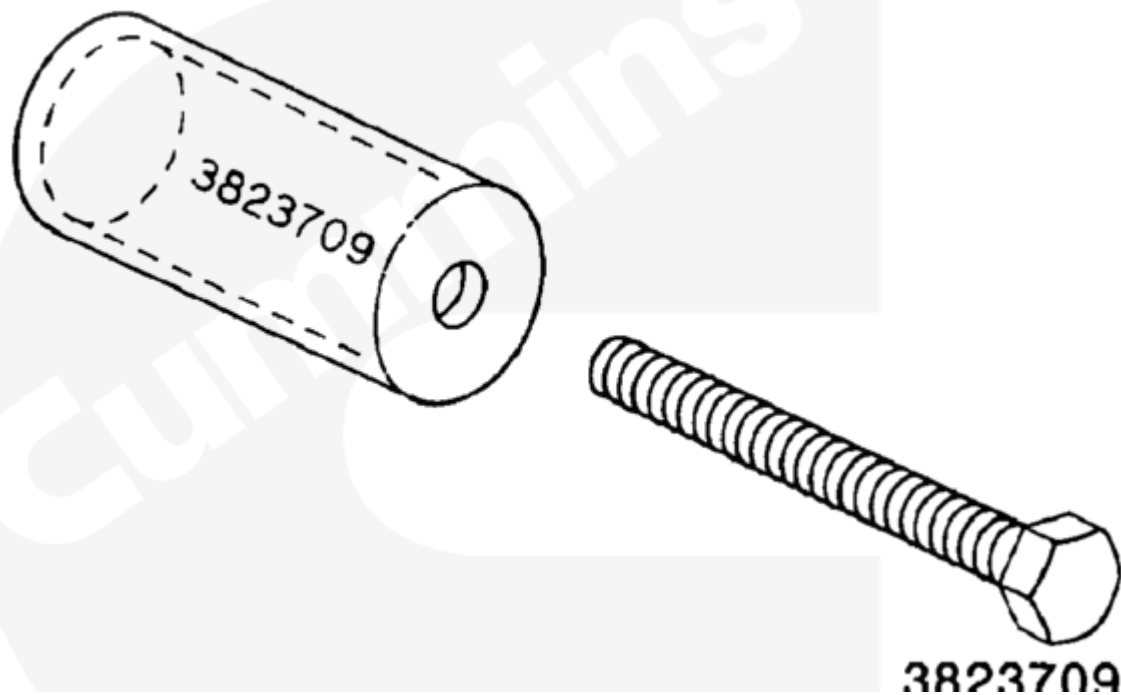


Tool Number

3823891

Gear Locking Tool

Used to prevent rotation of the power take-off output shaft while tightening the output flange capscrew.

©Cummins Inc

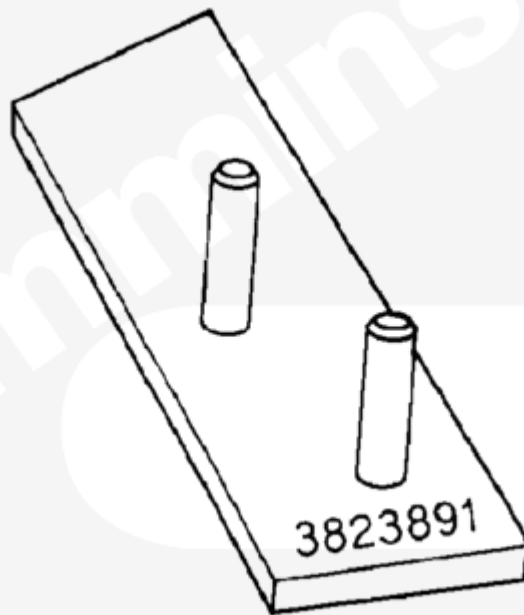**3823891**

Tool Number

3823892

Offset Wrench (C Series Engine)

Used to tighten the hidden capscrews in the REPTO flywheel housing.

©Cummins Inc



3823892


Tool Number

3823893

Bearing Race Driver

Used to install output shaft bearing races.

©Cummins Inc

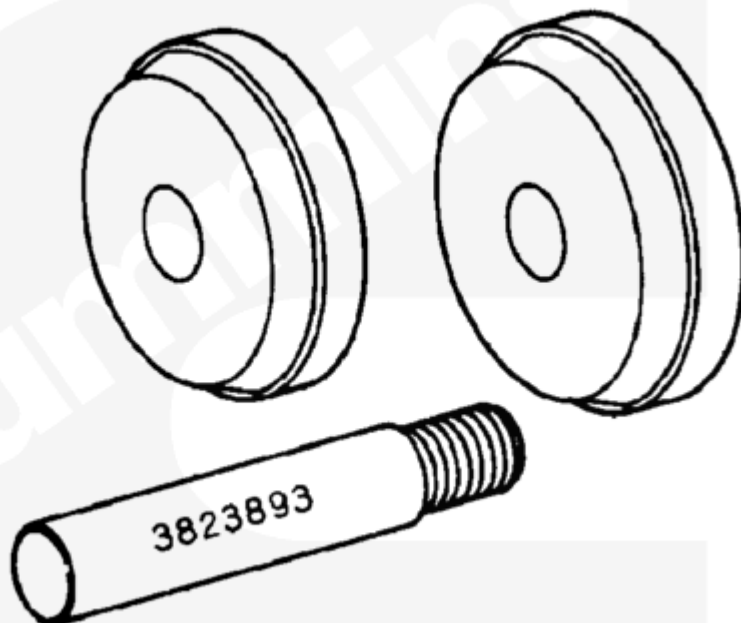

3823893


Tool Number

ST-1325

Dial Indicator Attachment

Used to attach to crankshaft flange to provide measuring of flywheel and flywheel housing runout with dial bore gauge.

©Gummine Inc

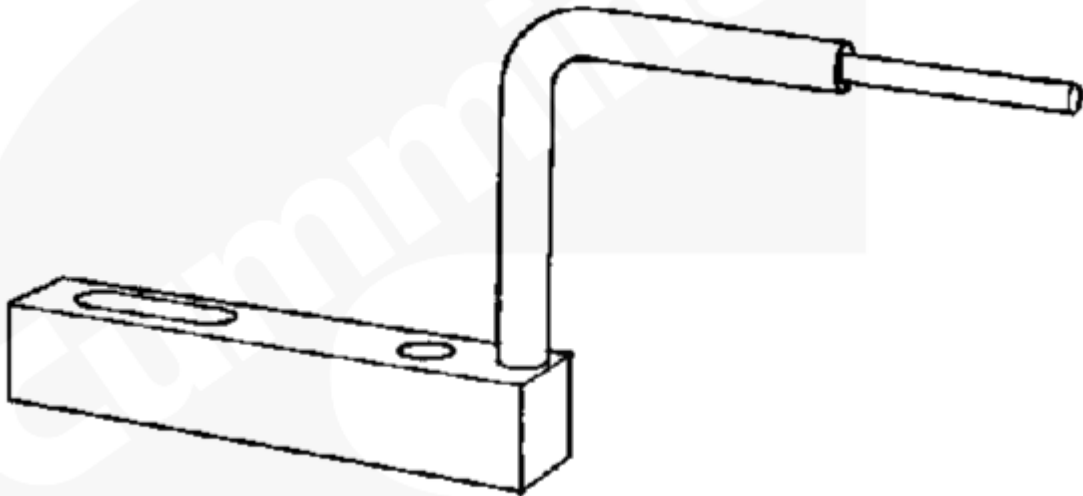

st-1325

Tool Number

3375068

Cup Plug Sealant

Used when installing cup plugs.




Tool Number

3376050

Dial Indicator and Sleeve Assembly

Used with dial gauge attachment, Part Number ST-1325, to measure flywheel and flywheel housing runout.

©Cummins Inc

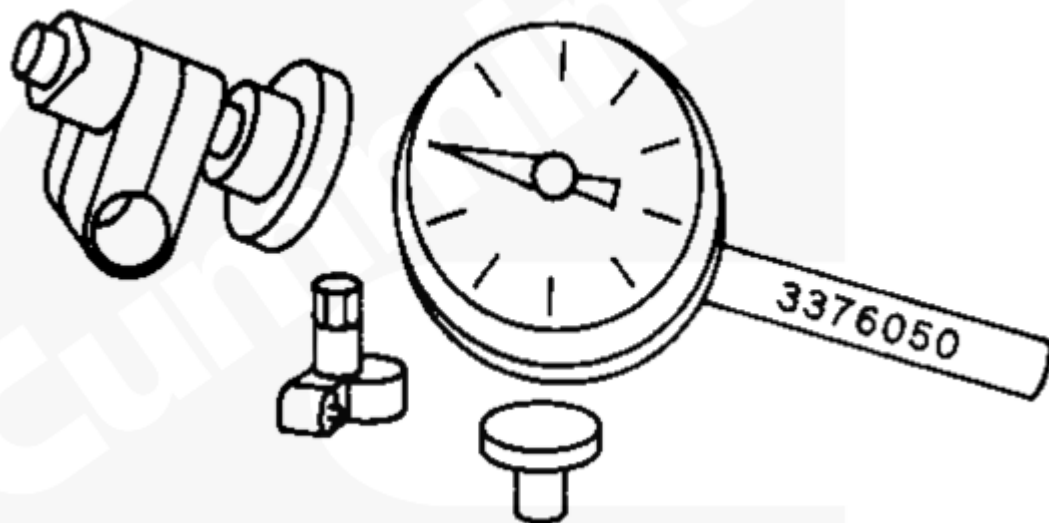
**Tool Number**

3376812

Cup Plug Driver

Used to install cup plug in flywheel housing.

©Cummins Inc

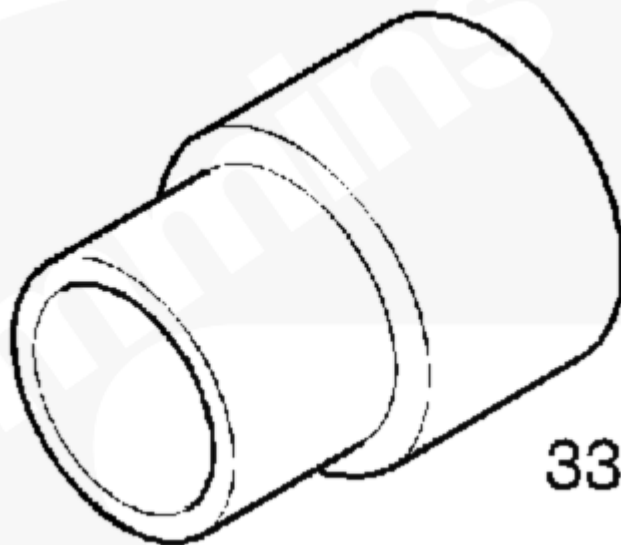

3376812


Tool Number

3801048

Cummins Sealant

Used to seal mating surfaces.

©Cummins Inc

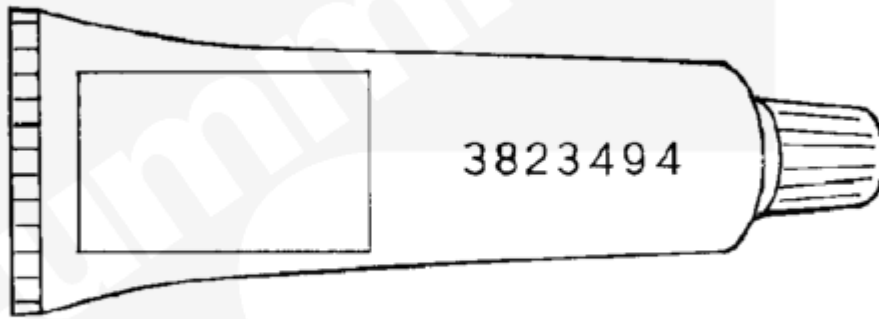**3823494**


Tool Number

3823494

Three-bond™ Sealant

Used on heavy-duty silicone type of cup plug sealant.

©Cummins Inc

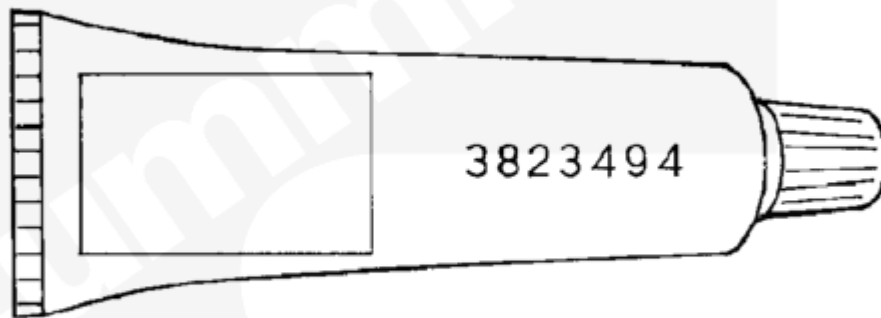**3823494**