


Trainings ▾

Engine Dataplate

The engine dataplates show specific information about your engine. The engine serial number and control parts list (CPL) provide information for ordering parts and service manuals.

Note : The engine dataplate must not be changed unless approved by Cummins.

The dataplate is located on the top side of the gear housing. Have the following engine data available when communicating with a Cummins Authorized Repair Location. The information on the dataplate is **mandatory** when sourcing service parts.

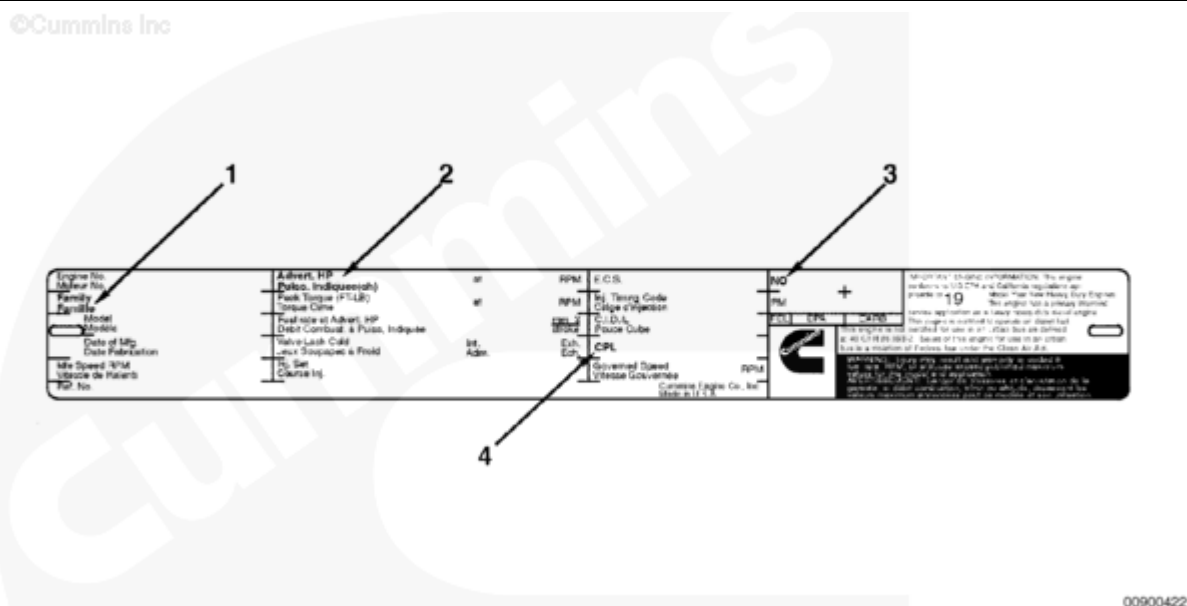


1. Engine serial number
2. Control parts list
3. Model
4. Horsepower and rpm rating.

Cummins® Engine Nomenclature

Automotive Applications


C8.3-275 Automotive Applications

- 275 = rated horsepower
- 8.3 = displacement in liters
- C = engine series

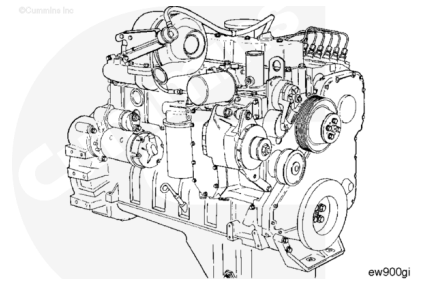

Fuel Injection Pump Dataplate

The Bosch® fuel injection pump dataplate is located on the side of the injection pump. It provides information for fuel pump calibration.

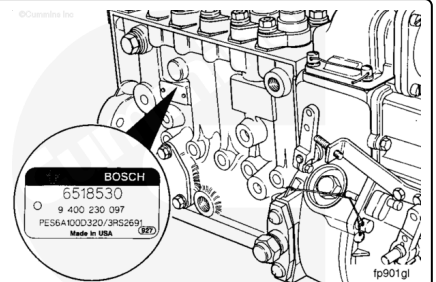

The Cummins part number for the fuel pump-governor combination is located on the governor dataplate.

