


Trainings ▾

Engine Views

The following drawings illustrate the major components. Maintenance personnel **must** be familiar with each component to conduct the maintenance and service procedures discussed in this manual.

Note : The drawings in this section reflect a standard configuration. The engine can be equipped with optional accessories such as port-or starboard-side dipsticks. Location of optional items can be different from those shown.


©Cummins Inc

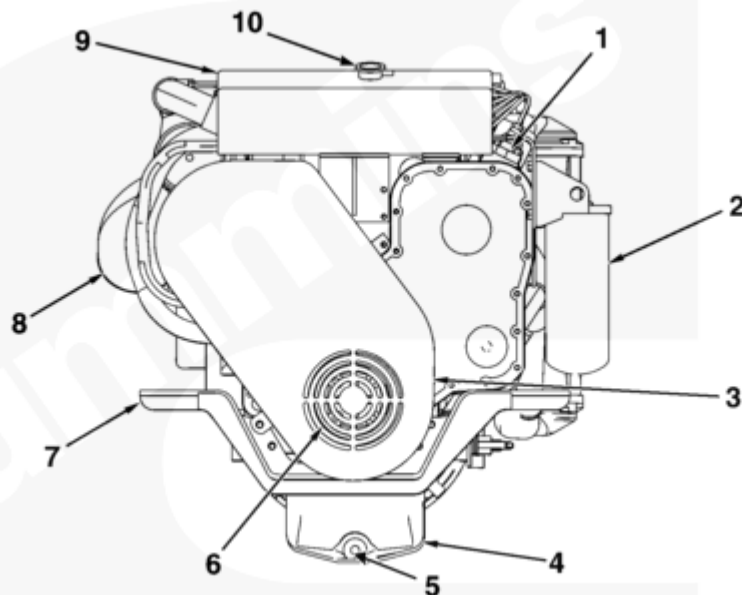

00900315

Front View, C Series, Six-Cylinder Sea Water Aftercooled 450C


1. Fuel pump
2. Remote mounted oil filter (optional)
3. Belt guard
4. Oil pan
5. Engine oil drain, front
6. Vibration damper (behind cover)
7. Engine mount, front
8. Exhaust elbow
9. Expansion tank
10. Coolant fill.

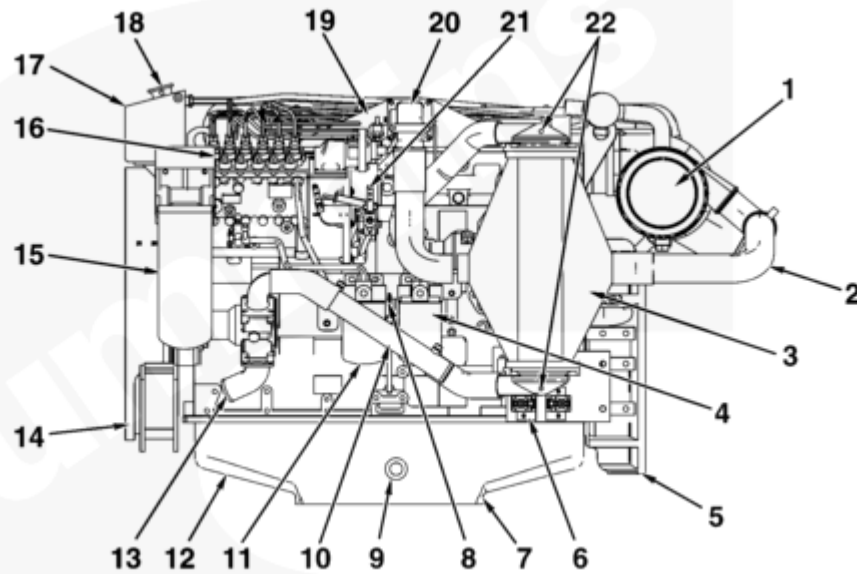

00900312

Port View, C 8.3, Six-Cylinder Sea Water Aftercooled 450C


1. Air cleaner
2. Inlet air crossover tube
3. Aftercooler (sea water-type)
4. Water (coolant) filter
5. Flywheel housing
6. Air heater control solenoids
7. Engine oil drain, rear
8. Dipstick (engine oil) port-side standard
9. Oil pan heater location (if equipped)
10. Fuel cooler
11. Fuel filter (standard)
12. Oil pan
13. Sea water pump inlet (rotatable)
14. Belt guard
15. Remote mounted oil filter (optional)
16. Fuel pump
17. Expansion tank
18. Coolant fill
19. Stop lever
20. Air heater
21. Throttle lever
22. Zinc plugs (aftercooler).

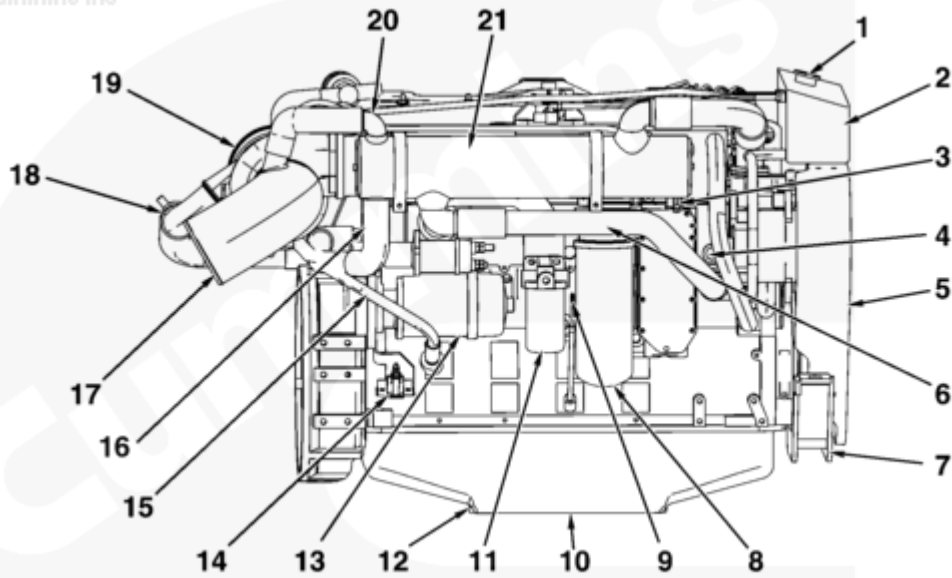

00900313

Starboard View, C 8.3, Six-Cylinder Sea Water Aftercooled 450C

1. Coolant fill
2. Expansion tank
3. Zinc plug (heat exchanger)
4. Coolant temperature sensor (coolant drain)
5. Belt guard
6. Heat exchanger coolant outlet tube
7. Engine mount (front)
8. Engine oil filter
9. Engine oil dipstick (optional starboard-side)
10. Oil pan
11. Fuel filter (optional starboard-side)
12. Engine oil drain, rear
13. Starter
14. Starter auxiliary magnetic switch
15. Turbocharger oil drain tube
16. Sea water inlet to heat exchanger
17. Exhaust outlet elbow
18. Inlet air crossover tube
19. Turbocharger (water cooled)
20. Sea water outlet to exhaust
21. Heat exchanger.

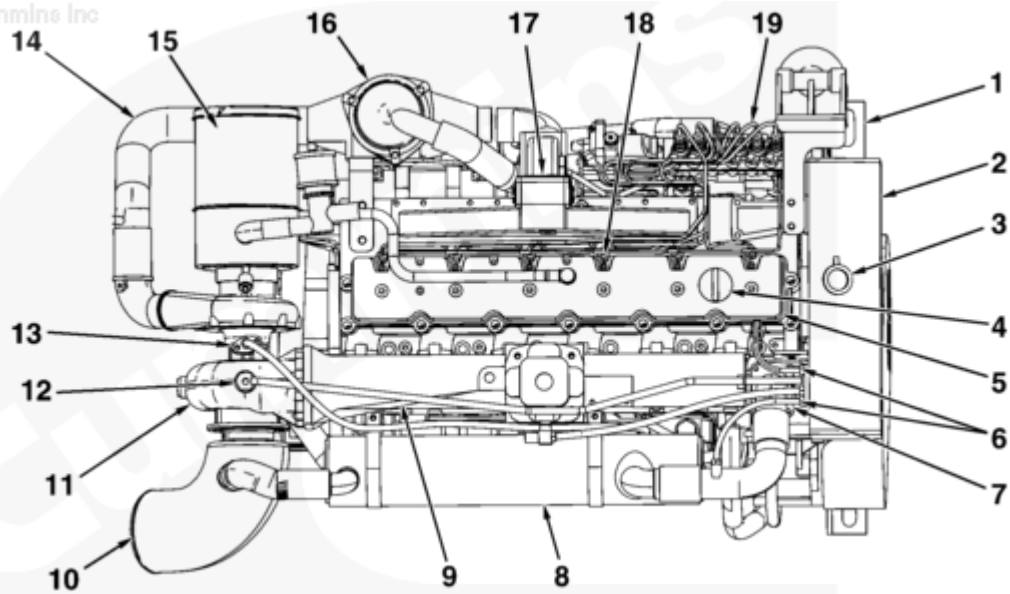

00900314

Top View, C Series, Six-Cylinder Sea Water Aftercooled 450C

1. Engine mount (front)
2. Expansion tank
3. Coolant fill
4. Engine oil fill
5. Valve cover
6. Coolant vent line connections
7. Coolant thermostat location
8. Heat exchanger
9. Exhaust manifold (water cooled)
10. Exhaust outlet elbow
11. Turbocharger (water cooled)
12. Turbocharger coolant vent line
13. Turbocharger oil inlet
14. Inlet air crossover tube
15. Air filter
16. Aftercooler (sea water-type)
17. Air heater
18. Fuel injector
19. Fuel pump.