


Trainings ▾

General Information

The following recommendations are to prepare the engine for winter storage. **Not** all recommendations will apply to all applications. **Always** follow the manufacturer's recommendation on components **not** manufactured by Cummins Inc.

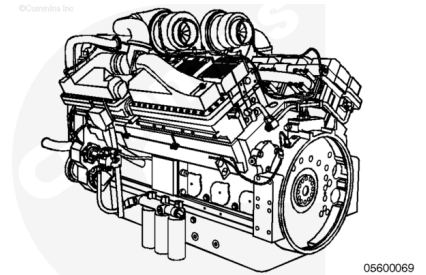

Marine Applications


Fill the tank with good quality ASTM number 2D climatized diesel fuel.

Change the fuel filter. Refer to Section 4.

Change the boat fuel-water separator element. Refer to Section 3.


Change the engine lubricating oil and filters. Refer to Section 4.

Treat the fuel with diesel conditioner or algaecide to prevent the growth of algae in the fuel tank.

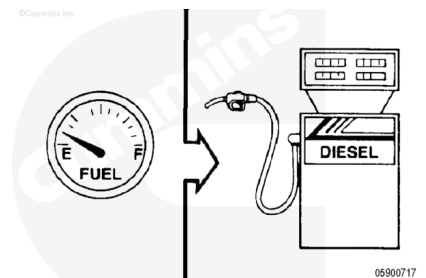

⚠ CAUTION ⚠

Do not run the engine with the sea water valve closed. This can damage the sea water pump and the engine. It is good practice to disable the engine or to place a tag at the helm(s) when the sea water valve is closed.

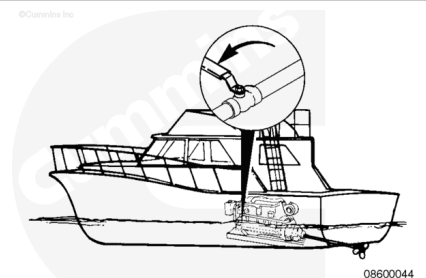

If the vessel is stored in the water, close the sea water valve on the vessel hull.


Drain the sea water system.

Remove the drain plug on the marine gear cooler.


Remove the zinc anodes from the heat exchanger and the aftercooler. Refer to Section 4.

Remove the drain plug from the air box side of the sea water aftercooler, if equipped.


Remove the engine sea water hoses to drain sea water from the engine.

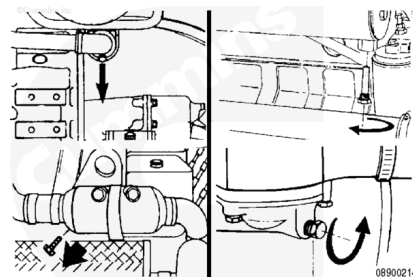

Remove the inlet and outlet hoses from the heat exchanger.

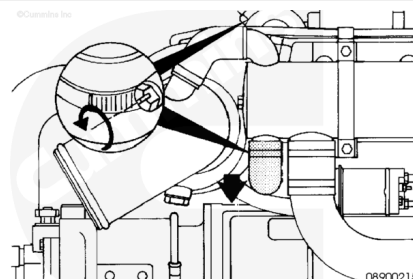


Remove the inlet and outlet hoses from the sea water pump.

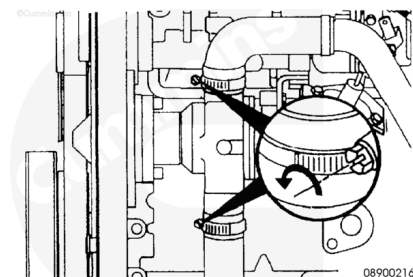

There are two different types of pumps. Use the appropriate procedure for the type of pump used.


Remove and inspect the sea water pump impeller. Refer to the manufacturer's instructions.

If the sea water pump impeller is damaged or **not** reusable, do **not** install a new sea water pump impeller until the vessel is ready to be used.

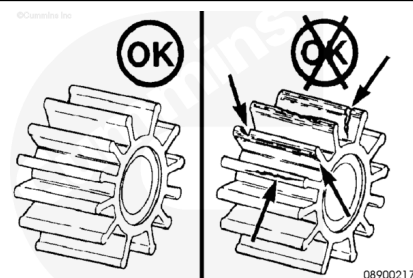

⚠ CAUTION ⚠


Do not expose the sea water pump impeller to sunlight, fluorescent lighting, or any source of ultra-violet light for an extended period of time. This will cause damage the sea water pump impeller.

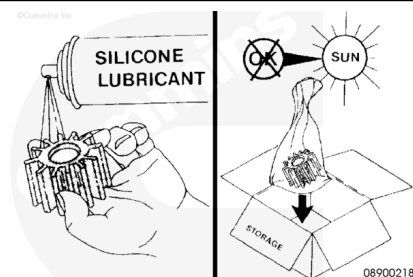


The sea water pump impeller **must** be lubricated with glycerin or a nonpetroleum-based lubricant such as silicon spray.

Store the sea water pump impeller for the season in a polyethylene bag in a location void of sunlight, fluorescent light, or any other source of ultraviolet light.

Install the zinc anodes in the heat exchanger and aftercooler. Refer to Section 4.

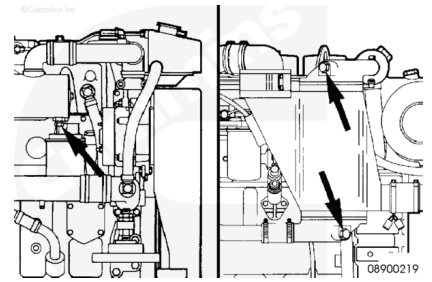


Loosen the heat exchanger sea water outlet clamps (1 and 2). Rotate the sea water outlet connection to a vertical position (3).

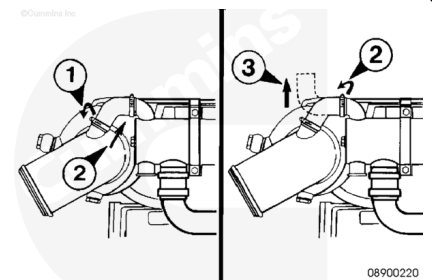

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

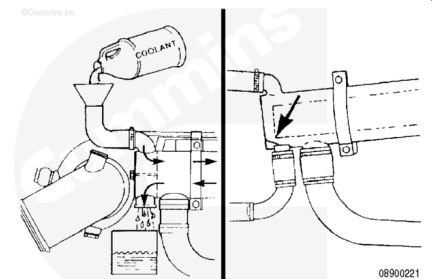

Place a container under the heat exchanger sea water inlet.


Pour the coolant, a 50/50 mixture of antifreeze and water, through the heat exchanger.

Do **not** allow excess coolant to drain into the bilge.


Rotate and connect the sea water outlet connection to the exhaust elbow (1).

Tighten the hose clamps (2).

Torque Value: 5 n•m [44 in-lb]

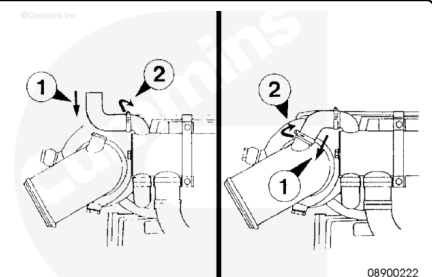


Empty the sea water stainer. Refer to Section 3.

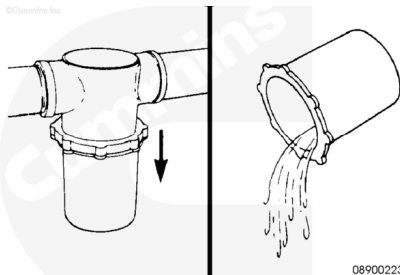

08900223


Perform the recommended maintenance procedures on the marine gear. Refer to the manufacturer's recommendations and specifications.

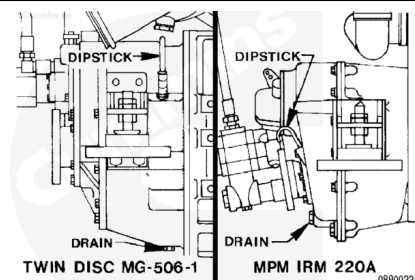

08900224

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

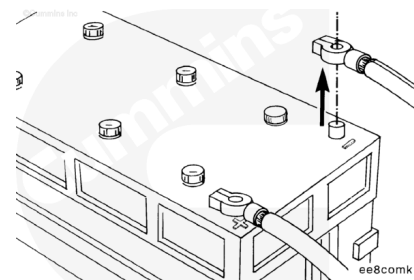

ee8comk

Disconnect and remove the battery. Refer to the manufacturer's instructions.