


Trainings ▾

Remove with Mechanically Actuated Injector

Remove the mounting capscrews from the rocker lever cover.


Remove the rocker lever cover and gasket.

Discard the gasket.

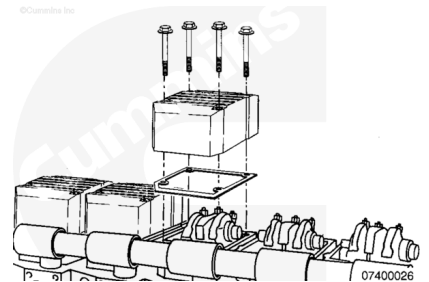


with Electronically Actuated Injector


Disconnect the electrical connectors for the injector and exhaust gas temperature sensor.

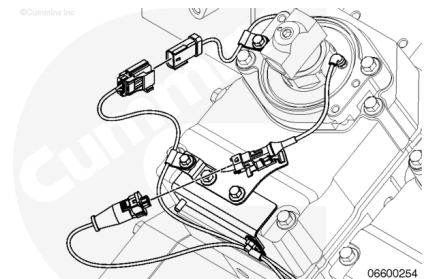


Remove the two P-clips securing the wiring harness to the rocker lever cover.

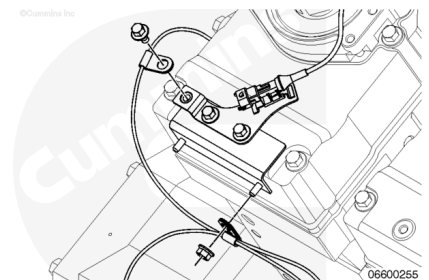


Remove the injector wiring harness from the rocker cover bracket by using a small flat tip screwdriver to release the locking mechanism.

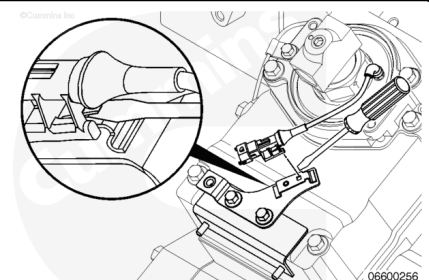


Remove the two capscrews securing the two brackets to the rocker lever cover and remove the brackets.

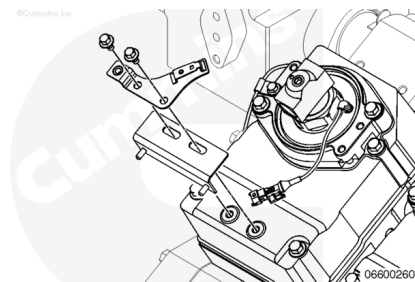


Remove the P-clip securing the exhaust gas temperature sensor wire to the injector cover plate.

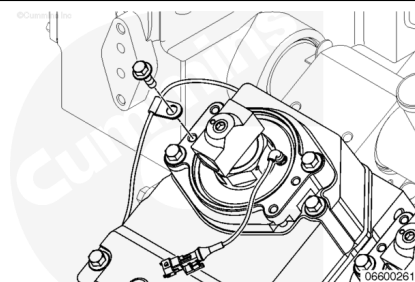


If equipped with a turbocharger speed sensor, remove the four capscrews securing the brackets to the rocker lever cover plate (left bank rear most cylinder).

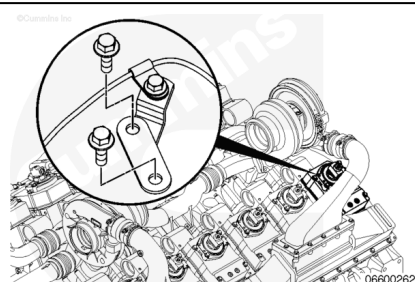


Remove the two capscrews securing the injector cover plate to the rocker lever cover and remove the injector cover plate. Pry injector cover plate evenly on opposite sides using a heel bar.
Remove the o-ring seal from the rocker lever cover plate and discard it.

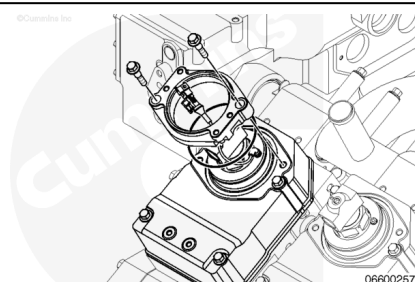

Remove the four capscrews securing the rocker lever cover.
Remove the rocker lever cover and gasket.
Discard the old gasket.

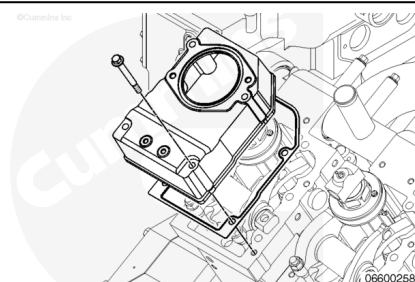

Install the cylinder head protective cover, Part Number 4918282, in the hole located between the push tubes to prevent debris from entering the engine while the rocker lever cover is removed.

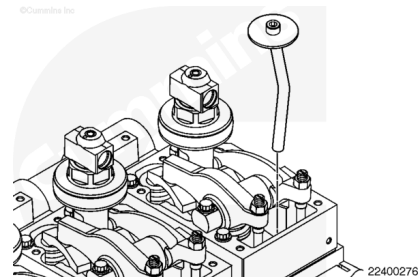

Install

with Mechanically Actuated Injector


⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

Install a new gasket, rocker lever cover, and mounting capscrews.


Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

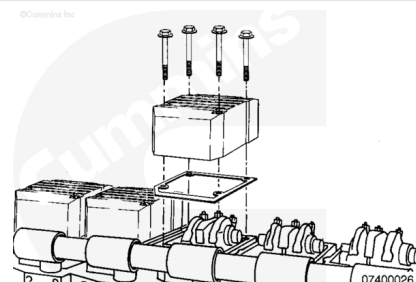

with Electronically Actuated Injector

Remove the cylinder head protective cover from the push tube hole.

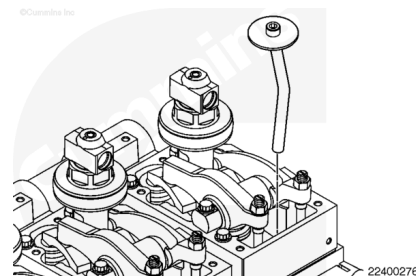


⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

Install the new rocker lever cover gasket and the rocker lever cover.

Install the rocker lever cover capscrews and tighten.

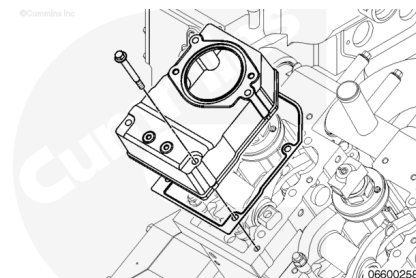

Torque Value:


Rocker Lever Cover Capscrews

1. 40 n•m [30 ft-lb]

If the injector cover plate's dust seal was damaged and needs to be replaced, lubricate the new dust seal with clean engine oil.

Tap the seal into place using a soft rubber mallet.

Check that the smooth side of the seal is facing upward and the side with the groove is facing downward.

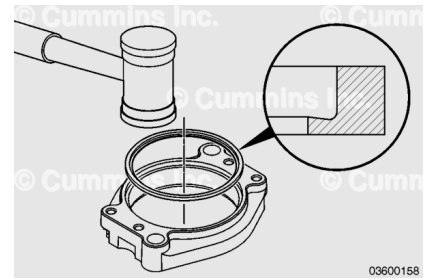


Lubricate the large o-ring and damper on the injector with clean engine oil. The engine oil will protect the o-ring and damper during the installation of the rocker lever cover plate.

Install the new o-ring on the rocker lever cover plate.

Install the rocker lever cover plate on the injector and tap it into place with a soft rubber mallet.

Install the rocker lever cover plate capscrews and tighten.

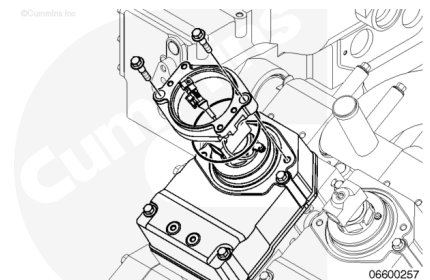**Torque Value:**

Rocker Lever Cover Plate Capscrews


1. 40 n•m [30 ft-lb]

If equipped with a turbocharger speed sensor, install the four capscrews securing the brackets to the rocker lever cover plate (left bank rear most cylinder).

Torque Value:

Turbocharger Speed Sensor Bracket Capscrews

1. 20 n•m [177 in-lb]

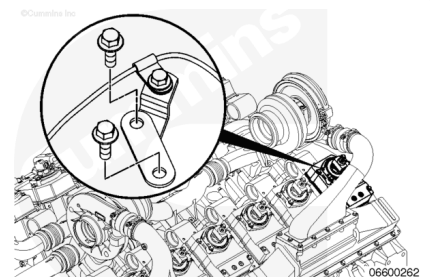


Install the P-clip securing the exhaust gas temperature sensor wire to the injector cover plate.

Torque Value:

Exhaust Gas Temperature Sensor P-clip Capscrews

1. 20 n•m [177 in-lb]

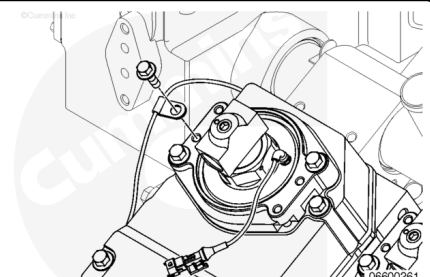


Install the two brackets and capscrews that retain the injector and exhaust gas temperature sensor connectors.

Torque Value:


Sensor Bracket Capscrews

1.20 n•m [177 in-lb]

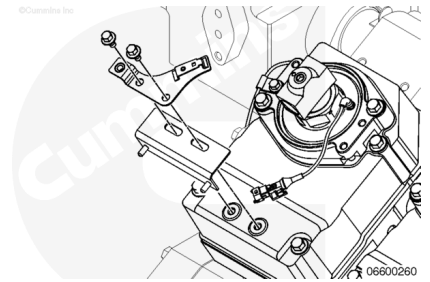

Install the injector wiring harness connector to the bracket by sliding it onto the bracket until the connector locks into position.

If the locking fixture on the connector is missing, use a cable tie, Part Number 3822924, or equivalent, to secure the wiring harness to the bracket.

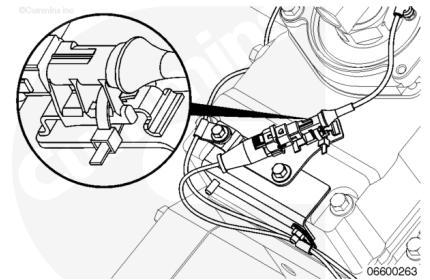


Install the two P-clips securing the wiring harness to the rocker lever cover brackets.

Torque Value:

P-clip Capscrews

1.20 n•m [177 in-lb]

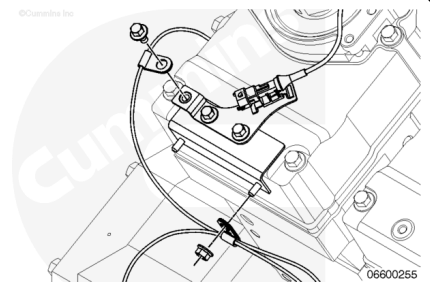

Connect the electrical connectors for the injector and exhaust gas temperature sensor.

