


Trainings ▾

Maintenance Check

⚠ CAUTION ⚠

Engine damage may occur if the Emergency Stop Button is pressed with the engine running.

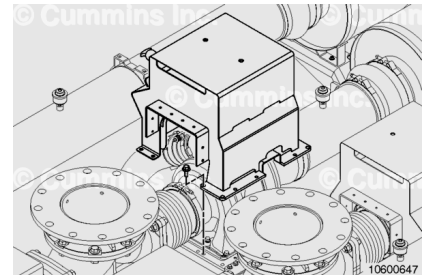

Turn the keyswitch to the ON position.

With the engine OFF, press the emergency stop button on the panel.

Check that the valve closes by observing the linkage movement on the valve body. The valve will close momentarily and then reopen.


If the valve is actuated during engine operation, the valve will close and remain closed while the engine is pulling in air. The time the valve remains closed will depend on the operating conditions of the engine.

Note : If the valve is **not** operating correctly, contact a Cummins® Authorized Repair Location.

Clean and Inspect for Reuse

Inspect the hump hose and all clamps.

Replace any damaged parts.

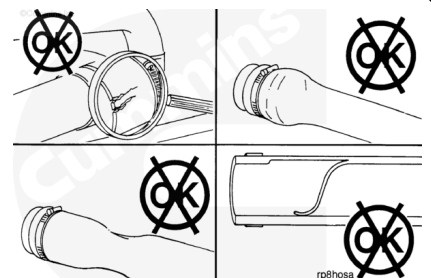


Inspect the v-band clamp to make sure the pin is intact.

Replace the clamp if any part of it is damaged.

Inspect the keyways on the air crossover and air shutoff valve body.

If either part is damaged, replace the damaged part.

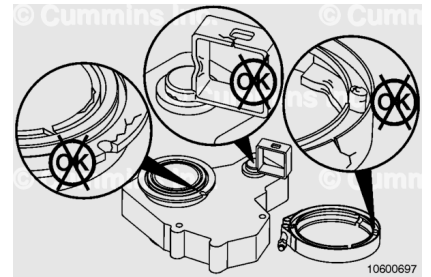


Inspect the valve body for cracks or other damage.

Rotate the linkage bar by hand to make sure that the valve moves freely. The valve body has a cast arrow showing the direction of operation from run (normally open) to stop (closed) positions.


Replace the entire valve assembly if any damage is found or if the valve does **not** move freely.

If the seal element does **not** completely close, go to the Assemble section and check alignment.

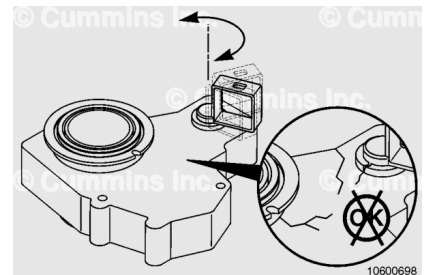


Inspect the solenoid by checking the resistance: 0.86 to 1.06 ohms.

Replace the solenoid if the resistance is outside of the specification.

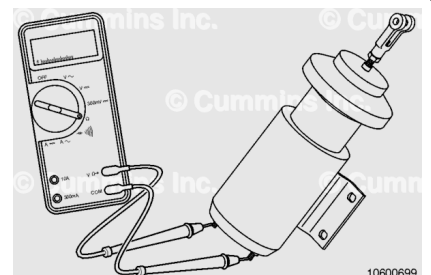


Inspect the clevis and spring, clevis pin, and solenoid shaft for damage.

Replace the solenoid if damage is seen.

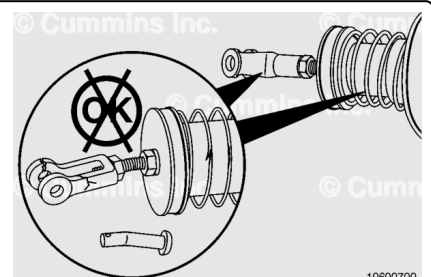


Check for damage to the slotted hole in the linkage bar.

If damage is found, the valve body **must** be replaced.

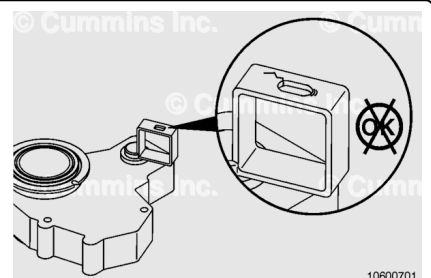

Inspect the rubber boot on the solenoid.

Replace the boot if torn, cracked, or otherwise damaged.

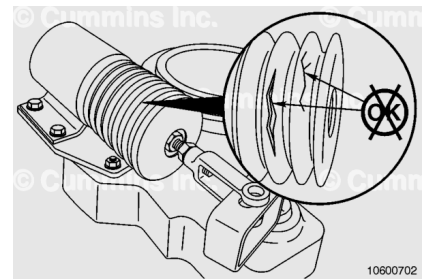

Inspect the solenoid mounting bracket for damage.

Replace the bracket if the mounting holes are worn or if the bracket is bent.

