


Trainings ▾

Cummins® Engine Nomenclature

The model name provides identification data for the engine.
Use the illustration for the model name identification.

The application codes are:

- C = Construction**
- D = Generator Drive**
- L = Locomotive**
- M = Marine**
- P = Power Unit.**

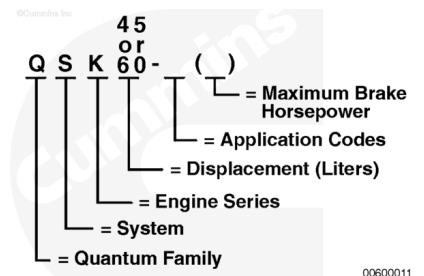


Engine Dataplate

The engine dataplate shows specific information about your engine.

- Engine serial number (ESN)
- Control parts list (CPL)
- Horsepower
- RPM.

Note : The engine dataplate **must not be changed unless approved by Cummins Inc.**

The dataplate on the QSK45 and QSK60 engines is located at the rear of the engine block opposite the starter.

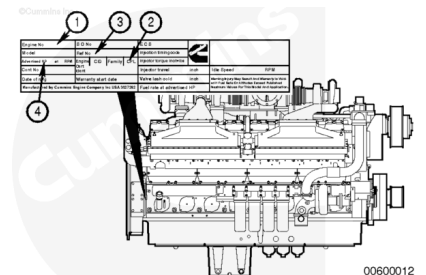


Fuel Injection Pump Dataplate

with Electronically Actuated Injector


The Cummins® Modular Common Rail System dataplate is located on the side of the high pressure fuel pump. The dataplate contains the following information:

1. Serial number
2. Date code
3. Cummins® part number.

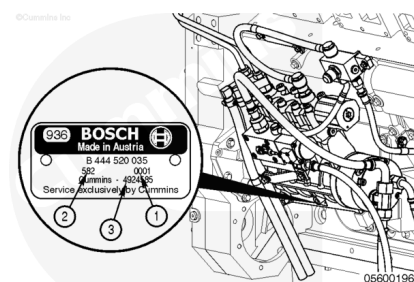

with Mechanically Actuated Injector

The fuel pump dataplate is located on the top of the fuel pump. It provides information needed to calibrate the fuel pump.

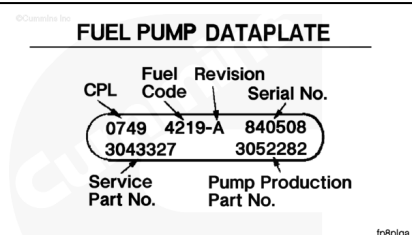


ECM Dataplate

with Electronically Actuated Injector

The external ECM dataplate is located on the front of the ECM.

The following information is found on the ECM dataplate:

- ECM part number (P/N)
- ECM serial number (S/N)
- ECM data code (D/C)
- Engine Serial Number (ESN)
- ECM code (identifies software in the ECM)

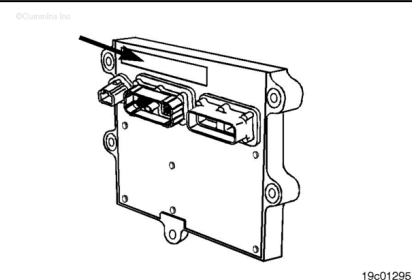


with Mechanically Actuated Injector

The external ECM dataplate is located on top of the ECM.

The dataplate contains the following:

- ECM part number (P/N)
- ECM serial number (S/N)
- Manufacturer date code (D/C)
- Supplier identifier (S/I)
- Input voltage rating of the ECM (V/R).

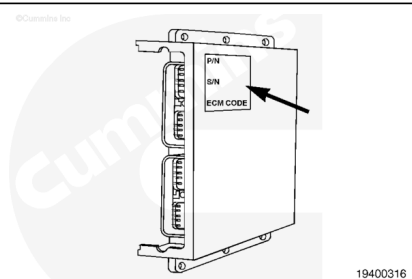

The dataplate on the right contains engine and calibration information. This includes the engine serial number (ESN), ECM calibration date (Date), and ECM calibration code.

Last Modified: 15-Jul-2005
