

Trainings ▾

Ether Starting Aids

⚠ WARNING ⚠

Because of the potential for an explosion, do not use volatile cold starting aids in underground mine or tunnel operations. Ask the local U.S. Bureau of Mines inspector for instructions.

⚠ WARNING ⚠

Do not use volatile cold starting aids in marine applications due to the potential of an explosion.

⚠ WARNING ⚠


Starting fluid is high flammable and explosive. Keep flames, sparks, and arcing switches away from starting fluid.



Ether Valve, Manual


The manually operated ether valve includes the valve body assembly (5), clamp (2), and nylon tube (3). The fuel cylinder (1), atomizer fitting (4), and pull control (6) **must** be ordered separately.

Standard pull or throttle control cables can be used to actuate the manual valve, if desired.

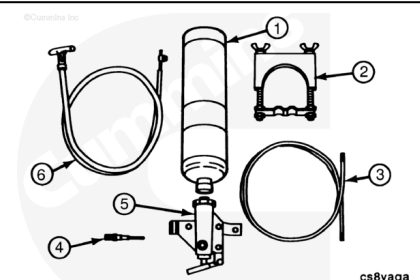

Ether Valve, Electric

The electrically operated ether valve includes the valve body (7), 90-degree elbow (5), clamp (2), push button switch (6), and nylon tube (3). A thermostat is mounted to the cylinder block or coolant passage and stops electrical power to the atomizer solenoid when the engine is warm. Contact a Cummins Authorized Repair Facility for fuel cylinder (1) and fuel atomizer fittings (4). These fittings **must** be ordered separately, as required.

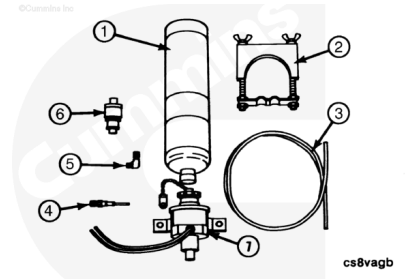

Install

General Information

The atomizer fittings **must** be mounted in the engine air intake crossover tube (1) to provide an equal distribution of starting fuel to each cylinder.

