


Trainings ▾

Maintenance Check

Check the lubricating oil heater for proper operation. If operating properly, the oil pan will be warm.

Inspect for loose connections, frayed wires, and oil leaks. Repair or replace as needed.

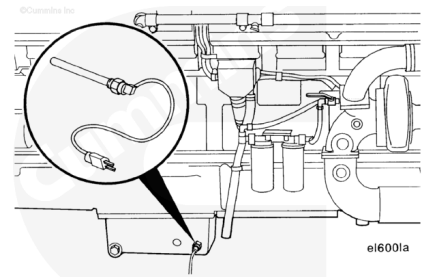

Check the coolant preheater for proper operation.

Check for loose connections, frayed wires, and coolant leaks.

Clean all alkali and sludge from the unit. Clean the scale from the copper heating element with a wire brush.

The outlet connection from the coolant heater will experience a large number of thermal cycles and, therefore, **must** be of high quality with specific operating capabilities.

Replacement hose material for the coolant heater to the block hose connection **must** be a polyester-reinforced silicone rubber material, capable of 120°C [248°F] temperatures and a minimum working pressure rating of 689 kPa [100 psi].

