


Trainings ▾

Remove

Remove the crossheads.

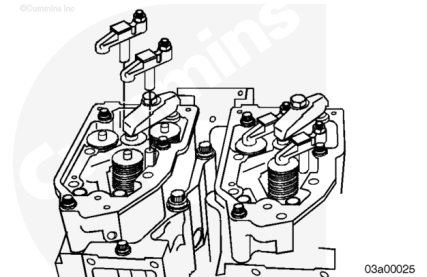


Install

Lubricate the crosshead stems with clean engine oil.

Subassembly and adjustment screw and nut onto the crosshead with flat side of the nut facing the crosshead.

Install the crosshead as shown.

Adjust the crosshead.

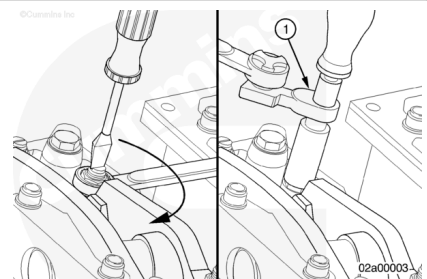

- Loosen the locknut, and take the tension off the adjustment screw.
- Holding the crosshead in place, tighten the adjustment screw until contacts the valve stem.
- Tighten an additional 20 degrees to remove any residual oil in the cup of the crosshead and ensure proper valve lash.
- Tighten the locknut.

Torque Value: 59 n·m [43 ft·lb]

