


Trainings ▾

General Information

⚠ CAUTION ⚠

Installing a banjo connector instead of an overflow/pressure regulator valve can result in internal damage to the fuel pump and possible fuel dilution of the oil.

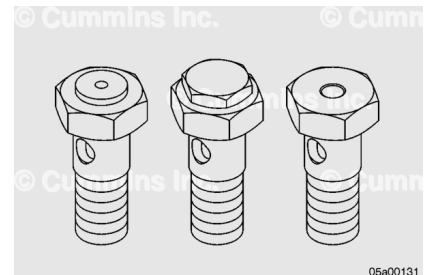


Note : A faulty or damaged regulator valve on one bank can cause fuel dilution on either bank. Make sure both regulator valves are in proper working order on the engine.


The overflow/pressure regulator valve serves the function of maintaining the proper fuel pressure within the fuel injection pump fuel gallery. Multiple designs exist in the field.

Remove

Remove the overflow/pressure regulator valve and sealing washers at location (1) from the EHAB device. The valve is removed the same as a standard banjo connector.

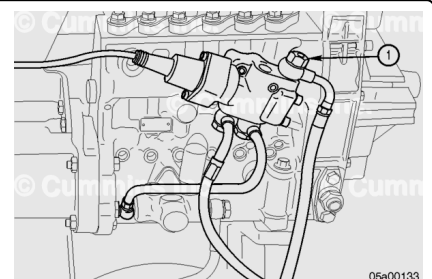

Remove the overflow/pressure regulator valve and sealing washers at location (1) from the injection pump housing. The valve is removed the same as a standard banjo connector.

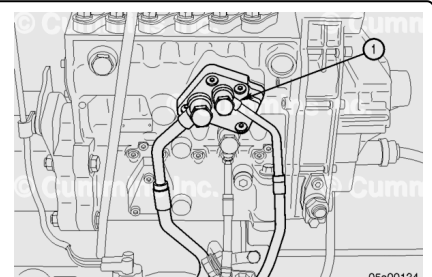

Clean and Inspect for Reuse

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.



fs9vaea

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ CAUTION ⚠

Use a cleaning solvent that will not harm aluminum.

Thoroughly flush the overflow/pressure regulator valve with solvent.


Note : A damaged overflow/pressure regulator valve will result in low engine power, hard starting, and one-bank operation.

Inspect for damage to the threads or banjo connector body.

Use a small screwdriver or probe to verify that the valve is **not** sticking.

Replace the overflow/pressure regulator valve, if necessary.

Note : Fuel pressure regulator specification: 3 +/- 0.13 bar or 43.5 +/- 2.0 psi.

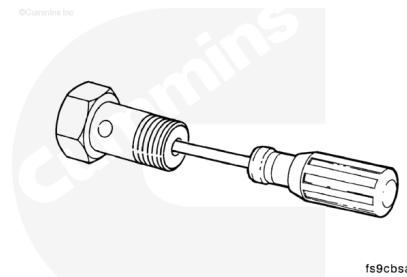


fs9cb5a

Install

Note : The installation process is the same for either an EHAB device or the fuel pump housing (illustrated).

The overflow/pressure regulator valve (2) is a 14 mm fitting and can **only** be installed in the appropriate location in the housing.

Install the overflow/pressure regulator valve with two new sealing washers. One sealing washer (1) **must** be between the valve (2) and the connector (3), and one sealing washer (1) **must** be between the connector (3) and the housing (4).

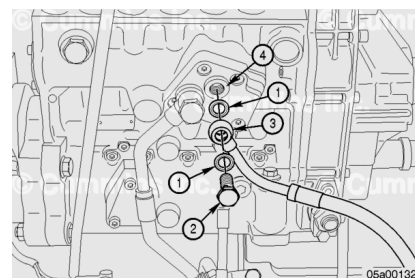

Overflow/Pressure Regulator Valve Fittings		
n.m		ft-lb
30	NOM	22

The overflow/pressure regulator valve and sealing washers are at location (1) on the EHAB device. The overflow/pressure regulator valve (1) is **always** located the farthest from the electrical pigtail connection (2).

