

Trainings ▾


Inspect for Reuse

Engine-to-Fuel Tank

Inspect the inside of the hose.

- The inner lining of the hose can separate from the center hose section.
- A separation of flap can cause a restriction in the fuel flow.

Make sure that the hose does **not** have pinches or loops that would obstruct the flow.

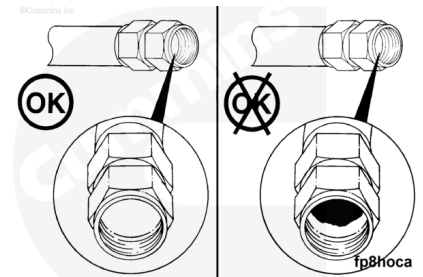


Fuel Drain Lines - Inspect

Inspect the fuel line for cracks that can cause a loss of pressure.

Inspect the fuel line for sharp bends that can cause a restriction in pressure.


Refer to Procedure 006-024 in Section 6 (</qs3/pubsys2/xml/en/procedures/57/57-006-024-tr.html>) for removal and installation of fuel drain lines.

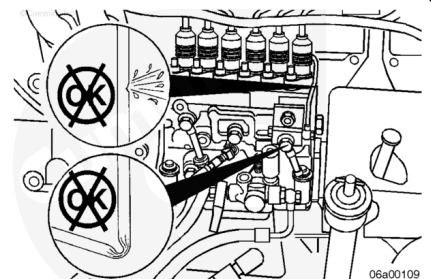

Fuel Drain Manifold - Inspect


Inspect the fuel drain manifold for cracks or visible damage. The manifold **must** be replaced if it is cracked or damaged.

Refer to Procedure 006-021 in Section 6 (</qs3/pubsys2/xml/en/procedures/57/57-006-021-tr.html>) for removal and installation of fuel drain manifold lines.

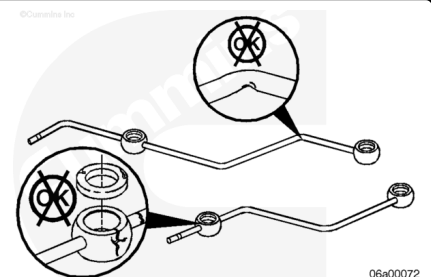


Inspect the sealing surfaces for leak paths.

The manifold **must** be replaced if the sealing surfaces are damaged.

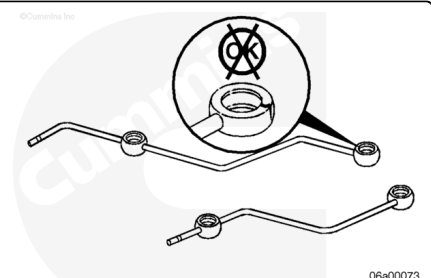


Inspect the rubber seals. Replace any damaged seals and any seals that are hard or brittle.

Service Tip: Lubricate the seals with clean engine oil to facilitate the installation.

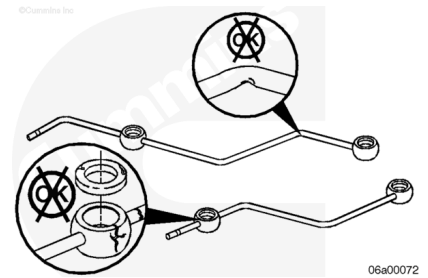

Inspect the rubber seals. Replace any damaged seals and any seals that are hard or brittle.


Service Tip: Lubricate the seals with clean engine oil to facilitate the installation.

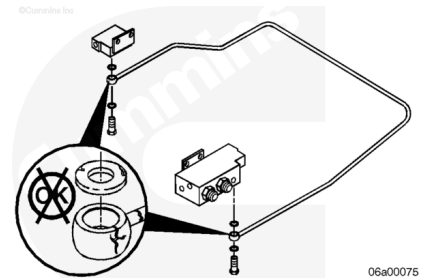

Fuel Drain Manifold Jumpers - Inspect

Check the rubber jumper tubes for cracks and other damage.

If cracking or weather damage is questionable, perform a vacuum test on the jumper tubes to assess for reuse.

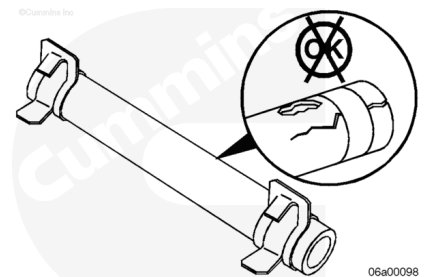


Fuel Drain Manifold Jumpers - Vacuum Test

Use a vacuum gauge to test the fuel drain manifold jumpers.

Vacuum-test between 8 and 10 psi for 30 seconds.

There **must** be no movement of the vacuum gauge needle.

If the fuel drain manifold jumpers fail the vacuum test, replace them.

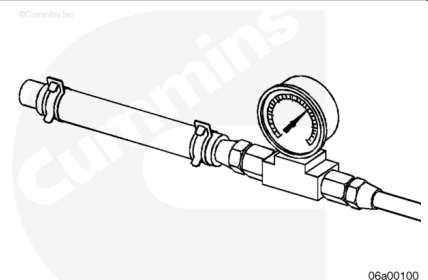


Install

Engine-to-Fuel Tank

Install and tighten the drain hose at the main fuel connection block.

Torque Value: 23 n•m [204 in-lb]

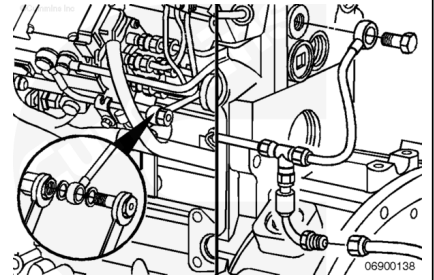

Fuel Drain Line

If the fuel drain line has been removed, install and tighten the line. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/57/57-006-024-tr.html>).

