

Trainings ▾


General Information

The replacement of fuel supply lines, fuel filters, fuel lift pump, fuel injection pump, or injectors allows air into the fuel system. Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the fuel filters or fuel injection pump supply line will be vented automatically if the fuel filter is changed in accordance with the instructions. Air in the system can make the engine hard to start, run rough, misfire, produce low power, or can cause excessive smoke and knock. A few bubbles exiting the line during the Air-in-Fuel Test is expected. A foamy or milky appearance is an indication air entering the system. If excessive air is introduced into the fuel system during this procedure and a no start condition exists, the fuel system will need to be primed. Refer to Procedure 005-234 (</qs3/pubsys2/xml/en/procedures/57/57-005-234.html>) in Section 5 to prime the fuel system.


The fuel filter **must** be replaced every 250 hours or 6 months, whichever comes first.

Clean the area around the fuel filter head and filter.

Remove the fuel filter with filter wrench, Part Number 3397929.

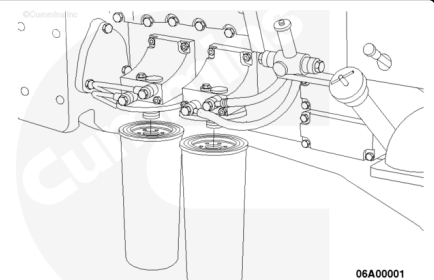

Use a clean, lint-free towel to clean the filter head gasket surface.

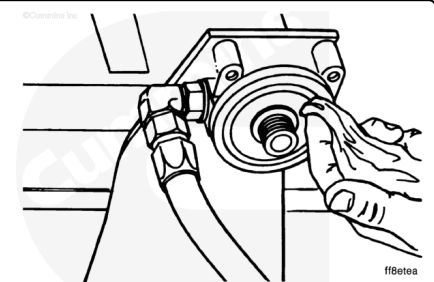


Remove


The fuel filter **must** be replaced every 250 hours or 6 months, whichever comes first.

Clean the area around the fuel filter head and filter.

Remove the fuel filter with filter wrench, Part Number 3397929.

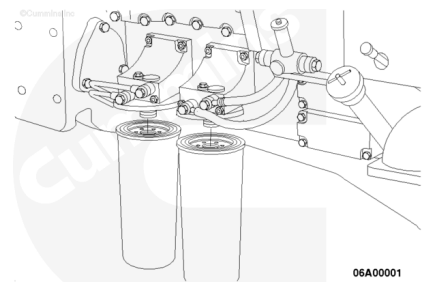

Use a clean, lint-free towel to clean the filter head gasket surface.

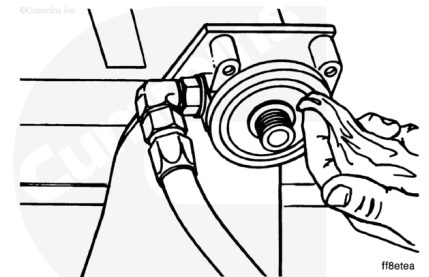

Install


Apply a light film of clean engine oil to the filter gasket surface.

Fill the filter(s) with clean fuel.



⚠ CAUTION ⚠

To reduce the possibility of fuel leaks, make sure the fuel filter is installed tightly. However, mechanical overtightening of the filter can distort the threads or damage the filter element seal.

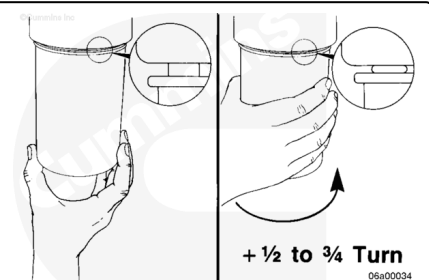

Install the filter on the filter head. Turn the filter until the gasket contacts the filter head surface.

Tighten the filter an additional one-half to three-fourths of a turn after the gasket contacts the filter head surface, or as specified by the filter manufacturer.

Last Modified: 11-Oct-2021
