


Trainings ▾

Remove


The fuel filter **must** be replaced every 500 hours or 12 months, whichever comes first.

Clean the area around the fuel filter head and filter.

Remove the fuel filter with filter wrench, Part Number 3397929.

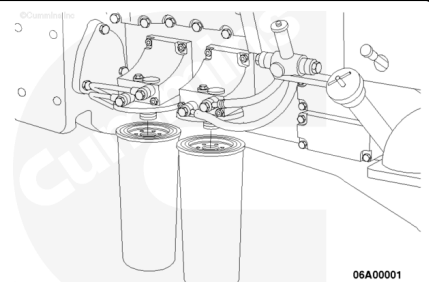

Use a clean, lint-free towel to clean the filter head gasket surface.

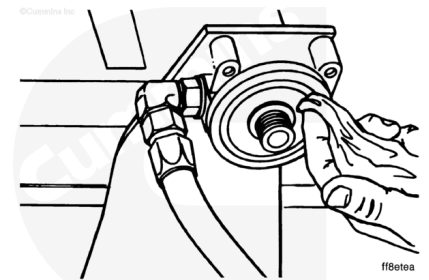

Install


Apply a light film of clean engine oil to the filter gasket surface.

Fill the filter(s) with clean fuel.



⚠ CAUTION ⚠

To reduce the possibility of fuel leaks, make sure the fuel filter is installed tightly. However, mechanical overtightening of the filter can distort the threads or damage the filter element seal.

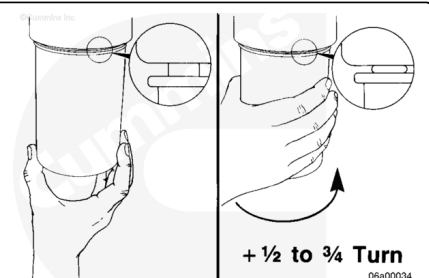

Install the filter on the filter head. Turn the filter until the gasket contacts the filter head surface.

Tighten the filter an additional one-half to three-fourths of a turn after the gasket contacts the filter head surface, or as specified by the filter manufacturer.

Last Modified: 26-Nov-2002
