

Trainings ▾


Remove

Clean the debris from the fuel drain manifold area.

Remove the banjo fitting capscrew (1) from the return line spill tube.


Refer to Procedure 006-013 in Section 6 (</qs3/pubsys2/xml/en/procedures/57/57-006-013.html>) to inspect fuel drain lines for reuse.

Note : The return line spill tube can be connected to a block connected to the fuel injection pump overflow (base-mount/open-drive system) or to the fuel transfer block mounted near the pan rail (flange-mount system).

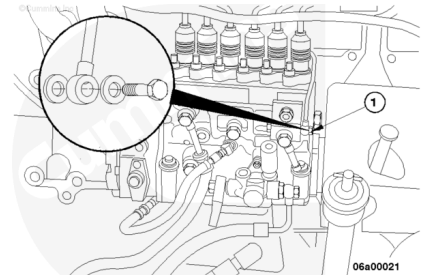

Remove the fuel drain manifold banjo capscrews from the rocker lever housings.

Note : Do not bend the manifold at the rubber “jumper” hoses of the three-piece manifold (early production). The hoses can be damaged, resulting in a fuel leak.

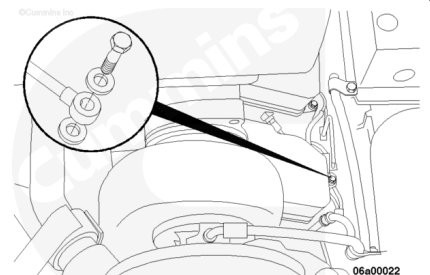


Install

Verify banjo fitting capscrew is clear of debris.

Install the fuel injector drain lines.

Torque Value: 7 n·m [62 in-lb]

Note : The single injector drain line that connects the injector drain manifold to the fuel connection block is connected to the number 5 cylinder for the right bank and to number 4 cylinder for the left bank.

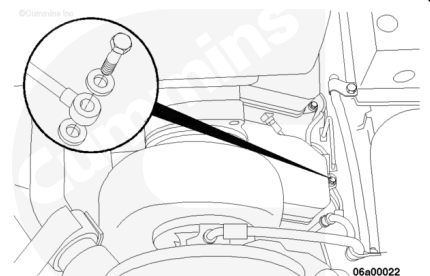

Verify banjo fitting capscrew is clear of debris.

Install the banjo fitting capscrew (1) to the return line spill tube.

Torque Value: 7 n•m [62 in-lb]

