

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools.

Additional Service Items

- Safety solvent.

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.

Remove

Loosen the alternator belt guard capscrew assemblies.


Remove the belt guard and capscrew assemblies.

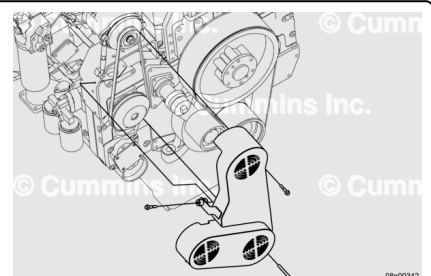

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

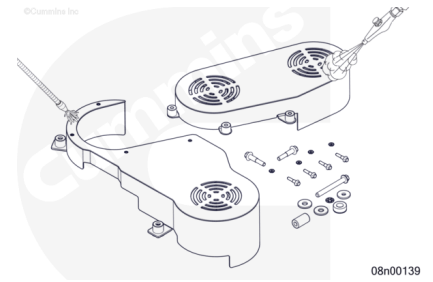

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the belt guard and capscrew assembly components.


Dry with compressed air.

Inspect the belt guards for cracks, bent tabs, and other damage.

Check for missing or damaged fasteners.


Replace any damaged or missing parts.

Inspect the isolators for damage. If the isolators are hard and brittle, they **must** be replaced.

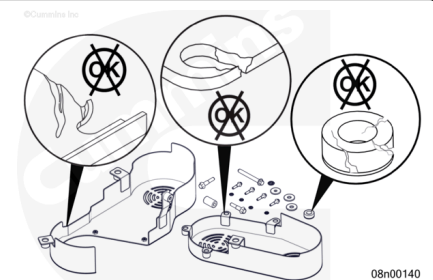


Install

For installation on new block capscrews **must** be removed from alternator bracket and from cover plate on gear cover.

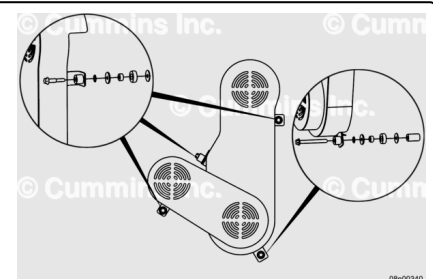


Install the capscrew assemblies onto the belt guard. The components **must** be in the order shown.

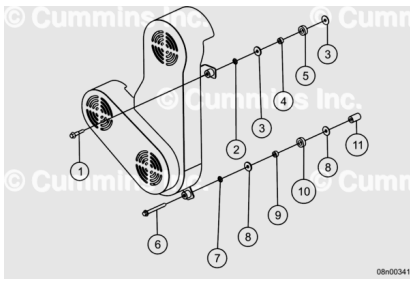

Install the alternator belt guard.

Tighten the capscrew assemblies.

Torque Value: 47 n•m [35 ft-lb]

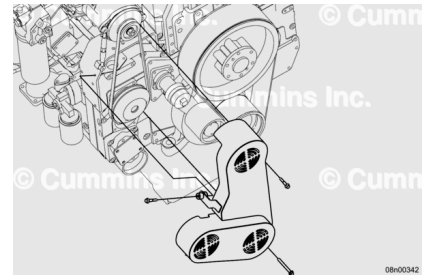

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for proper operation.