

Trainings ▾

Preparatory Steps

- Remove the cooling fan and spacers. Refer to Procedure 008-040 in Section 8.
(/qs3/pubsys2/xml/en/procedures/57/57-008-040-tr.html)


Note : In some applications the cooling fan drive belt is long enough to clear the fan blades and the removal of the fan and spacers is not required.

- Remove the cooling fan belt tensioner. Refer to Procedure 008-087 in Section 8.
(/qs3/pubsys2/xml/en/procedures/57/57-008-087-tr.html)

Remove

⚠ WARNING ⚠

To reduce the possibility of personal injury, keep hands, long hair, jewelry, and loose-fitting or torn clothing away from fans and other moving parts.

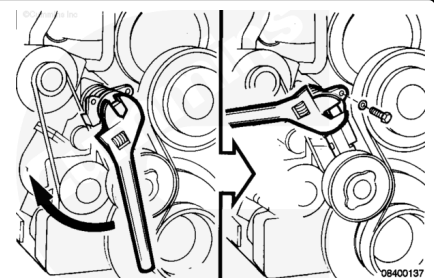


For engines that utilize a torsion spring in the fan drive idler arm assembly pivot, place a large wrench or an 8-point socket and breaker bar on the lug of the idler cap.


Hold the breaker bar against the spring tension and remove the capscrew.

Slowly allow the breaker bar to rotate back until the belt tension is relieved

For engines that do **not** utilize a torsion spring in the Fan Drive Idler Arm Assembly pivot, the belt tension will already be released.

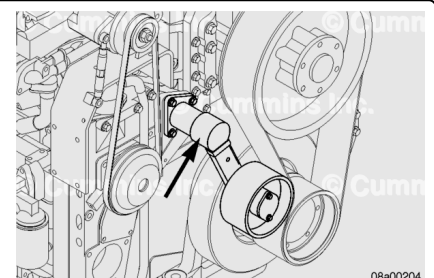

Remove the belt.

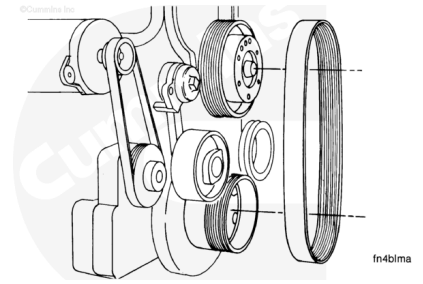


Inspect for Reuse

Inspect the tensioner assembly (1) and idler pulley (2) for any cracks or excessive wear.

If the parts are cracked or worn, they **must** be replaced.


- Make sure the idler pulley moves freely
- Make sure bearing operation is smooth and does **not** have any free play
- Inspect the idler pulley for damage or wear.

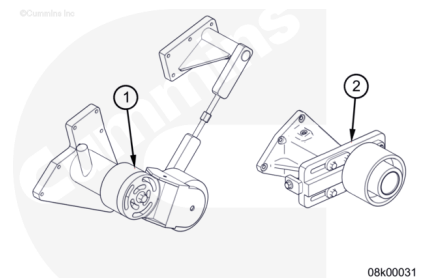

Inspect the belt for the following:


- Cracks
- Glazing
- Tears or cuts.

The fan belt must be replaced if damaged

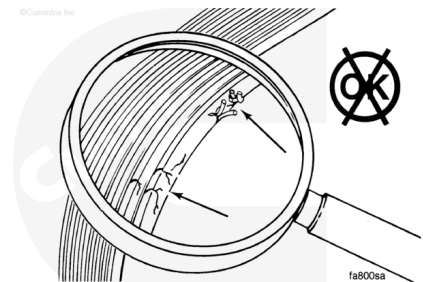

Install

Install the fan belt.

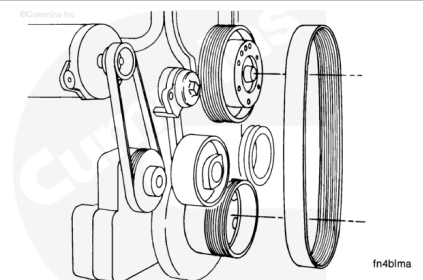


For engines with a torsion spring in the Fan Drive Idler Pivot Arm Assembly, place a large wrench or an 8-point socket and breaker bar on the lug of the idler cap.

Rotate the idler against the spring tension until the capscrew holes are aligned.

Install and tighten the capscrew.

Torque Value: 45 n•m [33 ft-lb]

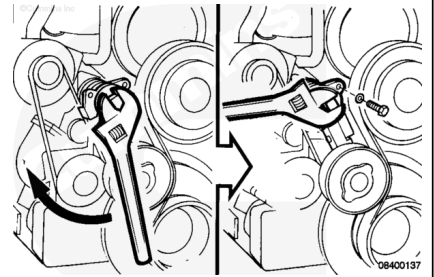

Finishing Steps

- Install and adjust the cooling fan belt tensioner. Refer to Procedure 008-087 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-087-tr.html>)
- Install the cooling fan and spacers. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-040-tr.html>)