

Trainings ▾

Remove


Install

Lubricate the seal on the new filter with clean engine lubricating oil.

Note : Do not allow oil to get in the filter; it will adversely affect the DCA.



Install the new coolant filter. Turn the filter until the seal touches the filter head. Turn the filter an additional 1/2 to 3/4 of a turn after contact.

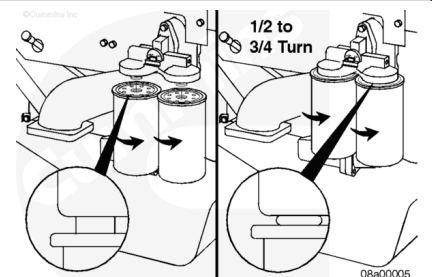

Open the valve (1) on the filter head.

