

Maintenance Check


Check the coolant heater (engine coolant preheater) for proper operation. Check for loose connections, frayed wires, and coolant leaks. Clean the alkali and sludge from the unit.

Check the lines which take coolant from the coolant heater to the engine block to determine that they are flexible. These lines normally consist of steel tubing connected with silicone hose.

Do **not** replace the silicone hose with normal radiator hose as it becomes too brittle and breaks.

Note : The outlet connection from the coolant heater will experience a large number of thermal cycles and thus must be of high quality with specific operating capabilities.

Replacement hose material for the coolant heater to the block hose connection **must** be a polyester reinforced silicone rubber material, capable of 120°C [250°F] temperatures and a minimum working pressure rating of 689 kPa [100 psi].

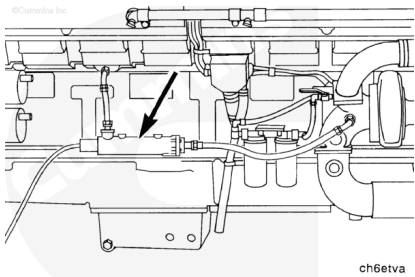

Measurements			
		celsius	fahrenheit
	Replaceme nt Temperatu re Capability	120	250

Measurements			
		kpa	psi
	Minimum Working Pressure Rating	689	100

