


Trainings ▾

Remove

Remove the thermostats from the housing. Refer to Procedure 008-013 (</qs3/pubsys2/xml/en/procedures/57/57-008-013.html>).

Remove the seals from the housing. Discard the seals.

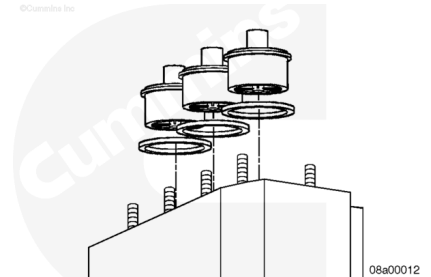

Install

Use a mallet and a mandrel, or a socket with a diameter the same as the diameter of the seal case. Install the seals. The seal **must** seat in the bottom of the counterbore.

