

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Contact cleaner, Part Number 3824510, or equivalent.

Additional Service Items

- No additional service items required.

Preparatory Steps


WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the cooling fan. Refer to Procedure 008-040 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-040-tr.html>).
- Remove the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-002-tr.html>)
- Remove the fan hub. Refer to Procedure 008-036 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-036-tr.html>).

Remove

Remove the capscrews and the fan hub bracket.

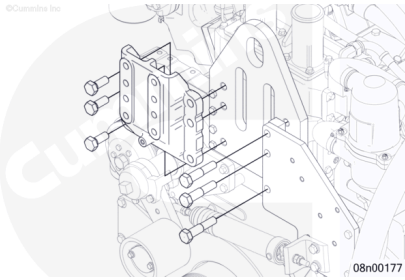


08n00177

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

©Cummins Inc.

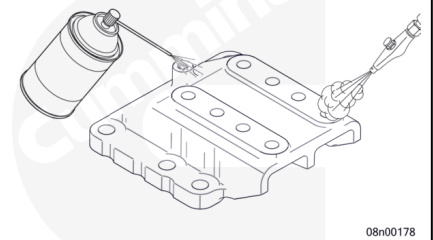

08n00178

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Clean the fan hub bracket contact cleaner, Part Number 3824510, or equivalent.

Dry with compressed air.

Check the fan hub bracket for cracks, fretting, and other damage.

Replace the fan hub bracket if damage is found.

©Cummins Inc.

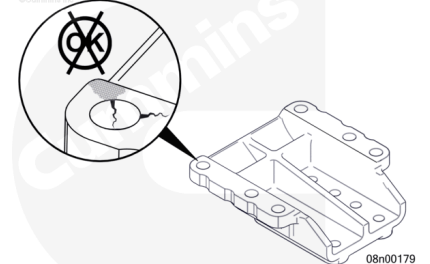

08n00179


Install

Install the fan hub bracket and capscrews.

Tighten the capscrews.

Torque Value:

1. 195 n•m [144 ft-lb]
2. 550 n•m [406 ft-lb]

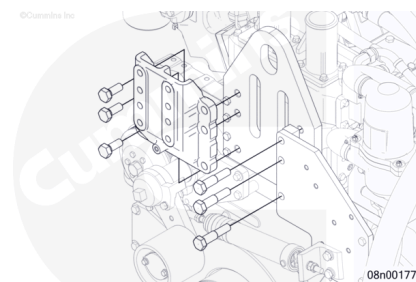

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the fan hub. Refer to Procedure 008-036 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-036-tr.html>).
- Install the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-002-tr.html>)
- Install the fan. Refer to Procedure 008-040 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-040-tr.html>).
- Operate the engine to 85°C [185°F] coolant temperature. Check for proper operation.