


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

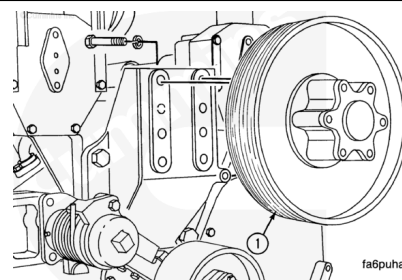


Remove the four capscrews, washers, and the fan hub assembly from the fan support.

Remove the fan hub assembly (1).

Install

⚠ WARNING ⚠

This component weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly..

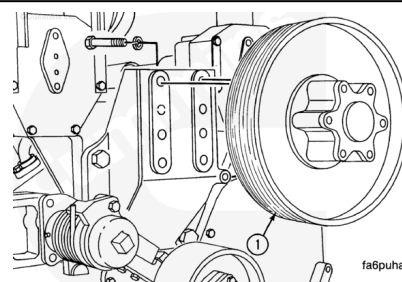

Install the fan hub assembly (1), and the four capscrews and washers, to the fan support.

Tighten the fan hub capscrews.

Torque Value: 180 n•m [133 ft-lb]

Note : Go to the fan option for fan hub centerlines and mounting locations.

