

## Trainings ▾

## Select Service Tools

### Recommended Cummins® Service Tools

- No recommended Cummins® service tools.

### Additional Service Items

- Gasket scraper.

## Preparatory Steps

### WARNING

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

### WARNING

**Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.**

### WARNING


**Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.**

- Disconnect the batteries. See equipment manufacturer service information.
- Drain the cooling system to a level below the thermostat housing. Refer to Procedure 008-018 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>).
- Disconnect the radiator hoses from the low-temperature aftercooler (LTA) coolant outlet connections. See equipment manufacturer service information

## Remove

Remove the capscrews, LTA water outlet connection, cover plate, and gaskets.


Discard the gaskets.

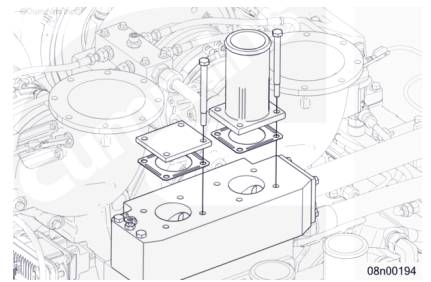

## Clean and Inspect for Reuse

### **⚠ WARNING ⚠**

**When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.**

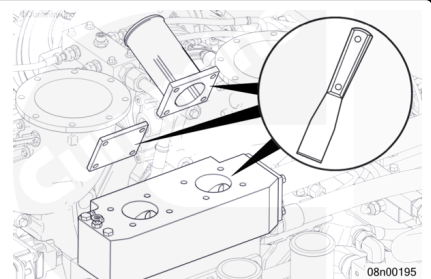

### **⚠ WARNING ⚠**

**Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.**


Remove any gasket material from the LTA water outlet connection, cover plate, and LTA thermostat housing. Use a gasket scraper.

Clean the LTA water outlet connection and cover plate with solvent.

Dry with compressed air.

Inspect the LTA water outlet connection and cover plate for the following:

- Cracks
- Damage to sealing surfaces
- Pitting and corrosion.

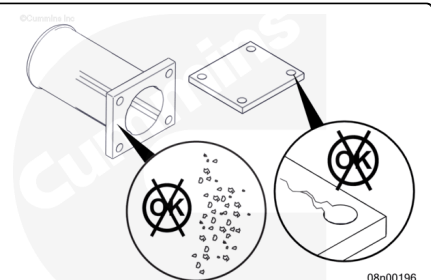


Replace any damaged components.

## Install

Install the LTA water outlet connection, cover plate, and capscrews. Use new gaskets.

Tighten the capscrews.

**Torque Value:** 65 n•m [ 48 ft-lb ]

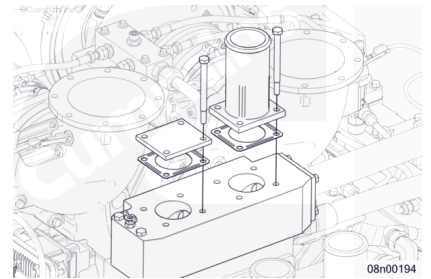

## Finishing Steps

### **⚠ WARNING ⚠**

**Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.**

- Connect the radiator hoses to the LTA water outlet connection. See equipment manufacturer service information.
- Fill the cooling system. Refer to Procedure 008-018 in Section 8.  
(/qs3/pubsys2/xml/en/procedures/57/57-008-018.html)
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine to 85°C [185°F] coolant temperature. Check for leaks.