

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools.

Additional Service Items

- Mallet
- Mandrel.

Preparatory Steps

WARNING

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

WARNING


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Drain the low temperature aftercooler (LTA) cooling system. Refer to Procedure 008-018 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>).
- Remove the thermostats from the LTA thermostat housing. Refer to Procedure 008-131 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-131.html>).

Remove

Remove the LTA thermostat seals from the housing.


Discard the seals.

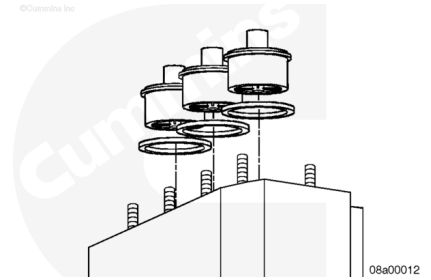

Install

Install the LTA thermostat seal in the seal bore. Use a mallet and a mandrel, or a socket with a diameter the same as the diameter of the seal case.

The seal **must** seat evenly and flush with the bottom of the bore.

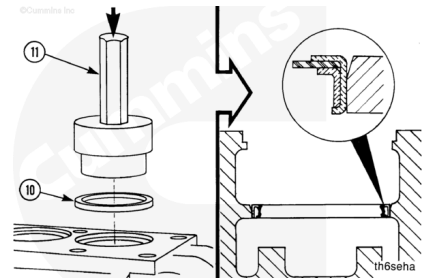

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Install the LTA thermostats into the LTA thermostat housing. Refer to Procedure 008-131 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-131.html>).
- Fill the cooling system. Refer to Procedure 008-018 in Section 8 (</qs3/pubsys2/xml/en/procedures/57/57-008-018.html>).
- Operate the engine to 85°C [185°F] coolant temperature. Check for leaks.

