



Trainings ▾

Remove


Remove nuts and bolts.

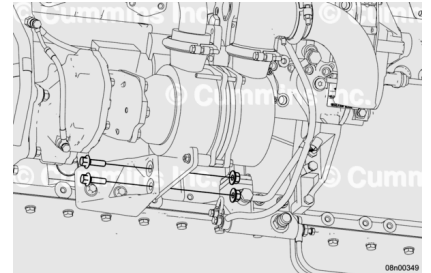

Remove capscrews and low-temperature aftercooler (LTA) water pump support.

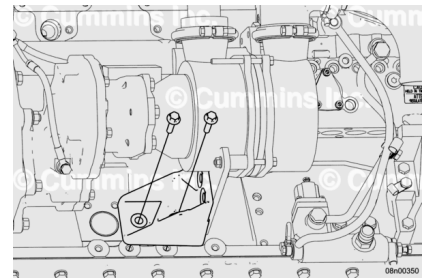


Remove nuts, spacers and LTA water pump bracket.

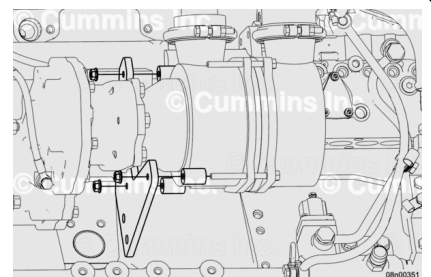

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

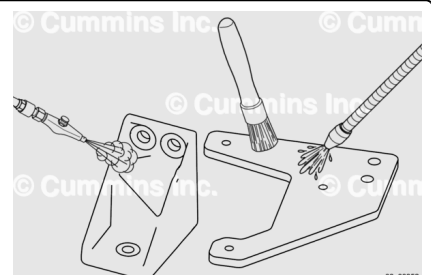

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the LTA water pump bracket and support.
Dry with compressed air.

Inspect for Reuse

Inspect LTA water pump bracket and support for cracks pitting or other damage.


Replace any damaged components.

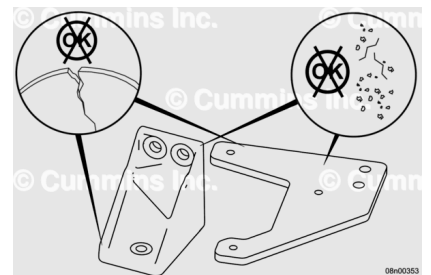

Install


Install spacers, LTA water pump bracket and nuts.

Hand tighten nuts.

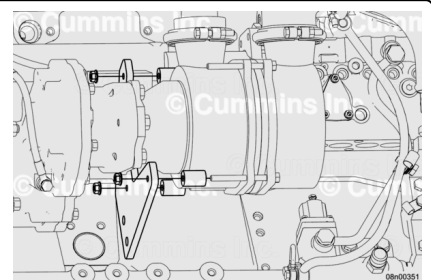


Install LTA water pump support and capscrews.

Torque Value: 65 n•m [48 ft-lb]

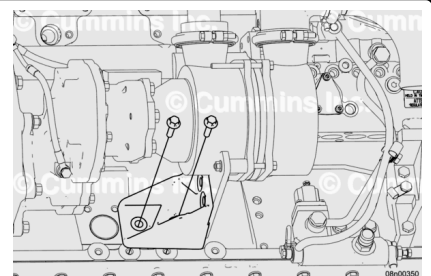

Install bolts and nuts.

Torque Value: 113 n•m [83 ft-lb]

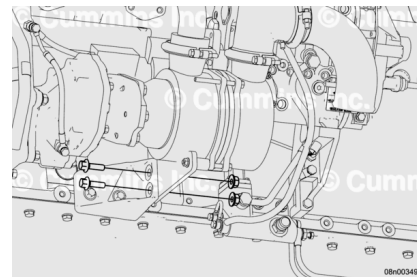

Tighten nuts on LTA water pump bracket.

Torque Value: 33 n•m [24 ft-lb]

