

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Contact cleaner, Part Number 3824510, or equivalent

Additional Service Items

- No additional service items required.

Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the belt guard, if equipped. Refer to Procedure 008-001 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-001.html>)
- Remove the charging system alternator drive belt. Refer to Procedure 013-005 in Section 13. (</qs3/pubsys2/xml/en/procedures/57/57-013-005-tr.html>)

Remove

Remove the charging system alternator drive pulley.

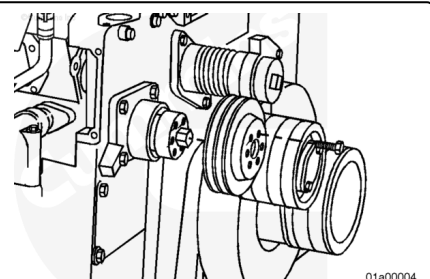


Clean and Inspect for Reuse

Remove any buildup in the charging system alternator drive pulley grooves.

Clean with contact cleaner, Part Number 3824510, or equivalent.

Inspect for cracks and other damage.


Replace if damage is found.

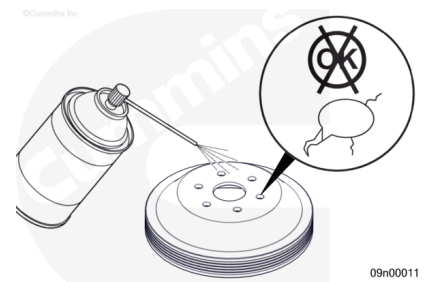

Install

Install the charging system alternator drive pulley.

Torque Value: 31 n•m [23 ft-lb]

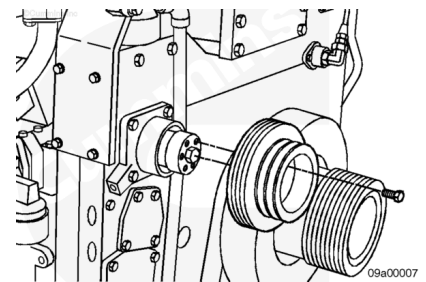

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the charging system alternator drive belt. Refer to Procedure 013-005 in Section 13. (</qs3/pubsys2/xml/en/procedures/57/57-013-005-tr.html>)
- Install the belt guard, if equipped. Refer to Procedure 008-001 in Section 8. (</qs3/pubsys2/xml/en/procedures/57/57-008-001.html>)
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for proper operation.

