

Trainings ▾


Preparatory Steps

- Remove the hydraulic pump drive. Refer to Procedure 009-016 in Section 9.
(/qs3/pubsys2/xml/en/procedures/57/57-009-016-tr.html)




Disassemble


Remove the drive cover, if applicable.

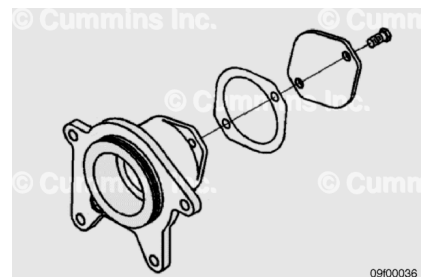

Use a two-jaw puller to carefully remove gear from shaft.

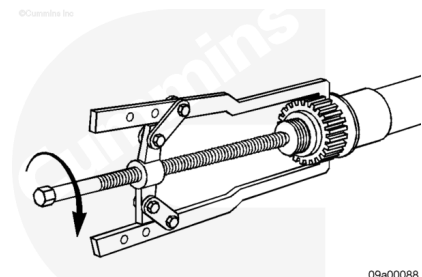


Remove shaft (7), two thrust bearings (2, 6), and two bushing (3, 4), from the housing (4).

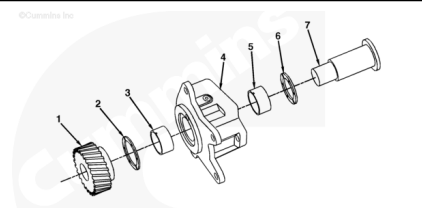

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

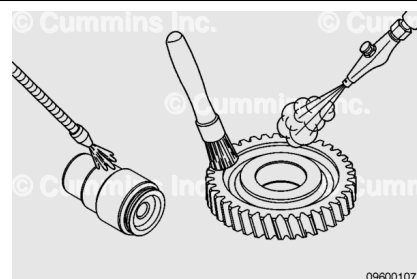

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the shaft and gear with solvent.

Dry with compressed air.


Check the gear teeth and gear bore for damage.

Replace the gear if damaged.

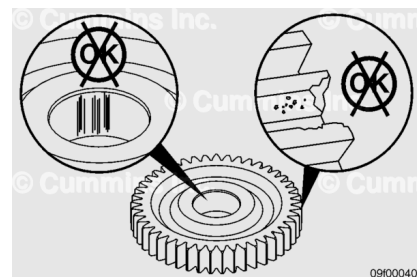


Measure the inside diameter of the gear if it is to be reused.

Hydraulic Pump Drive Gear Inside Diameter		
mm		in
41.000	MIN	1.614
41.025	MAX	1.615

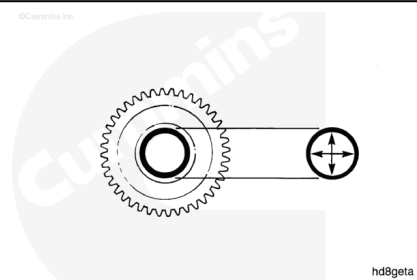

Inspect the shaft in the gear fit area for fretting, burrs, or other damage.

Clean burrs with a piece of emery cloth.

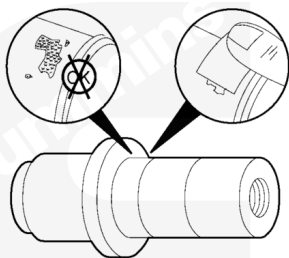


09600059

Measure the shaft diameters.

Hydraulic Pump Drive Shaft Diameters

	mm		in
A	47.931	MIN	1.887
	47.950	MAX	1.888
B	41.070	MIN	1.617
	41.095	MAX	1.618

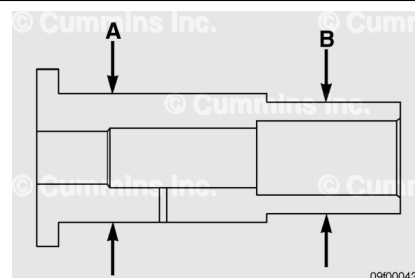


09600043

If the diameters are **not** within specification, the shaft **must** be replaced.


Assemble

Coat two bushings with engine oil and insert them into housing at a recessed length of 0.991 mm [0.039 in] from each end.

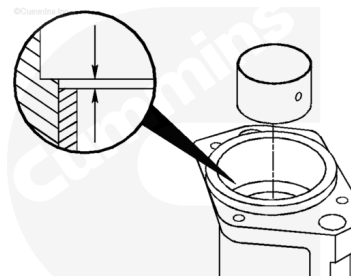


09a00074

Coat both thrust bearings in engine oil and place one over shaft. Place shaft through housing. Place second thrust bearing over shaft.

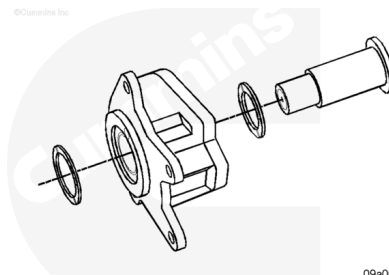


09a00061

Press the gear onto the shaft. A spacer may be needed to support the bottom of the shaft.

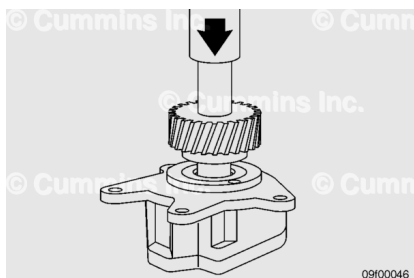

Replace the drive cover, if applicable.

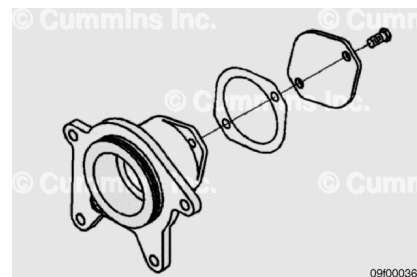

Finishing Steps

- Install the hydraulic pump drive. Refer to Procedure 009-016 in Section 9.
(/qs3/pubsys2/xml/en/procedures/57/57-009-016-tr.html)
- Operate the engine and check for leaks and proper operation.

