

Trainings ▾


Maintenance Service

⚠ CAUTION ⚠

Holes, loose end seals, dented sealing surfaces and other forms of damage render the cleaner inoperative and require immediate element replacement.

⚠ CAUTION ⚠

Cleaning an air filter element with excessive compressed air pressure can damage the filter media and lead to engine damage.

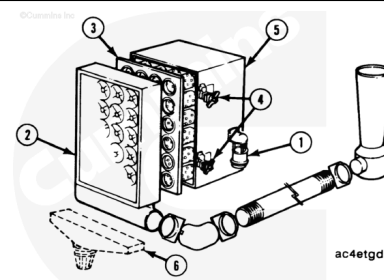

Note : Refer to the air filter manufacturer's instructions for element cleaning instructions. If manufacturer's instructions are **not** available, replace the element.

Loosen the wing nuts (4) on the air cleaner housing (5) to remove the precleaner panel with the dust bin (6). To remove the precleaner panel (2) equipped with an exhaust aspirator, loosen the U-bolt clamp securing the precleaner to the aspirator tubing.

Remove the dirty Pamic cartridge (3), by inserting your fingers in the cartridge opening (loosen all four corners of the cartridge, one at a time) and pulling it straight out.

With the larger cartridge, it might be necessary to break the seal along the edges of the cartridge. After the seal has been broken, pull the cartridge straight out and slightly up so the cartridge will clear the sealing frame and edges of the air cleaner housing.

Clean the precleaner openings (2) of all soot, oil film and any other objects that can become lodged in the openings.

Remove any dust or dirt in the lower portion of the precleaner and aspirator tubing. Inspect the inside of the air cleaner housing for foreign material.

Inspect the dirty cartridge for soot or oil. If there is soot inside the Pamic tubes, check for leaks in the engine exhaust system, exhaust blow-back into the air intake and exhaust from other equipment. If the cartridge appears oily, check for fumes escaping from the crankcase breather. Excessive oil mist shortens the life of any dry-type cartridge. Troubleshooting at this point can appreciably lengthen new cartridge life.

Inspect clamps and flexible hose or tubing to make sure all fittings are air tight on cleaners with exhaust aspirators.

The precleaner dust bin (6) is self-cleaning.

Inspect the new filter cartridge for shipping damage before installing.

To install a new cartridge, hold the cartridge (3) in the same manner as when removing it from the housing. Insert the clean cartridge into the housing, avoiding hitting the cartridge tubes against the sealing flange on the edges of the air cleaner housing.

The cleaner requires no separate gaskets for seals. Make sure that the cartridge seats properly within the cleaner housing. Firmly press all edges and corners of the cartridge with your fingers to effect a positive air seal against the sealing flange of the housing. The cartridge **must not** be pounded or pressed in the center to seal.

Replace the precleaner panel (2) and tighten the wing nuts (4) by hand. For final tightness turn the wing nuts 1 to 1 1/2 turns with a small adjustable wrench. Do **not** tighten too much. On a precleaner with an exhaust aspirator, assemble the aspirator tube to the precleaner panel and tighten the U-bolt.

Care **must** be taken to keep the cleaner face unobstructed.