


Trainings ▾

General Information

The air starting motor system (tanks, line sizes, and valves) is designed and installed by the original equipment manufacturers and the starting motor suppliers. Refer any questions about the air starting systems to the manufacturer.

Do **not** operate the air starting motor with air pressure below specifications.

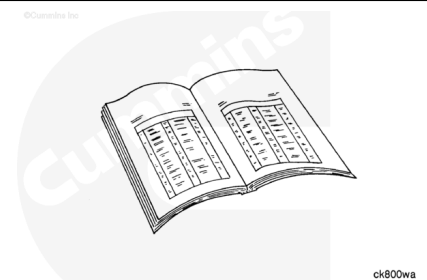

Measurements			
		kpa	psi
	Minimum	480	70

Maintain the air compressor according to the recommendations outlined in the manual.

For maximum efficiency, the hoses, tubes, and lines **must not** leak.

Refer to the original equipment manufacturers' and starting motor manufacturer's manuals for specific information regarding the starting motors, valves, and systems.