


Trainings ▾

Remove

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the battery. To avoid arcing remove the negative (-) battery cable first and attach the negative (-) battery cable last.

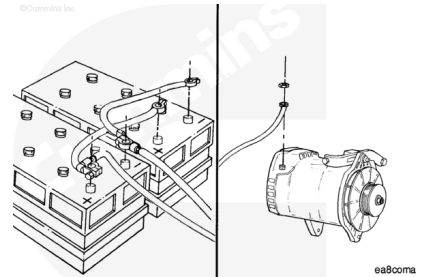

Disconnect the batteries and the air supply from the air starter to prevent accidental starting.

Disconnect the wiring from the alternator.


Note : The two-piece alternator bracket is used on 1996 and earlier engines.

Loosen both jam nuts and the alternator mounting capscrews.

Note : The lower jam nut has left-handed threads.

Turn the adjusting screw to relieve the belt tension.

Remove the alternator belt.

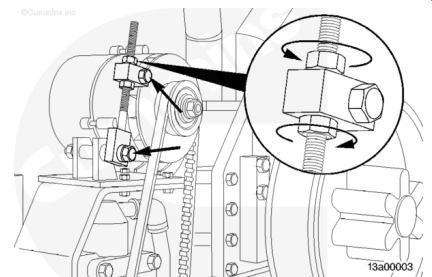


Note : The present design is a one-piece alternator bracket.

Loosen both jam nuts and the alternator mounting capscrews.

Note : The lower jam nut has left-handed threads.


Turn the adjusting link to relieve the belt tension.

Remove the alternator belt. Refer to Procedure 013-005 (</qs3/pubsys2/xml/en/procedures/57/57-013-005.html>).

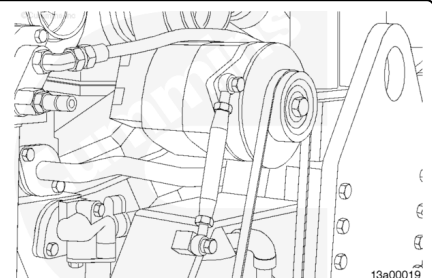

Inspect for Reuse

Inspect the belt for cracks, glazing, tears, or cuts. The belt **must** be replaced if damaged.

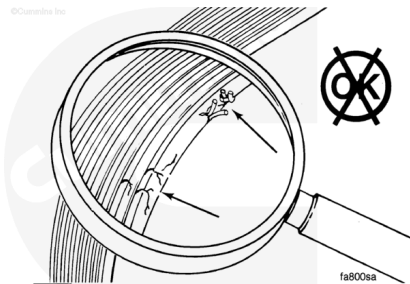


Install

⚠ CAUTION ⚠

Do not attempt to pry the belt on the pulley. Damage to the pulley or alternator can occur.


Install the belt. Turn the adjusting screw **counterclockwise** to shorten the link if necessary.

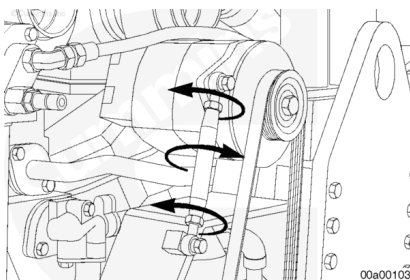

Turn the adjusting screw **clockwise** to tighten the belt. Tighten the belt. Refer to Drive Belt Tension in Section V.

Use a (Burroughs) belt tension gauge to measure the belt tension.


The QST30 uses a five-rib K belt.

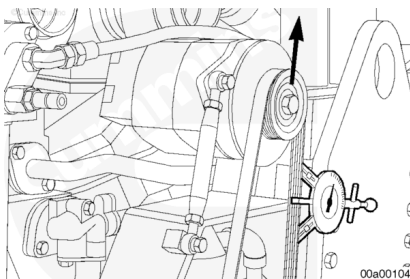

Note : The lower jam nut has left-handed threads.

Tighten the jam nuts on the adjusting screw.


Tighten the adjusting link and alternator mounting capscrews.

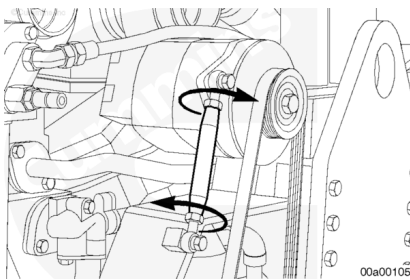

Jam Nuts	61 n.m	[45 ft-lb]
Alternator Mounting Capscrews	108 n.m	[80 ft-lb]

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To avoid arching, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

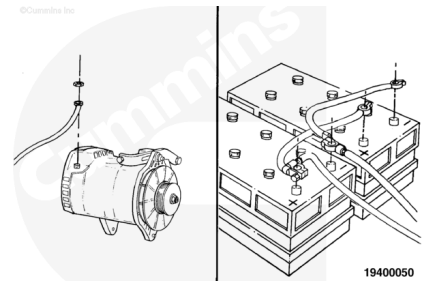


Connect the wiring to the alternator. Refer to Procedure 013-001 (/qs3/pubsys2/xml/en/procedures/57/57-013-001.html).

Connect the batteries and air supply line to the air starter. Refer to Procedures 013-007 (/qs3/pubsys2/xml/en/procedures/57/57-013-007.html) and 013-020 (/qs3/pubsys2/xml/en/procedures/57/57-013-020.html).

Adjust


Loosen the alternator and adjusting link mounting capscrews. Refer to Procedure 013-005 (/qs3/pubsys2/xml/en/procedures/57/57-013-005.html).

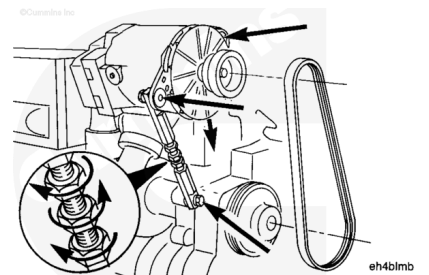

Turn the adjusting screw **clockwise** to tighten the belt. Tighten the belt. Refer to Drive Belt Tension in Section V.


Use a (Burroughs) belt tension gauge to measure the belt tension.

The QST30 uses a five-rib K belt.

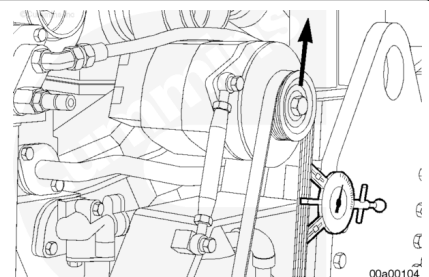

Use Burroughs® belt gauge, and check the belt tension again to make sure the tension is correct.

n		lbf
445	MIN	100
620	MAX	139

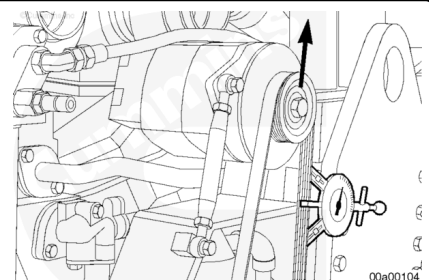

Last Modified: 08-Jul-2002
